

Instructions for use
KETTLE

Návod k obsluze
VARNÁ KONVICE

Návod na obsluhu
VARNÁ KANVICA

Használati útmutató
VÍZFORRALÓ

Instrukcja obsługi
CZAJNIK

Korisnički priručnik
KUHALO

Korisničko uputstvo
ČAJNIK

Εγχειρίδιο Χρήσης
ΒΡΑΣΤΗΡΑΣ

KETTLE



BM 500 Charlotta | **BM 501 Victoria** | **BM 502 Anna**

KETTLE

TABLE OF CONTENTS

5	Catler Recommends Safety First
9	Meet Your Kettle
10	Using your kettle
12	Care and Cleaning
13	Troubleshooting



Congratulations

on the purchase of your new kettle.

CATLER RECOMMENDS SAFETY FIRST

We understand the importance of safety and that is why we put your safety first from the initial design concept to the production itself. Nevertheless, we ask you to be careful when using electrical equipment and to observe the following guidelines:

- This appliance may be used by children aged 8 years and older, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential dangers.
- User cleaning and maintenance must not be performed by children unless they are older than 8 years of age and kept under supervision.
- Keep the appliance and its supply out of the reach of children under 8 years of age.
- Appliances may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.

- This appliance is designed for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in stores, offices and other workplaces;
 - spaces in agriculture;
 - hotel, motels and other residential areas for guests;
 - bed and breakfast establishments.
- Do not submerge the kettle or its base in water or another liquid.
- If the kettle is overfilled, hot water may splash out.

 **WARNING:** Do not open the lid while the water is boiling.

ATTENTION: Position the lid so that the steam is directed away from the handle.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.

ATTENTION: Make sure the appliance is switched off before removing it from the base.

 **WARNING:** Avoid spilling on the plug.

- Rinse the inside of the kettle with clean water. Follow the cleaning instructions in the “Cleaning and Maintenance” section.



WARNING: Incorrect use may lead to injury.

- The surface of the heating element contains residual heat after use. Do not touch hot surface.
- Before first use, make sure that the voltage in your power socket matches the nameplate voltage on the unit bottom. In case of any doubt, please contact a qualified electrician.
- Before operating your appliance, read all the instructions carefully and store them in a safe place for possible future reference.
- Before using the appliance for the first time, please remove all packaging and ad stickers and discard them in an environmentally safe manner. Check the appliance for any defects. Under no circumstances should you use a damaged appliance or an appliance with a damaged power cord etc.
- To eliminate the risk of small children suffocating, remove the protective cover of the power plug from this appliance and dispose of it safely.
- This appliance has been designed only for boiling drinking water. Never use the appliance to warm up other liquids or food. Use the appliance only for the purposes for which it has been designed. Do not use it outdoors.
- Always put the kettle on a stable, even and dry surface. Do not place the kettle on windowsills, sink drip tray or on unstable surfaces. Do not operate the appliance on the edge of a desktop or a table.
- Do not put the kettle on or the vicinity of any devices and equipment that generate heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Do not place the appliance near walls, curtains or other substances sensitive to heat or steam. Please observe a minimum distance of 20 cm from such surfaces.
- Use the kettle only with the base designed for and supplied with this type of kettle. Do not use the base supplied with this kettle for other types of kettles.
- Do not use this appliance with a programmable switch, timer switch or any other device that automatically switches the appliance on.
- Always remove the kettle from its base before filling.
- When filling the kettle, make sure that the water level covers at least the minimum level mark but doesn't exceed the maximum level mark.
- Before turning the kettle on, make sure that the lid is closed properly. Do not open or otherwise handle the lid while water is boiling.
- To lift and/or carry the kettle, please use the handle.
- Do not put any subjects on the lid.
- Never touch the appliance with wet or damp hands.
- Do not leave the appliance unattended while in operation.


- Before removing the kettle from its base, make sure that it has been turned off.
- The kettle heats up during use and may remain hot after use. Therefore, take extra care to avoid burns or injuries.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Always turn the kettle off and unplug from the power socket if you leave it unattended, if it's not to be used or before moving or cleaning.
- When disconnecting the kettle from the mains socket, always pull the plug, not the power cord. Otherwise, damage to the power cord or the socket could occur.
- A connected power outlet must be easily accessible for possible sudden disconnection. Before connecting your appliance to a power outlet and turning it on, make sure it's fully and correctly assembled. Follow the instructions provided in this user's manual.
- Do not wash the kettle, base, mains cord and plug under running water and do not immerse them in water or any other liquid.
- Do not use rough abrasive or caustic detergents to clean the appliance.
- Keep both inner and outer surface of the appliance clean. Follow the cleaning instructions provided in this user's manual.
- Do not store or use any explosive and/or flammable substances inside or in the vicinity of this appliance, such as flammable gas sprays.

IMPORTANT SAFETY INSTRUCTIONS FOR USING ELECTRICAL EQUIPMENT

- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or counter top or allow it to touch a hot surface or to become tangled up. Do not put heavy objects on the power cord.
- For safety reasons, we recommend to connect the appliance in an independent electrical circuit separated from other appliances. Do not use adapters or extension cords to connect the appliance to a mains socket.
- To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.
- We recommend that you check your appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug is defective. Any repairs or adjustments must be performed by the nearest Catler authorised service centre.
- Any maintenance other than routine cleaning must be entrusted to an authorised Catler service centre.
- We recommend installing a residual current device (standard safety switches in your power outlet) to provide a higher level of protection when using the appliance. It is recommended that the RCD (with a residual operating current not exceeding 30 mA) be installed in the electrical circuit to which the appliance will be connected. For further expert advice, please contact your electrician.

Instructions are also available at www.catler.eu.

MEET YOUR KETTLE

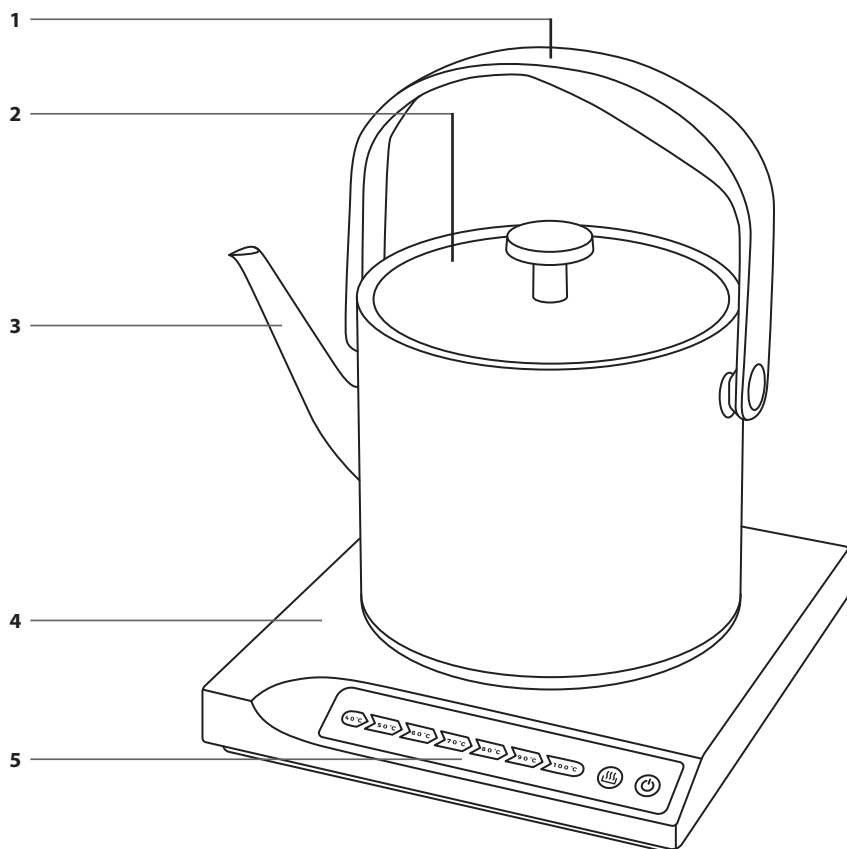

1. Handle
2. Lid
3. Spout
4. Base
5. Control panel

USING YOUR KETTLE

BEFORE FIRST USE

Before first use, remove all packaging and advertising labels/stickers from the appliance.

Before using the kettle for the first time, allow the kettle to boil clean water. Fill the kettle with clean water, bring to a boil and then pour the water out. Repeat this procedure 3 to 4 times. The kettle is then ready for use. Your kettle will only operate correctly if placed on its base connected to an electric outlet. As soon as the water boils, the kettle will switch off automatically.

USING YOUR KETTLE

To fill the kettle with water, remove it from its base and remove the lid. Fill the kettle with the required amount of water. Do not fill the kettle below the minimum or above the maximum level mark. Lack of water would lead to turning the kettle off before boiling. If the kettle is overfilled, the boiling water might splash out.

Put the lid on and make sure it is tightly closed. Place the kettle on its base. Insert the mains cord plug into a power socket. A short beep sounds and all controls light up briefly. The  button will then light up red and the kettle will switch to standby mode.

Press the  button briefly to put the kettle into active mode.

Press the desired temperature button (40°C, 50°C, 60°C, 70°C, 80°C, 90°C or 100°C) and then press the  button.

NOTE:

To heat the water to 100°C, press the  button after switching the kettle to active mode.

The water in the kettle starts to heat up. The  button will flash briefly. As the water heats up, the temperature control buttons on the control panel will gradually light up. As soon as the water boils, the kettle will switch off automatically (two beeps). Take the kettle from the base and pour water in cup, mug or other container. To boil water repeatedly, it's necessary to wait a few seconds for the heating element to cool down.

Do not start or use the kettle without water. Incorrect use of the appliance may negatively affect its lifetime.

If the kettle is not to be used, unplug the power cord from the socket. You may store the kettle on the base if it's not to be used.



WARNING!

NEVER FILL THE KETTLE
IF IT IS LOCATED ON THE

BASE.

NOTE:

This kettle should be used only with the supplied base. When pouring out water from the kettle, be careful to avoid scalding with hot water. Do not pour water too fast.



WARNING!

THIS APPLIANCE HAS BEEN DESIGNED ONLY FOR BOILING DRINKING WATER. DO NOT USE THIS APPLIANCE TO COOK OTHER LIQUIDS OR FOODS. BEFORE TURNING THE KETTLE ON ALWAYS MAKE SURE THAT THE LID IS FIRMLY CLOSED. DO NOT OPERATE THE LID RELEASE BUTTON WHILE THE WATER IS HEATING OR AFTER IT HAS FINISHED HEATING. THIS COULD CAUSE THE WATER TO SPLASH OUT. BEFORE OPENING THE LID, PLEASE EMPTY THE KETTLE.

KEEP WARM FUNCTION

This function keeps the water at the same temperature at which it was boiled for 30 minutes.

To enable the function, use the  button.

You can activate the temperature retention function in three ways:

1. Press the temperature button and then press the  button before starting the kettle.
2. Press the  button and then start the kettle to heat to 100°C. In this case, however, the kettle will keep the water at 90–95 °C.
3. Press the  button as soon as the water is boiling.

The kettle boils the water to the set temperature and then switches to the keep warm mode. During this time, the water will heat up to the set temperature, so the kettle will switch on and off.

You can cancel the temperature storage function by pressing the  button.

PREPARING TEA IN THE KETTLE

The kettle comes with a strainer so you can prepare your favourite tea directly in the kettle.

1. Fill the kettle with the required amount of water. Maximum to the  line.
2. Pour the tea leaves into the strainer and place the strainer in the teapot. Close the cover.
3. Set and boil the water to the desired temperature. Allow to infuse as needed.

You can also put the strainer into the kettle after boiling the water.

Clean the strainer after each use.

MUTING THE KETTLE

Press and hold the  and  buttons at the same time for a few seconds to turn off the sound of the kettle. Follow the same procedure to switch back on.

PROTECTION AGAINST EMPTY OPERATION

The kettle is equipped with a safety device to protect it against damage by overheating and operating with insufficient amount of/ without water. If you turn the kettle on by mistake with insufficient amount of water/no water inside, the safety device will cut off the power supply circuit automatically and turn the kettle off when a certain temperature is reached. You cannot turn the kettle back on at this moment. Allow the kettle to cool down.

The kettle can be turned back on once it has cooled down. The safety device will reset automatically. In order to increase the safety, the kettle is equipped with an additional thermal fuse. Should the safety device fail with subsequent overheating, the kettle will automatically and irreversibly turn off to prevent further damage. Should such condition occur, please contact an authorised service centre.

CARE AND CLEANING

Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool down properly.



WARNING!

DO NOT SPLASH WATER OR ANY OTHER LIQUID ONTO THE KETTLE OR ANY OF ITS PARTS OR ACCESSORIES.

DO NOT WASH THE KETTLE, BASE, MAINS CORD AND PLUG UNDER RUNNING WATER AND DO NOT IMMERSE THEM IN WATER OR ANY OTHER LIQUID.

NOTE:

Do not use sharp objects, chemicals, thinners, petrol or other similar substances.

CLEANING THE OUTER CASE OF THE KETTLE

To clean the kettle's outer surface, please use a damp cloth; to polish, use a dry cloth.

TEA STRAINER

Wash the tea strainer after each use. Rinse it under clean running water and wipe with a dry cloth.

NOTE:

The base heating element is made of high grade stainless steel. Brown stains that may appear during use are mineral deposits from the boiled water. This is no corrosion in any case.

REMOVING MINERAL DEPOSITS

Tapped water may contain minerals that may deposit inside the kettle and water gauge and lead to colouration after some time. To remove the deposits, proceed as follows: Fill your kettle to 2/3 of its level with 1 portion of vinegar and 2 portions of water. Boil the solution and leave stand in the kettle. Empty your kettle and then boil clean water twice. The kettle is then ready for further use.

STORAGE

Before storage, make sure that the kettle is turned off, clean and dry. Check that the lid is closed properly. Wrap the cord around the bottom of the base. Store your kettle in a vertical position and never put anything on the lid.

TROUBLESHOOTING

This chapter describes the most common problems you may encounter while using this appliance. If your problem is not listed here or is listed and persists, stop using the appliance, unplug the power cord from the power outlet and contact an authorised service centre.

UNDER NO CONDITION SHOULD YOU REPAIR OR DISASSEMBLE THE APPLIANCE YOURSELVES. THE APPLIANCE CONTAINS NO USER SERVICEABLE PARTS.

Problem	Meaning	Solution
The kettle did not switch on.	The power cable plug is not inserted in the socket.	Insert the plug to the socket.
	The voltage in the socket does not match the voltage of the kettle.	Check the voltage in your mains socket.
The kettle switched off before reaching the set temperature.	The inner space is clogged with limescale.	Clean the kettle.
The kettle does not turn off.	The lid is not fitted or is fitted incorrectly.	Put the lid on correctly.
The kettle cannot be switched on.	The kettle is too hot.	Allow the kettle to cool down.
The control buttons don't work.	Overheating protection has been activated.	Allow the kettle to cool down.

If the problem is not listed above or persists, turn off the kettle, disconnect the plug from the mains socket and contact an authorised service centre.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product meets all the basic requirements of the applicable EU directives.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Manufacturer's address: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01

Notes