

D-Link[®]



EAGLE PRO AI

N300 SMART ROUTER

R03



Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

| Hardware | Revision | Date | Description |
|----------|----------|------------|---|
| A1 | v1.00 | 2021/10/08 | Initial release |
| A1 | v1.01 | 2021/11/15 | New cover, Removal of Parental Control notice |

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2021 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

ErP Power Usage

This device is an Energy Related Product (ErP) with High Network Availability (HiNA), and automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted.

| | |
|------------|------------------------|
| R03 | Network Standby: 1.32W |
|------------|------------------------|

Table of Contents

| | | | |
|---|-----------|--|----|
| Product Overview | 1 | IPv4 - PPTP | 32 |
| Package Contents..... | 1 | IPv4 - L2TP | 34 |
| System Requirements | 2 | IPv4 - DS-Lite | 36 |
| Introduction | 3 | Internet - IPv6..... | 37 |
| Features..... | 3 | IPv6 - Auto Detection | 38 |
| Hardware Overview | 4 | IPv6 - Static IPv6 | 40 |
| LED Indicators | 4 | IPv6 - Auto Configuration (SLAAC/DHCPv6) | 42 |
| Back Panel | 5 | IPv6 - PPPoE | 45 |
| Installation | 6 | IPv6 - 6rd | 49 |
| Before you Begin..... | 6 | IPv6 - Local Connectivity Only | 51 |
| Wireless Installation Considerations..... | 7 | Internet - VLAN | 52 |
| Setup..... | 8 | Wireless | 54 |
| EAGLE PRO AI Setup | 9 | Guest Zone | 57 |
| Hardware Setup | 10 | Network..... | 59 |
| Setup Wizard | 13 | D-Link Cloud..... | 61 |
| Configuration | 20 | Operation Mode..... | 62 |
| Home | 21 | Features..... | 63 |
| Internet..... | 22 | Parental Control | 63 |
| R03 | 23 | QoS Engine..... | 66 |
| Connected Clients | 24 | Firewall | 68 |
| Settings | 26 | Firewall Settings - IPv4/IPv6 Rules..... | 70 |
| Wizard | 26 | Port Forwarding | 72 |
| Internet - IPv4..... | 27 | Port Forwarding - Virtual Server..... | 74 |
| IPv4 - Dynamic IP (DHCP)..... | 28 | Static Routes - IPv4..... | 76 |
| IPv4 - Static IP | 29 | Static Routes - IPv6..... | 77 |
| IPv4 - PPPoE | 30 | Dynamic DNS | 78 |
| | | Management..... | 80 |


| | | | |
|---|------------|------------------------------------|------------|
| Time & Schedule - Time | 80 | Wall Mounting | 121 |
| Time & Schedule - Schedule | 81 | Regulatory Statements | 122 |
| System Log | 82 | | |
| System Admin - Admin | 84 | | |
| System Admin - System | 85 | | |
| Upgrade | 86 | | |
| Statistics | 87 | | |
| EAGLE PRO AI | 88 | | |
| Voice Control..... | 92 | | |
| Link D-Link Cloud Service with Other Services | 93 | | |
| Amazon Alexa Setup | 98 | | |
| Amazon Alexa Voice Commands | 101 | | |
| The Google Assistant Setup..... | 102 | | |
| Google Assistant Voice Commands | 104 | | |
| Connect a Wireless Client to your Router | 105 | | |
| WPS Button..... | 105 | | |
| Windows® 10 | 106 | | |
| Windows® 8 | 107 | | |
| Windows® 7..... | 109 | | |
| Troubleshooting | 111 | | |
| Wireless Basics | 113 | | |
| Networking Basics | 117 | | |
| Wireless Security | 119 | | |
| Technical Specifications | 120 | | |

Product Overview

Package Contents




N300 Smart Router

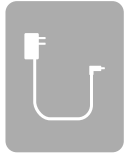

Power Adapter (12V, 1A)



Ethernet Cable (RJ45, 1m)

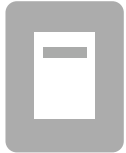

Quick Installation Guide

If any of the above items are missing or damaged, please contact your local reseller.

Note: *Using a power supply with a different voltage rating than the one included with the router will cause damage and void the warranty for this product.*

System Requirements

| | |
|---|--|
| Network Requirements | <ul style="list-style-type: none">• An Ethernet-based cable or DSL modem• IEEE 802.11 n/g/b wireless clients• 10/100 Mbps Ethernet |
| Web-based Configuration Utility Requirements | <p>Computer with the following:</p> <ul style="list-style-type: none">• Windows®, Macintosh, or Linux-based operating system• An installed Ethernet adapter <p>Browser Requirements:</p> <ul style="list-style-type: none">• Internet Explorer 11 or higher• Firefox 28 or higher• Safari 6 or higher• Chrome 28 or higher |
| EAGLE PRO AI APP Requirements | <ul style="list-style-type: none">• iOS® or Android™ device (Please refer to the description of the app's page to check whether your device is compatible.) |

Introduction

The R03 features performant, economical wireless connectivity for residential and small and medium-sized businesses. It offers 802.11n WLAN with speed up to 300 Mbps* as well as four on-board 10/100 Mbps Ethernet ports for wired connectivity. Furthermore, you enjoy Wi-Fi that is AI capable to help optimize your Wi-Fi environment. Featuring integrated voice assistance compatibility for Amazon Alexa and the Google Assistant, the R03 lets you control your network with voice commands.

Features

Smooth Wireless Connectivity with Backward Compatibility

With the support for spatial streams with dual antennas, the N300 Smart Router achieves maximum wireless speed of 300 Mbps. It delivers better range and speed than the 802.11b/g (up to 54 Mbps) while simultaneously supporting these standards.

AI-capable Wi-Fi with Beamforming Technology

The adoption of TX beamforming technology improves the signal quality. The innovative AI Wi-Fi Optimizer rates the overall condition of the wireless network and informs the administrators when the automatic optimization was in action in weekly reports.

Advanced Quality of Service Features

The Quality of Service (QoS) allows you to prioritize important traffic to ensure that real-time applications such as online games and media streaming are receiving optimal bandwidth.

Optimized Client Roaming

Being compliant with IEEE 802.11k/v, the R03 enables smooth and efficient client roaming, ensuring supported devices get the best available Wi-Fi signal. Thus, you will get a better Wi-Fi experience when you move from one place to another on your premises.

Easy Setup and Flexible Management

Managing your network has never been easier; just download the free EAGLE PRO AI for your mobile device and follow the on-screen step-by-step instructions to add your device. You can opt to use the web-based utility for basic configuration and advanced features. The support for industry-standard Wi-Fi Protected Setup (WPS) lets you create encrypted connections to new devices by pressing a button.

* Maximum wireless signal rate derived from IEEE Standard 802.11b, 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors - including volume of network traffic, building materials and construction, and network overhead - lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.


Hardware Overview

LED Indicators



| | | | |
|----------|-----------------|----------------|--|
| 1 | Internet | Solid White | The Internet connection is established. |
| | | Blinking White | The device cannot connect to the Internet. The device is performing firmware upgrade if the below Power LED is flashing at the same time. |
| 2 | Wireless | Solid White | The wireless functionality is enabled. |
| | | Blinking White | The device is transmitting data (flashing quickly). It is processing WPS (flashing slowly). |
| 3 | Power | Solid White | The device is on and the system is healthy. |
| | | Blinking White | The device is booting up or performing factory reset. The device is processing WPS if the above Wireless LED is flashing at the same time. The device is performing firmware upgrade if the above Internet LED is flashing at the same time. |

Back Panel

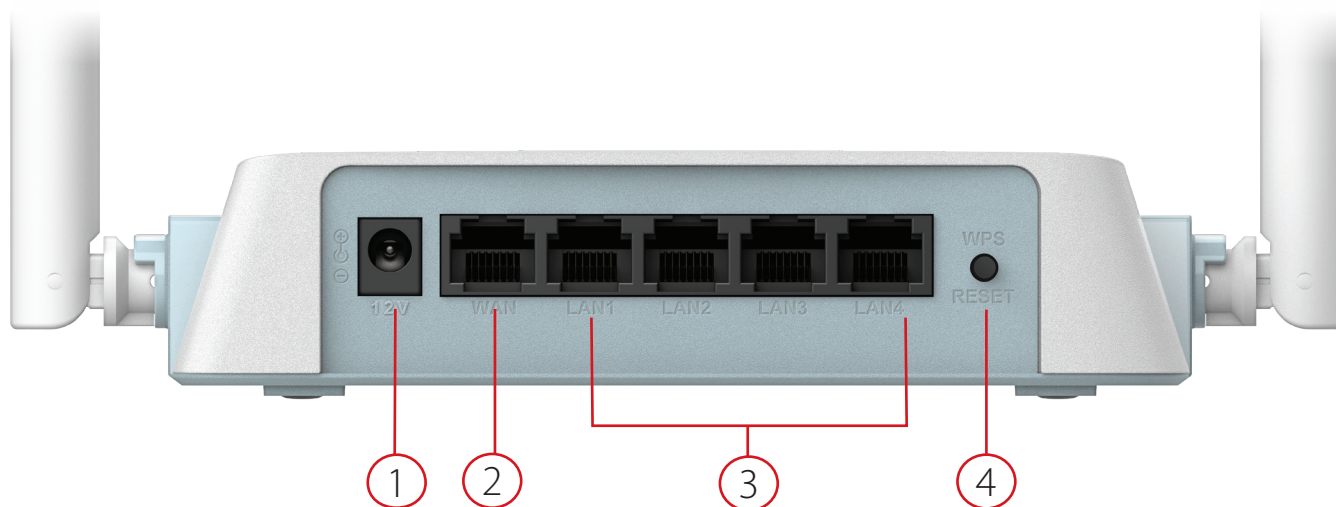

| | | |
|---|--------------------------------|--|
| 1 | Power Connector | Connector for the supplied power adapter. |
| 2 | 10/100 WAN Port | Use an Ethernet cable to connect your broadband modem to this port. |
| 3 | 10/100 LAN Ports (1- 4) | Connect Ethernet devices such as computers, switches, storage (NAS) devices, and servers. |
| 4 | Reset/WPS Combo Button | For WPS: Press shortly to start the WPS process and automatically create an encrypted connection to a WPS client. For device reset: Press longer and wait until all three front LEDs turn off (refer to LED Indicators on page 4), then release to reset the router to factory defaults. |

Installation

This section will walk you through the installation of your R03.

Before you Begin

- Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, attic, or garage.
- Configure the router with the computer that was last connected directly to your Internet connection. Verify that it is connected to the Internet before connecting additional devices.
- If your ISP provides you with a modem/router combo, you may set it to either router or extender mode depending on your usage requirements. Please contact your ISP or refer to the user manual for your modem/router device.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, then turn the modem back on. In some cases, you may need to call your Internet Service Provider (ISP) to change connection types (USB to Ethernet).
- If connecting to a DSL modem, make sure to have your DSL service information provided by your Internet Service Provider handy. This information is likely to include your DSL account's username and password. Your ISP may also supply you with additional WAN configuration settings which might be necessary to establish a connection.
- If you are connecting a considerable amount of networking equipment, it may be a good idea to take the time to label each cable or take a picture of your existing setup before making any changes.
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoET, BroadJump, or EnterNet 300 from your computer or you will not be able to connect to the Internet.

Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Setup

There are several ways you can configure your router to connect to the Internet

- **EAGLE PRO AI** - Use your compatible iOS or Android device to install and configure your router. Refer to **EAGLE PRO AI Setup** on page **9**.
- **Hardware Setup** - This section explains how to set up your R03. Refer to **Hardware Setup** on page **10**.
- **D-Link Setup Wizard** - This wizard will launch when you log in to the router using your browser for the first time. Refer to **Setup Wizard** on page **13**.
- **Manual Setup** - Log in to the router to manually configure your router. Refer to **Configuration** on page **20**

EAGLE PRO AI Setup

The EAGLE PRO AI allows you to install and configure your R03 from your compatible Android or iOS device.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1

Search and install the free **EAGLE PRO AI** available on the App Store or on Google Play.



EAGLE PRO AI




Step 2

Launch EAGLE PRO AI from the home screen of your device.



Step 3

Tap **Install New Device**. Scan the setup code on the device label on the bottom of the router. Follow the on-screen instructions to complete the setup.

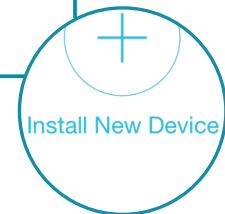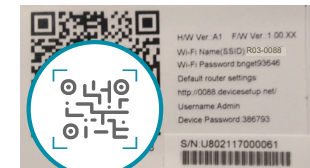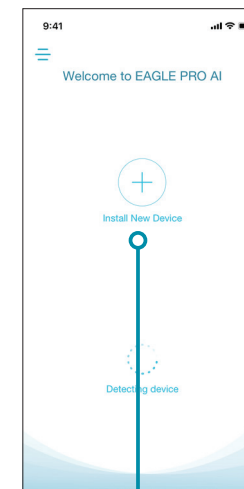

Hardware Setup

Step 1

Position your R03 near your Internet-connected modem. Place it in an open area for better wireless coverage.




Step 2

Turn off and unplug the power to your cable or DSL broadband modem. This is required. In some cases, you may need to turn it off for up to five minutes.




Step 3

Use the Ethernet cable to connect your modem to the port labelled **WAN** on the router.

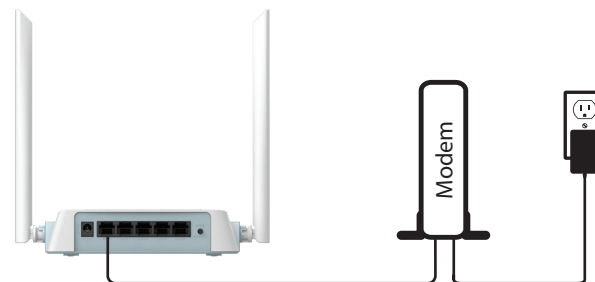


Step 4

Plug in the power and turn your modem back on and wait approximately one minute before proceeding with the procedure.

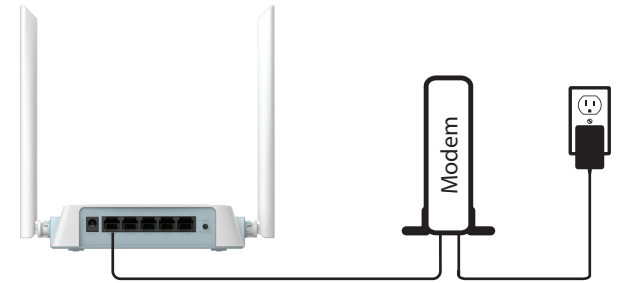


Step 5

Connect the supplied power adapter to the router and a power outlet, and wait approximately one minute until the Power LED on the front of the device becomes solid white.

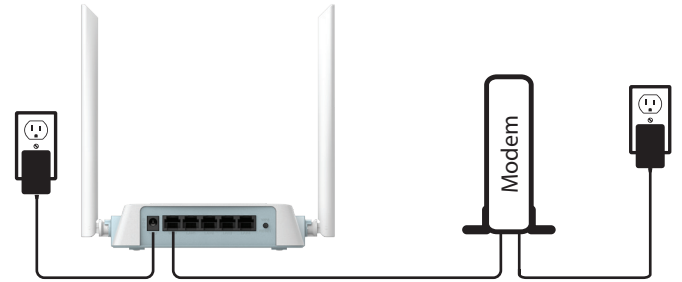


Step 6

If you are configuring the router wirelessly from a PC, connect to the Wi-Fi network name printed on the label attached to the bottom of your router. Refer to **Connect a Wireless Client to your Router** on page **105** for detailed instructions on Wi-Fi network connection. **Note:** The Wi-Fi name (SSID), Wi-Fi password, and device password are printed on the device label on the bottom of the device.

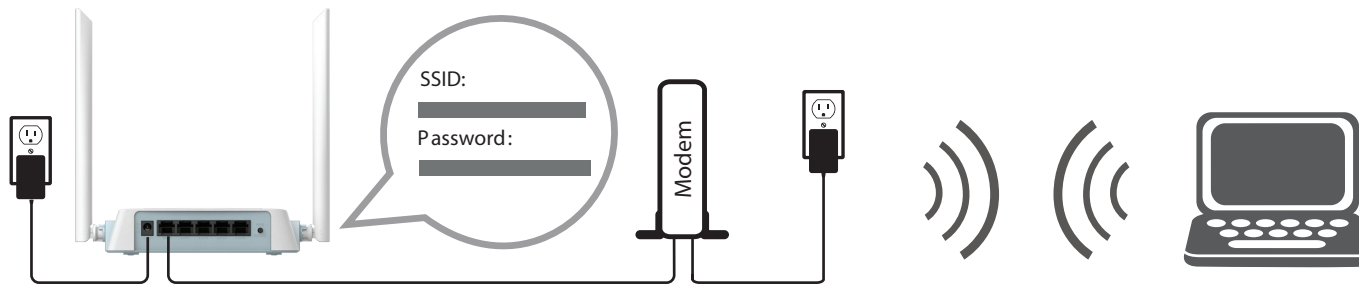

If you are configuring the router from a PC with a Ethernet connection, plug one end of the Ethernet cable into the port labelled LAN1 on the back of the router, and the other end into the Ethernet port on your computer.

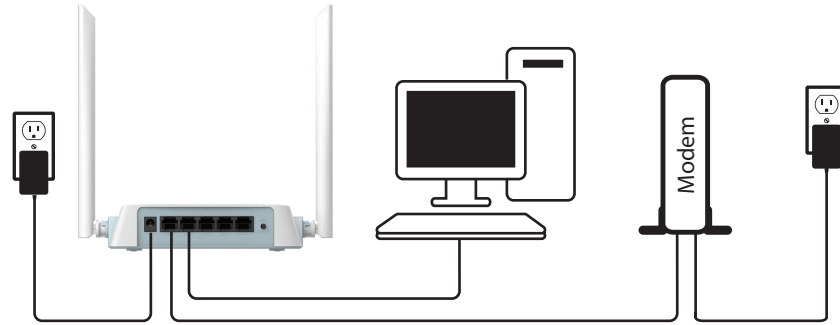


Step 7

If you are connecting to a broadband service that uses a dynamic connection (not PPPoE), you may be online already. Try opening a web browser and connecting to a website. If the website does not load, proceed to **Setup Wizard** on page **13**.


Setup Wizard

The setup wizard is designed to guide you through a step-by-step process of configuring your new R03 for Internet connection.

If this is your first time installing the router, open your web browser and enter **http://XXXX.devicesetup.net/** into the browser (XXXX represents the last 4 digits of the MAC address). Enter the **Admin Password** and click **Log In** to start the configuration process. The web address and device password for accessing the web configuration are printed on the device label on the bottom of the device.

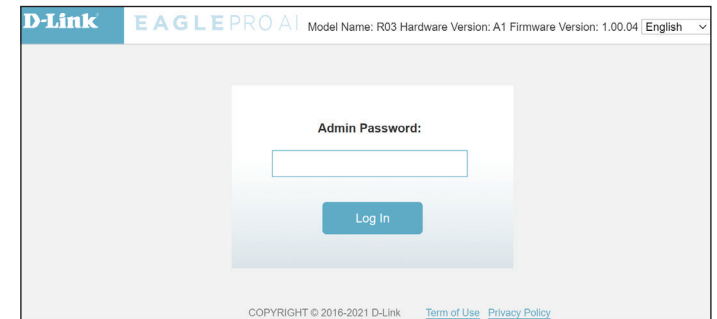


Agree to the **Terms of Use and Privacy Policy** before proceeding to the **Operation Mode** page.

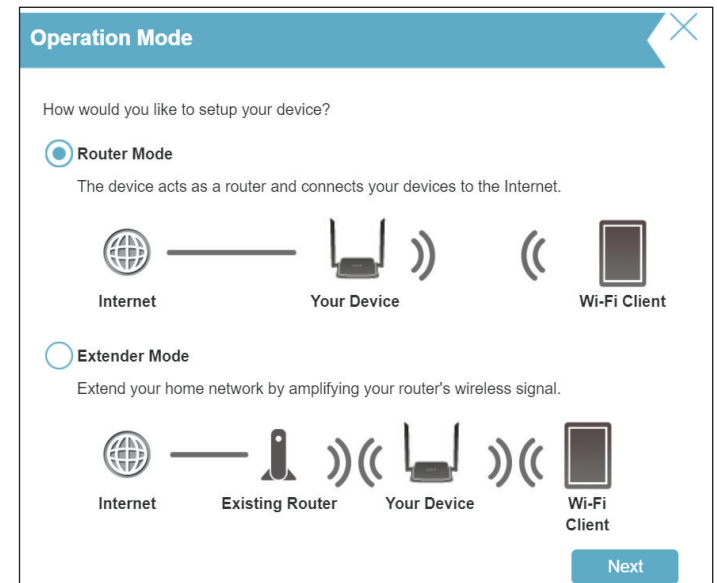


Depending on your selection for operation mode, follow the on-screen instructions to configure your new D-Link device and connect to the Internet.

Click **Next** to continue.

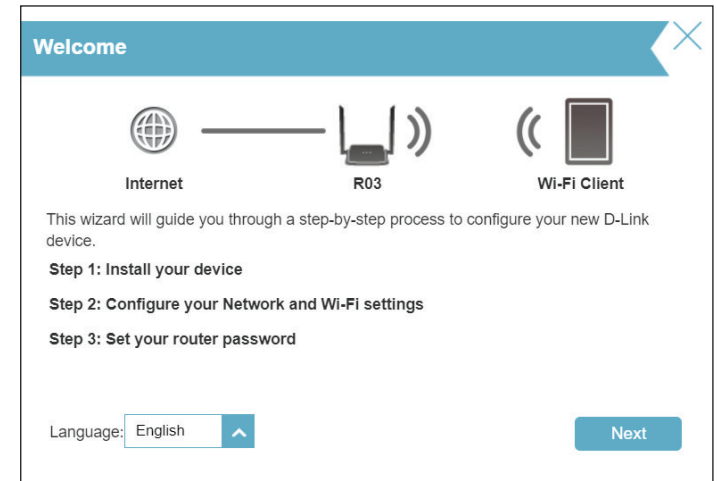


Connect the router and the modem with an Ethernet cable.

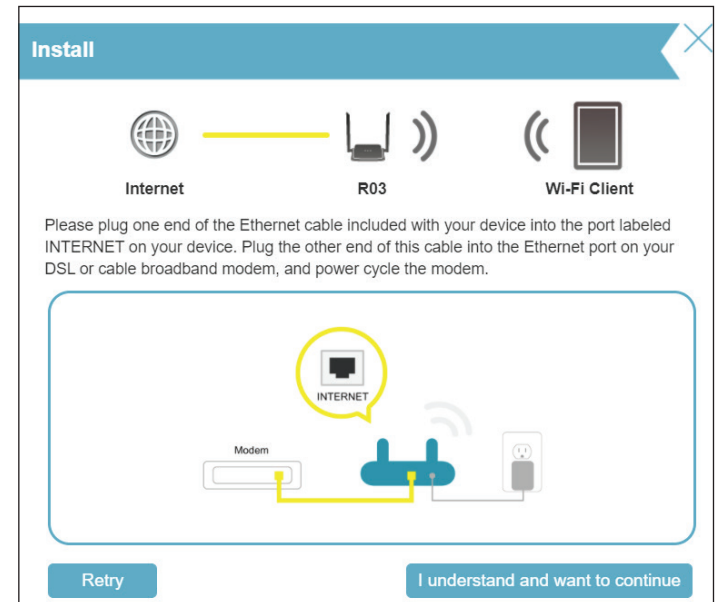

If the router does not detect a valid Internet connection, a list of connection types will be displayed. Select your Internet connection type (this information can be obtained from your Internet Service Provider).


Click **Next** to continue.

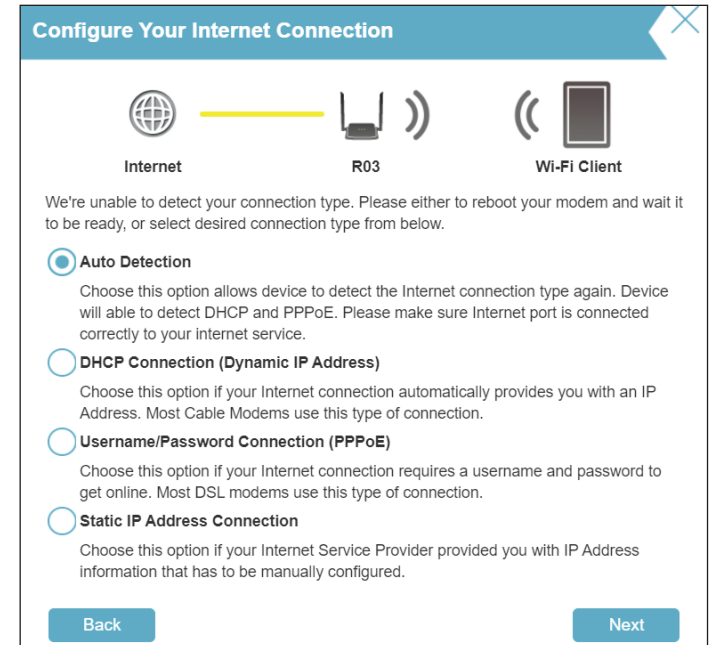

If the router detects or you select **PPPoE**, enter your PPPoE username and password. If you do not have this information, please contact your ISP.


Click **Next** to continue.

Note: *Be sure to remove all other existing PPPoE software from your computer. The software is no longer needed and will not work through a router.*

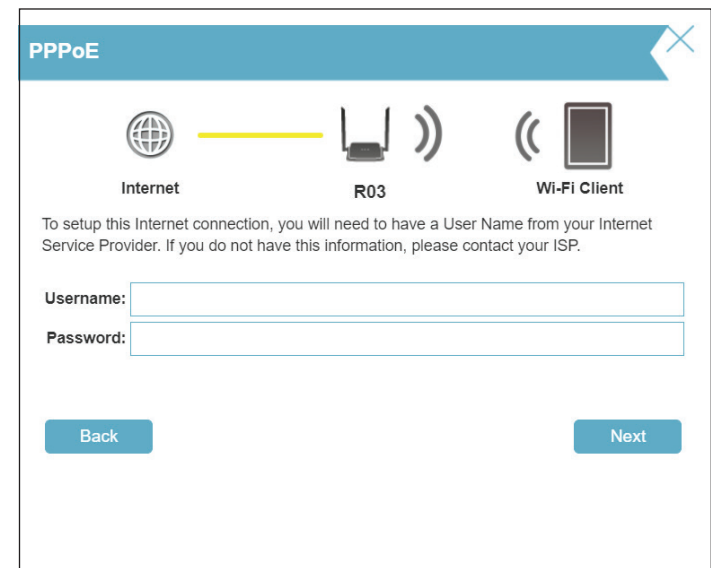

If the router detects or you select **Static IP Address Connection**, enter the IP and DNS settings supplied by your ISP. If you do not have this information, please contact your ISP.


Click **Next** to continue.

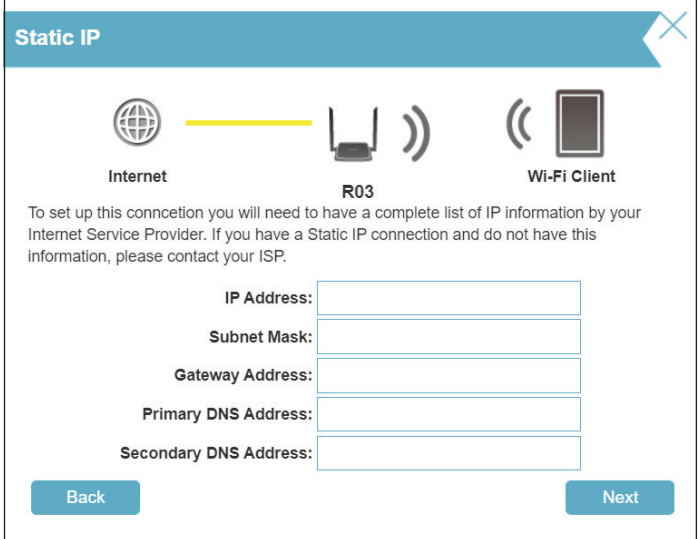

The screenshot shows the 'Static IP' configuration screen. At the top, there is a blue header with the text 'Static IP' and a close button. Below the header is a diagram showing 'Internet' (globe icon) connected to 'R03' (router icon) which is connected to 'Wi-Fi Client' (smartphone icon). A yellow line connects the Internet and R03. Below the diagram, there is a paragraph of text: 'To set up this connection you will need to have a complete list of IP information by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.' Underneath this text are five input fields: 'IP Address:', 'Subnet Mask:', 'Gateway Address:', 'Primary DNS Address:', and 'Secondary DNS Address:'. At the bottom, there are two buttons: 'Back' on the left and 'Next' on the right.

Type in a **Wi-Fi Network Name** and **Wi-Fi Password** to set up your Wi-Fi network. Your wireless clients will need this network password to be able to connect to the wireless network.

Click **Next** to continue.

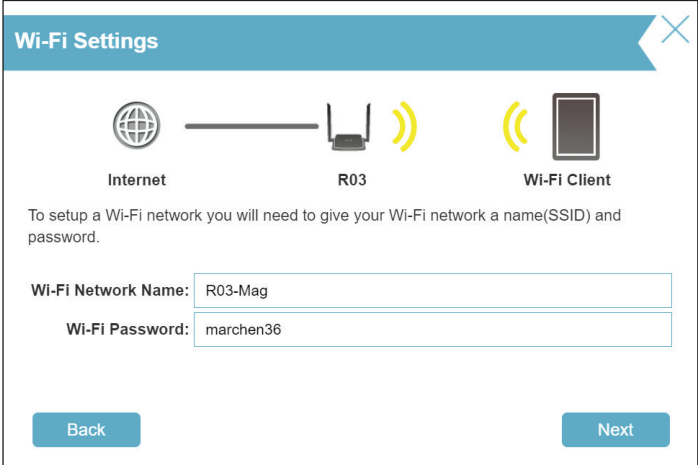

The screenshot shows the 'Wi-Fi Settings' configuration screen. At the top, there is a blue header with the text 'Wi-Fi Settings' and a close button. Below the header is a diagram showing 'Internet' (globe icon) connected to 'R03' (router icon) which is connected to 'Wi-Fi Client' (smartphone icon). A grey line connects the Internet and R03, and yellow signal waves connect R03 and the Wi-Fi Client. Below the diagram, there is a paragraph of text: 'To setup a Wi-Fi network you will need to give your Wi-Fi network a name(SSID) and password.' Underneath this text are two input fields: 'Wi-Fi Network Name:' with the value 'R03-Mag' and 'Wi-Fi Password:' with the value 'marchen36'. At the bottom, there are two buttons: 'Back' on the left and 'Next' on the right.

To better protect the router's configuration page, please enter a password. You will be prompted for this password every time you log in to the router's web configuration utility. Password must be 8-15 characters and contains both numbers and letters.

Note: It is strongly recommended that you change the default device password for accessing the web configuration page.

Click **Next** to continue.

Device Admin Password

Internet — R03 — Wi-Fi Client

By default, your new D-Link device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password below.

Device Admin Password:

Back Next

Select your time zone from the drop-down menu.

Click **Next** to continue.

Time Zone

Internet — R03 — Wi-Fi Client


Some essential features require you to set a time zone to work properly. Please select your time zone from the drop-down menu.

Time Zone: Asia/Taipei

Back Next


Keeping your router's firmware up-to-date provides you with the latest protection and new features over the air. Choose whether to keep your device up-to-date automatically or to manage the device updates by yourself.

Click **Next** to continue.

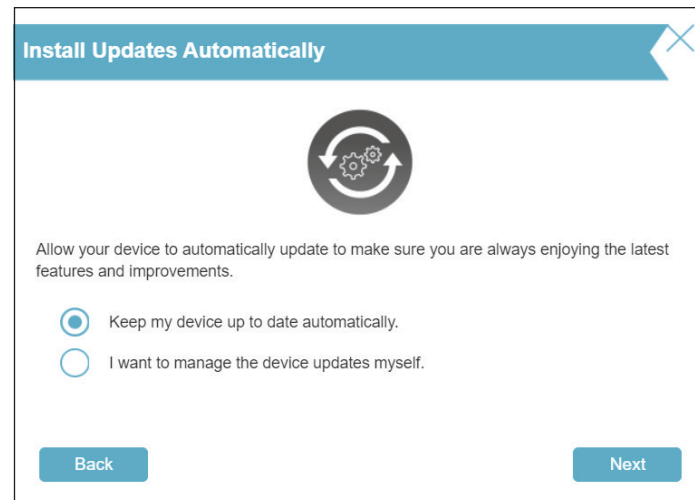


You will be presented with a summary of your settings.


Click **Next** to apply the settings or **Back** to make changes.

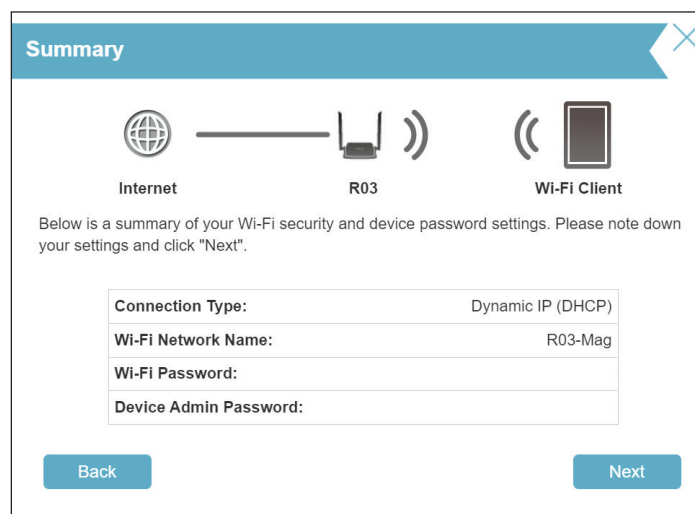

Please wait while the device settings are saved.
Do not turn off or unplug your router during this time.

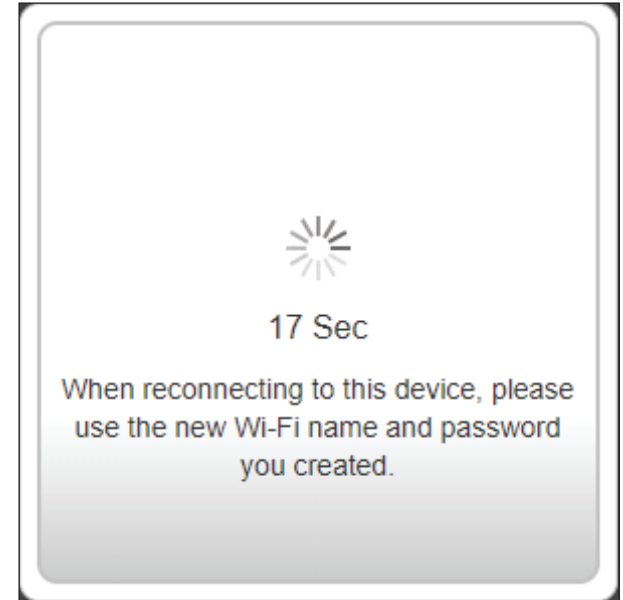


Your new settings have been saved and your router is now configured.
Click **OK** to close the Setup Wizard.
Congratulations, your device has been successfully configured!
You can log in to the web configuration interface with the Admin Password.

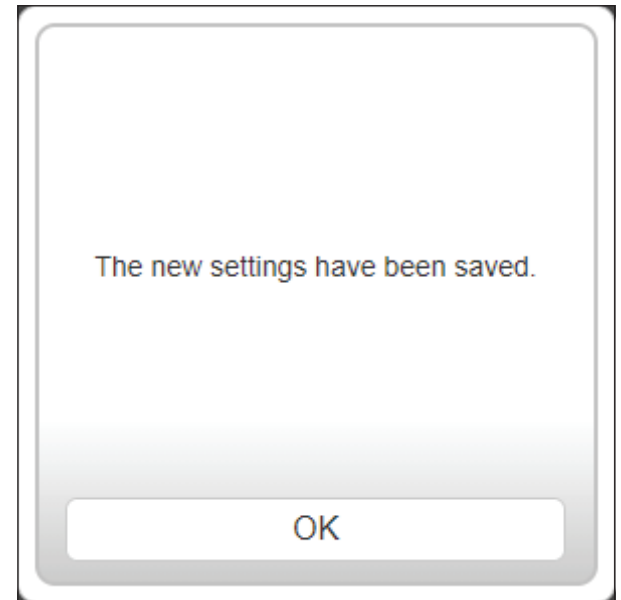

Configuration

 If this is your first time installing the router, open your web browser and enter the default management address at **http://XXXX.devicesetup.net/**. (where XXXX represents the last 4 digits of the MAC address).



Note: If you cannot remember your password for login, press the **Reset** button on the back of the device to restore the router to its default settings.

The router's home page will open displaying its current connection status.

The left pane has quick access to **Settings, Features, and Management** functions. You can access **AI Assistant** (an AI-assisted message center for reports on Wi-Fi conditions). Note that you need to turn on AI Wi-Fi Optimizer to receive messages.

Note: The system will automatically log out after a period (180 seconds) of inactivity.




Home

The Home page displays the status of the router in the form of an interactive diagram. You can click each icon to display information about the components of the network at the bottom of the screen. The left pane allows you to quickly navigate to other pages.

The Home page shows whether the router is currently connected to the Internet.

If it is disconnected, click **Click to repair** to bring up the setup wizard, refer to the **Setup Wizard** on page 13 for more information.

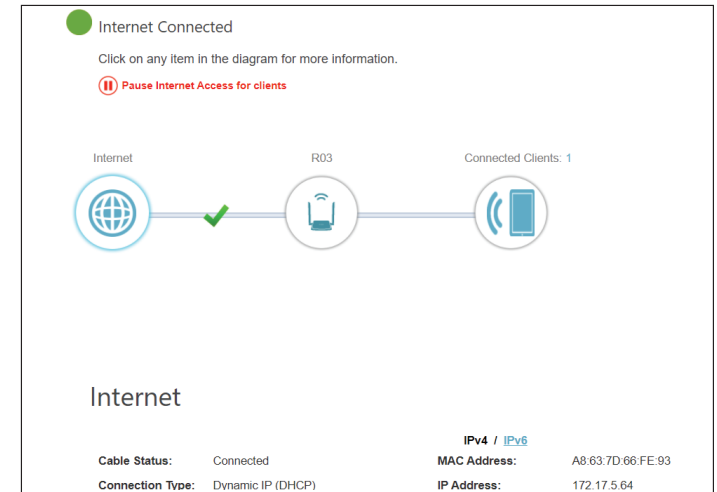

Internet

To bring up more details about your Internet connection, click on the **Internet** icon.

Click **IPv4** or **IPv6** to see details of the IPv4 connection and IPv6 connection respectively.

Click **Release IP Address** to disconnect from the Internet. To reconnect, click **Renew IP Address**.

To reconfigure the Internet settings, refer to **Internet - IPv4** on page 27.



The screenshot shows the 'Internet' status page. At the top, a green dot indicates 'Internet Connected'. Below this, there is a red button with a pause icon labeled 'Pause Internet Access for clients'. A network diagram shows 'Internet' (globe icon) connected to 'R03' (router icon) with a green checkmark, which is then connected to 'Connected Clients: 1' (phone icon). Below the diagram, the 'Internet' section displays connection details:

| | | | |
|--------------------|---------------------------|-----------------------|-------------------|
| Cable Status: | Connected | IPv4 / IPv6 | |
| Connection Type: | Dynamic IP (DHCP) | MAC Address: | A8:63:7D:66:FE:93 |
| Network Status: | Connected | IP Address: | 172.17.5.64 |
| Connection Uptime: | 0 Day 0 Hour 0 Min 15 Sec | Subnet Mask: | 255.255.255.0 |
| | | Default Gateway: | 172.17.5.254 |
| | | Primary DNS Server: | 192.168.168.249 |
| | | Secondary DNS Server: | 192.168.168.250 |

A blue button labeled 'Release IP Address' is located below the connection details. A 'Go to settings' link with a right-pointing arrow is at the bottom right.

R03

Click on the **R03** icon to view details about the router and its wireless settings.

Here you can see the router's current Wi-Fi network name and password, as well as the router's MAC address, IPv4 address, and IPv6 address.

To reconfigure network settings, either click **Go to settings** at the bottom of the page, or click **Settings > Network** (in the left pane). Refer to **Network** on page **59** for more information.

To reconfigure wireless settings, either click **Go to settings** on the lower right, or click **Settings > Wireless** menu (in the left pane). Refer to **Wireless** on page **54** for more information.

The screenshot displays the R03 router's status page. At the top, a green circle indicates 'Internet Connected'. Below this, a red icon with a double bar indicates 'Pause Internet Access for clients'. A network diagram shows 'Internet' connected to 'R03' (with a green checkmark) and 'R03' connected to 'Connected Clients: 1'. The main section is titled 'R03' and contains two columns of settings:

| IPv4 Network | Wi-Fi 2.4GHz |
|--------------------------------|----------------------------|
| MAC Address: A8:63:7D:66:FE:94 | Status: Enabled |
| Router IP Address: 192.168.0.1 | Wi-Fi Name (SSID): R03-Mag |
| Subnet Mask: 255.255.255.0 | Password: marchen36 |

Below the IPv4 settings, there is an 'IPv6 Network' section with the following details:


- Link-Local Address: FE80::AA63:7DFF:FE66:FE94
- Router IPv6 Address: Not Available
- DHCP-PD: Enabled
- Assigned Prefix: Not Available


There are two 'Go to settings' links with arrows: one at the bottom right of the Wi-Fi section and one at the bottom center of the IPv6 section.

Connected Clients

Click on the **Connected Clients** icon to obtain information about the connected clients of the router.

On this page you can see all the clients currently connected to the router along with their IP addresses and device manufacturers.

To view more information about a client or edit a client's settings such as IP reservation and parental control, click  on the client you want to edit.

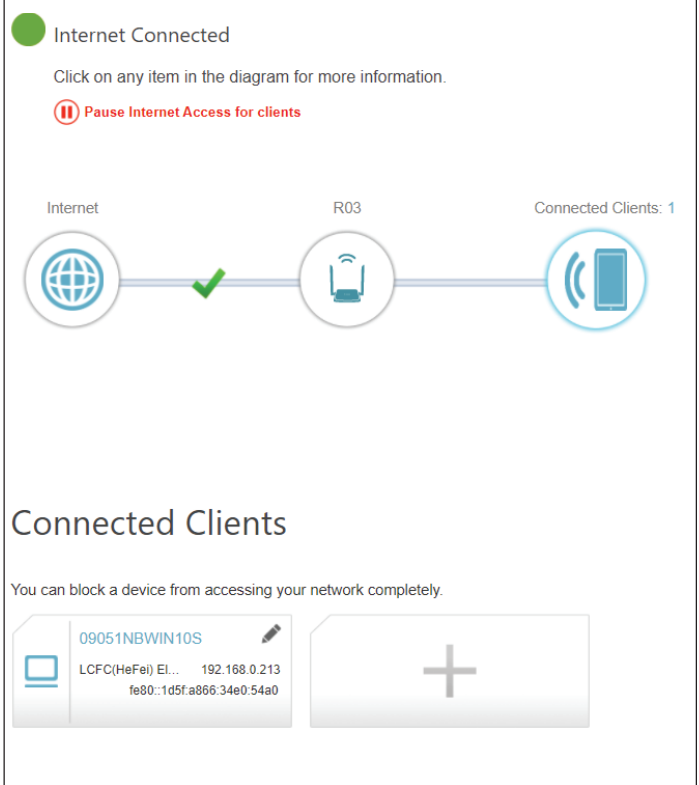

The screenshot shows the 'Connected Clients' page. At the top, there is a green status indicator and the text 'Internet Connected'. Below this, there is a red button with a pause icon and the text 'Pause Internet Access for clients'. A network diagram shows 'Internet' connected to 'R03' (the router) with a green checkmark, and 'R03' connected to 'Connected Clients: 1' (represented by a smartphone icon). Below the diagram, the title 'Connected Clients' is followed by the text 'You can block a device from accessing your network completely.' There is a table with one row of client information and a plus sign button to add more.

| Client Name | MAC Address | IP Address |
|------------------------------------|--------------------------|---------------|
| 09051NBWIN10S LCFC(HeFei) El... | fe80::1d5fa866:34e0:54a0 | 192.168.0.213 |

Edit Rule

- Name** Enter a custom name for this client.
- Vendor** Displays the vendor of the client.
- MAC Address** Displays the MAC address of the client.
- IP Address** Displays the current IP address of the client.
- Reserve IP** Click **Enable** to reserve an IP address for the client.
- IP Address (Reserved)** Specify an IP address for the router's DHCP server to assign.
- Parental Control** Enable Parental Control and select a profile to control the client's Internet access. Make sure that this device is also on the device list of the selected profile.
- Profile** Use the drop-down menu to select a profile to be used for Parental Control. The profile can be set to **Always Block** to have this client blocked from accessing the Internet, or you can create your own profiles to specify the times that the client can access the network. You can also block access to unwanted websites. Refer to **Features > Parental Control** on page **63** for more information.

Click **Save** when you are done.

Edit Rule
✕

Name:

Vendor: D-Link International

MAC Address: c8:d3:a3:03:43:86

IP Address: 192.168.0.106

Reserve IP: Enabled Remaining: 24

IP Address (Reserved):


Parental Control: Enabled

Schedule: ▼

Settings Wizard

Go to **Settings > Wizard** to open the setup wizard. This is the same wizard that appears when you start the router for the first time. Refer to **Setup Wizard** on page **13** for details.

Note: *When the Wizard is opened, the router will disconnect from the Internet.*

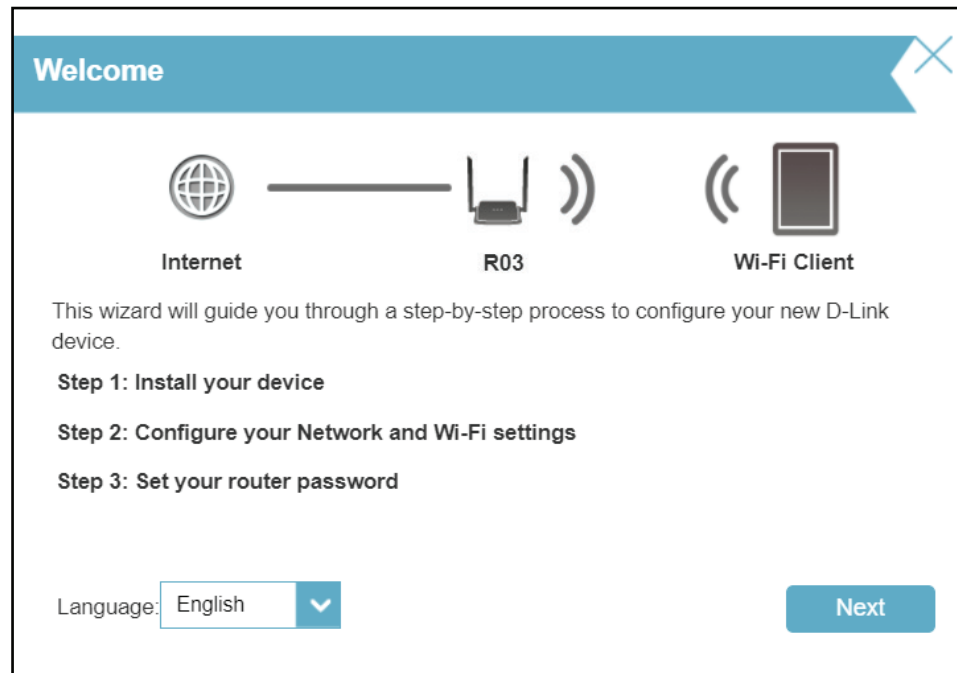

Internet - IPv4

Go to **Settings > Internet** to see the Internet configuration options for IPv4 connection.

To configure IPv6 Internet and network connection details, click the **IPv6** tab. Refer to **Internet - IPv6** on page 37.

To configure VLAN connection details, click the **VLAN** link. Refer to **Internet - VLAN** on page 52.

Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is

Choose your Internet connection type from the drop-down menu. You will be presented with more options for your connection type.

For **IPv4 - Dynamic IP (DHCP)** refer to page 28

For **IPv4 - Static IP** refer to page 29

For **IPv4 - PPPoE** refer to page 30

For **IPv4 - PPTP** refer to page 32

For **IPv4 - L2TP** refer to page 34

For **IPv4 - DS-Lite** refer to page 36

IPv4 - Dynamic IP (DHCP)

Select **Dynamic IP (DHCP)** to obtain IP address information automatically from your Internet Service Provider (ISP). Select this option if your ISP does not specify an IP address to use. Click **Save** at any time to save the changes you have made on this page.

Advanced Settings...

Host Name The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP. This address is usually filled in automatically.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP. This address is usually filled in automatically.

MTU Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP. The default is 1500.

The screenshot shows the IPv4 configuration page in a router's settings interface. The breadcrumb path is "Settings >> Internet >> IPv4". At the top right, there are buttons for "VLAN", "IPv6", and "Save". Below this, the "My Internet Connection is:" dropdown menu is set to "Dynamic IP (DHCP)". A link for "Advanced Settings..." is visible on the right. The main configuration area includes the following fields:

- Host Name: R03
- Primary DNS Server: (empty)
- Secondary DNS Server: (empty)
- MTU: 1500
- MAC Address Clone: 8C:8C:AA:18:BE:85 (with a dropdown arrow)

IPv4 - Static IP

Select **Static IP** if your IP information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

IP Address Enter the IP address provided by your ISP.

Subnet Mask Enter the subnet mask provided by your ISP.

Default Gateway Enter the default gateway address provided by your ISP.

Primary DNS Server Enter the primary DNS server IP address provided by your ISP.

Settings>>Internet>>IPv4

VLAN IPv6 Save

My Internet Connection is: Static IP

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS Server:

Advanced Settings...

Advanced Settings...

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

MAC Address Clone The default MAC address is set to the WAN port's physical interface MAC address on the router. You can replace the WAN port's MAC address with the MAC address of a connected client.

Settings>>Internet>>IPv4

VLAN IPv6 Save

My Internet Connection is: Static IP

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS Server:

Advanced Settings...

Secondary DNS Server:

MTU: 1500

MAC Address Clone: << MAC Address

IPv4 - PPPoE

Select **PPPoE** (Point-to-Point Protocol over Ethernet) if your ISP requires you to enter a PPPoE username and password in order to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Reconnect Mode Select either **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.

The screenshot shows the 'Settings->Internet->IPv4' configuration page. At the top, there are tabs for 'VLAN', 'IPv6', and 'Save'. Below the tabs, 'My Internet Connection is:' is set to 'PPPoE'. There are input fields for 'Username' and 'Password', and a 'Reconnect Mode' dropdown menu set to 'Manual'. Below these are 'Advanced Settings...' options: 'Address Mode' (Dynamic IP), 'Service Name', 'Primary DNS Server', 'Secondary DNS Server', 'MTU' (1492), and 'MAC Address Clone' (with a '<< MAC Address' dropdown).

Advanced Settings...

Address Mode Select **Static IP** if the following information has been provided by your ISP: IP address, MTU, and DNS server addresses. In most cases, select **Dynamic IP**.

The screenshot shows the 'Advanced Settings...' section. It includes a dropdown for 'Address Mode' set to 'Dynamic IP', a 'Service Name' field set to 'Dynamic IP', and a 'Primary DNS Server' field set to 'Static IP'.

Advanced Settings... - Dynamic IP

Address Mode Shows your chosen address mode.

Service Name Enter the ISP service name (optional)

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1500)- you may need to change the MTU for optimal performance with your ISP. The default is 1492.

MAC Address Clone The default MAC address is set to the Internet port's physical interface MAC address on the router. You can replace the Internet port's MAC address with the MAC address of a connected client.

Advanced Settings...

Address Mode: **Dynamic IP**

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU:

MAC Address Clone:

COPYRIGHT © 2016 D-Link

Advanced Settings... - Static IP

Address Mode Displays your chosen address mode.

IP Address Enter the IP address provided by your ISP.

Service Name Enter the ISP service name (optional)

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1492)- you may need to change the MTU for optimal performance with your ISP. The default is 1492.

MAC Address Clone The default MAC address is set to the Internet port's physical interface MAC address on the router. You can replace the Internet port's MAC address with the MAC address of a connected client.

Advanced Settings...

Address Mode: **Static IP**

IP Address:

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU:

MAC Address Clone:

IPv4 - PPTP

Choose **PPTP** (Point-to-Point-Tunneling Protocol) if your Internet Service Provider (ISP) uses a PPTP connection. Your ISP will provide you with a username and password. Click **Save** at any time to save the changes you have made on this page.


PPTP Server Enter the PPTP server's IP address or name provided by your ISP.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.


Reconnect Mode Select **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.

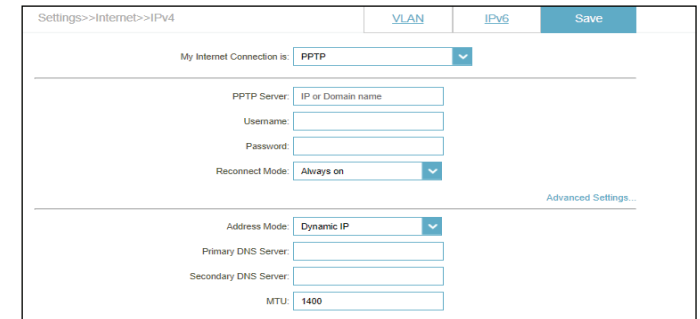

Advanced Settings...


Address Mode Select **Static IP** if the following information is given by your ISP: IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

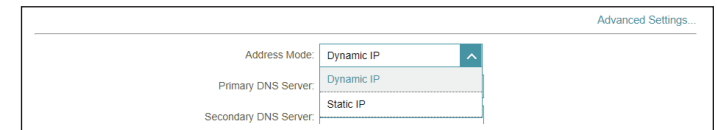

Advanced Settings... - Dynamic IP

Address Mode Shows your chosen address mode.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

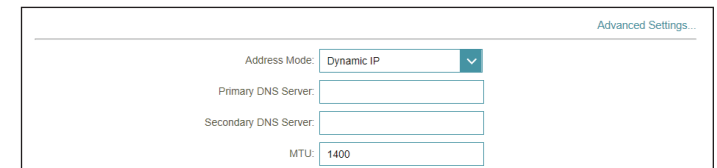

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

Advanced Settings... - Static IP

Address Mode Displays your chosen address mode.

PPTP IP Address Enter the IP address provided by your ISP.


PPTP Subnet Mask Enter the subnet mask provided by your ISP.

PPTP Gateway IP Address Enter the gateway IP address provided by your ISP.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

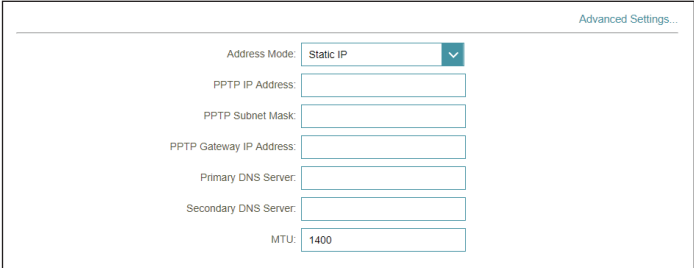

The screenshot shows the 'Advanced Settings... - Static IP' configuration page. It features a dropdown menu for 'Address Mode' set to 'Static IP'. Below this are several input fields: 'PPTP IP Address', 'PPTP Subnet Mask', 'PPTP Gateway IP Address', 'Primary DNS Server', 'Secondary DNS Server', and 'MTU'. The 'MTU' field is pre-filled with the value '1400'.

IPv4 - L2TP

Choose **L2TP** (Layer 2 Tunneling Protocol) if your Internet Service Provider (ISP) uses an L2TP connection. Your ISP will provide you with a username and password. Click **Save** at any time to save the changes you have made on this page.

L2TP Server Enter the L2TP server IP address provided by your ISP.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Reconnect Mode Select **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Always on** or **Manual** as the reconnect mode. The default is 5 minutes.

Advanced Settings...

Address Mode Select **Static IP** if the following information is given by your ISP: IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

Advanced Settings... - Dynamic IP

Address Mode Shows your chosen address mode.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400

Advanced Settings... - Static IP

Address Mode Shows your chosen address mode.

L2TP IP Address Enter the IP address provided by your ISP.


L2TP Subnet Mask Enter the subnet mask provided by your ISP.

L2TP Gateway IP Address Enter the gateway IP address provided by your ISP.

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1460) - you may need to change the MTU for optimal performance with your ISP. The default is 1400.

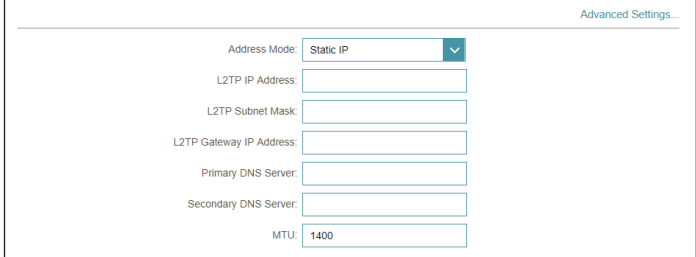

Advanced Settings...

Address Mode:

L2TP IP Address:

L2TP Subnet Mask:

L2TP Gateway IP Address:

Primary DNS Server:

Secondary DNS Server:

MTU:

IPv4 - DS-Lite

DS-Lite allows local IPv4 packets to travel through an IPv6 network. After selecting DS-Lite, the following parameters will be available for configuration. Click **Save** at any time to save the changes you have made on this page.

Advanced Settings...

DS-Lite Configuration Select **DS-Lite DHCPv6 Option** to let the router allocate the AFTR IPv6 (Address Family Transition Router) address automatically. Select **Manual Configuration** to enter the AFTR IPv6 address manually.

Settings>>Internet>>IPv4

VLAN IPv6 Save

My Internet Connection is: DS-Lite

Advanced Settings...

DS-Lite Configuration: DS-Lite DHCPv6 Option

B4 IPv4 Address: DS-Lite DHCPv6 Option

WAN IPv6 Address: Manual Configuration

IPv6 WAN Default Gateway: Not Available

Advanced Settings... - DS-Lite DHCPv6 Option

B4 IPv4 Address Enter the B4 (Basic Bridging Broadband) IPv4 address that will be encapsulated into IPv6 packets to transmit over an IPv6 network.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 WAN Default Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

Advanced Settings...

DS-Lite Configuration: DS-Lite DHCPv6 Option

B4 IPv4 Address: 192.0.0.

WAN IPv6 Address: Not Available

IPv6 WAN Default Gateway: Not Available

Advanced Settings... - Manual Configuration Option

AFTR IPv6 Address Enter the Address Family Transition Router (AFTR) IPv6 address. This is where an IPv6 packet will be decapsulated.

B4 IPv4 Address Enter the B4 IPv4 address.

WAN IPv6 Address Once connected, the WAN IPv6 address will be displayed here.

IPv6 WAN Default Gateway Once connected, the IPv6 WAN default gateway address will be displayed here.

Advanced Settings...

DS-Lite Configuration: Manual Configuration

AFTR IPv6 Address:

B4 IPv4 Address: 192.0.0.

WAN IPv6 Address: Not Available

IPv6 WAN Default Gateway: Not Available

Internet - IPv6

Go to **Settings > Internet** to see the Internet configuration options for IPv4 , then click the **IPv6** tab to access the configuration options for IPv6.

To configure the IPv4 Internet and network connection details, click the **IPv4** tab. Refer to **Internet - IPv4** on page **27**
To configure the VLAN connection details, click the **VLAN** tab. Refer to **Internet - VLAN** on page **52**

Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is

Choose your Internet connection type from the drop-down menu. You will be presented with the appropriate options for your connection type.

For **IPv6 - Auto Detection** refer to page **38**

For **IPv6 - Static IPv6** refer to page **40**

For **IPv6 - Auto Configuration (SLAAC/DHCPv6)** refer to page **42**

For **IPv6 - PPPoE** refer to page **45**

For **IPv6 - 6rd** refer to page **49**

For **IPv6 - Local Connectivity Only** refer to page **51**

IPv6 - Auto Detection

Select **Auto Detection** to automatically detect the IPv6 connection method used by your Internet Service Provider (ISP). If Auto Detection fails, you can manually select another IPv6 connection type. Click **Save** at any time to save the changes you have made on this page.

IPv6 DNS Settings

DNS Type Select either **Obtain a DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server Enter the secondary DNS server address as a backup.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable DHCP prefix delegation.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address, which is used only within the local network.

If **Enable DHCP-PD** is disabled, enter the following:

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

The screenshot shows the IPv6 configuration interface. At the top, there's a title 'IPv6' and a subtitle 'All of your IPv6 Internet and network connection details are displayed on this page.' Below that, there are navigation buttons for 'VLAN', 'IPv4', and 'Save'. The 'My Internet Connection is:' dropdown is set to 'Auto Detection'. Under the 'IPv6 DNS SETTINGS' section, the 'DNS Type:' dropdown is set to 'Obtain a DNS server address automatically'. The 'LAN IPv6 ADDRESS SETTINGS' section shows 'Enable DHCP-PD:' as 'Enabled' and the 'LAN IPv6 Link-Local Address:' as 'FE80::AA63:7DFF:FE31:5659:64'. There is an 'Advanced Settings...' link at the bottom right.

This close-up shows the 'IPv6 DNS SETTINGS' section. The 'DNS Type:' dropdown menu is open, showing 'Obtain a DNS server address automatically' as the selected option.

This close-up shows the 'IPv6 DNS SETTINGS' section with 'Use the following DNS address' selected in the 'DNS Type:' dropdown. Below it, there are input fields for 'Primary DNS Server:' and 'Secondary DNS Server:'.

The screenshot shows the 'LAN IPv6 ADDRESS SETTINGS' section. 'Enable DHCP-PD:' is set to 'Enabled'. The 'LAN IPv6 Link-Local Address:' is displayed as 'FE80::EB6:D2FF:FE93:7CD8'. There is an 'Advanced Settings...' link at the bottom right.

This screenshot shows the 'LAN IPv6 ADDRESS SETTINGS' section with 'Enable DHCP-PD:' set to 'Disabled'. A manual 'LAN IPv6 Address:' is entered in the input field, followed by '/64'. The 'LAN IPv6 Link-Local Address:' is shown as 'FE80::EB6:D2FF:FE93:7CD8'. There is an 'Advanced Settings...' link at the bottom right.

Advanced Settings... - Address Autoconfiguration Settings




- Enable Automatic IPv6 Address Assignment** Enable or disable the Automatic IPv6 Address Assignment feature.
- Enable Automatic DHCP-PD in LAN** Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.
- Autoconfiguration Type** Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

- Router Advertisement Lifetime** Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

- IPv6 Address Range (Start)** Enter the start IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Range (End)** Enter the end IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Lifetime** Enter the dynamic IP's retention time. The default is 10080 minutes.

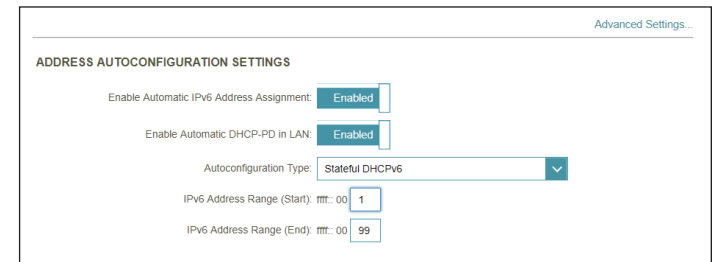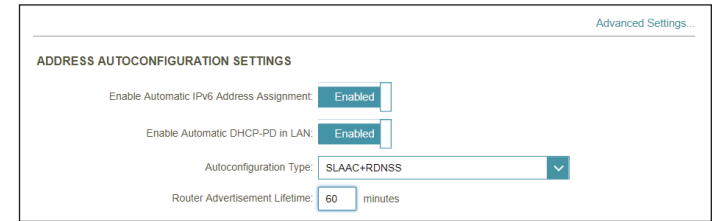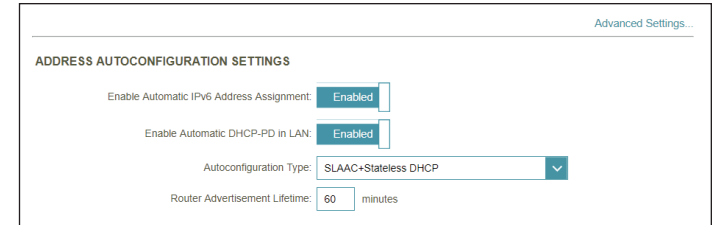

IPv6 - Static IPv6

Select **Static IP** if your IPv6 information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

- Use Link-Local Address** Enable or disable link-local address.
- IPv6 Address** Configurable when **Use Link-Local Address** is disabled. Enter the address supplied by your ISP.
- Subnet Prefix Length** Configurable when **Use Link-Local Address** is disabled. Enter the subnet prefix length (1~128) supplied by your ISP.
- Default Gateway** Enter the default gateway for your IPv6 connection.
- Primary DNS Server** Enter the primary DNS server address.
- Secondary DNS Server** Enter the secondary DNS server address.

LAN IPv6 Address Settings

- LAN IPv6 Address** Enter the LAN (local) IPv6 address for the router.
- LAN IPv6 Link-Local Address** Displays the router's LAN link-local address.

All of your IPv6 Internet and network connection details are displayed on this page.

Settings>>Internet>>IPv6

VLAN IPv4 Save

My Internet Connection is: Static IPv6

Use Link-Local Address: Disabled

IPv6 Address:

Subnet Prefix Length:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

LAN IPv6 Address: /64

LAN IPv6 Link-Local Address: FE80::AA63:7DFF:FE31:5659/64

[Advanced Settings...](#)

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the dynamic IP's retention time. The default is 10080 minutes.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ffff: 00

IPv6 Address Range (End): ffff: 00

IPv6 Address Lifetime: 10080 minutes

IPv6 - Auto Configuration (SLAAC/DHCPv6)

Select **Auto Configuration** if your ISP assigns an IPv6 address when your router requests one from the ISP's server. Some ISPs require you to configure relevant settings in advance before your router can connect to the IPv6 Internet. Click **Save** at any time to save the changes you have made on this page.

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server If you select **Use the following DNS address**, enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

*If **Enable DHCP-PD** is disabled, configure the following:*

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address for the local network only.

Settings>>Internet>>IPv6

VLAN IPv4 Save

My Internet Connection is: Auto Configuration (SLAAC/DHCPv6)

IPv6 DNS SETTINGS

DNS Type: Use the following DNS address

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Enabled

LAN IPv6 Link-Local Address: /64

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Disabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is enabled in the previous LAN IPv6 Address Settings:

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ffff:00

IPv6 Address Range (End): ffff:00

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is disabled in the previous LAN IPv6 Address Settings:

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IP address retention period in minutes. The default is 10080 minutes.

IPv6 - PPPoE

Select **PPPoE** if your ISP requires you to enter a PPPoE username and password to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

- PPPoE Session** Create a new PPPoE session.
- Username** Enter the username provided by your ISP.
- Password** Enter the password provided by your ISP.
- Address Mode** Select either **Dynamic IP** or **Static IP**.
- IP Address** Configurable if Static IP is chosen. Enter the IP address provided by your ISP.
- Service Name** Enter the ISP service name (optional).
- Reconnect Mode** Select either **Always On** or **Manual**.
- MTU** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP. The default is 1492 bytes.

The screenshot shows the IPv6 configuration page with the following settings:

- My Internet Connection is:** PPPoE
- PPPoE Session:** Create a new session
- Username:** [Empty field]
- Password:** [Empty field]
- Address Mode:** Dynamic IP
- Service Name:** [Empty field]
- Reconnect Mode:** Always on
- MTU:** 1492 bytes
- IPv6 DNS SETTINGS:** DNS Type: Obtain a DNS server address automatically
- LAN IPv6 ADDRESS SETTINGS:**
 - Enable DHCP-PD: Enabled
 - LAN IPv6 Link-Local Address: FE80::AA63:7DFF:FE31:5659:64
- ADDRESS AUTOCONFIGURATION SETTINGS:**
 - Enable Automatic IPv6 Address Assignment: Enabled
 - Enable Automatic DHCP-PD in LAN: Enabled
 - Autocfiguration Type: SLAAC+Stateless DHCP
 - Router Advertisement Lifetime: 30 minutes

IPv6 DNS Settings

DNS Type Select either **Obtain a DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server If you select **Use the following DNS address**, enter the secondary DNS server address as a backup.

IPv6 DNS SETTINGS

DNS Type: Obtain a DNS server address automatically

IPv6 DNS SETTINGS

DNS Type: Use the following DNS address

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation.

LAN IPv6 Address Enter the IPv6 address provided by your ISP.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address for the local network only.

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Enabled

LAN IPv6 Link-Local Address: FE80::EB6:D2FF:FE93:7CD8

[Advanced Settings...](#)

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Disabled

LAN IPv6 Address: /64

LAN IPv6 Link-Local Address: FE80::EB6:D2FF:FE93:7CD8

[Advanced Settings...](#)

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment.

If **Enable DHCP-PD** is enabled in the previous LAN IPv6 Address Settings:

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: SLAAC+RDNSS

Router Advertisement Lifetime: 30 minutes

Advanced Settings...

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Enabled

Autoconfiguration Type: Stateful DHCPv6

IPv6 Address Range (Start): ffff: 00

IPv6 Address Range (End): ffff: 00

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is disabled in the previous LAN IPv6 Address Settings:

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IPv6 address lifetime (in minutes). The default is 10080 minutes.

IPv6 - 6rd

IPv6 **6rd** (rapid deployment) allows IPv6 packets to be transmitted over an IPv4 network. Click **Save** at any time to save the changes you have made on this page.

- Assign IPv6 Prefix** Currently unsupported.
- Primary DNS Server** Enter the primary DNS server address.
- Secondary DNS Server** Enter the secondary DNS server address as a backup.

6rd Manual Configuration

- Enable Hub and Spoke Mode** Enable this option if you want to minimize the number of routes to the destination by using a hub and spoke method of networking.
- 6rd Configuration** Choose the **6rd DHCPv4 Option** to automatically discover and populate the data values, or **Manual Configuration** to enter the settings yourself.

If you select **Manual Configuration** as the 6rd Configuration:

- 6rd IPv6 Prefix** Enter the 6rd IPv6 network address and prefix length (1~128) supplied by your ISP.
- WAN IPv4 Address** Enter the IPv4 network prefix.
- 6rd Border Relay IPv4 Address** Enter the 6rd border relay IPv4 address settings supplied by your ISP.

LAN IPv6 Address Settings


LAN IPv6 Address Displays the router's LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.



Advanced Settings... - Address Autoconfiguration Settings


Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

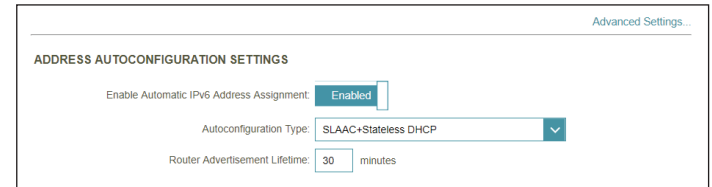

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

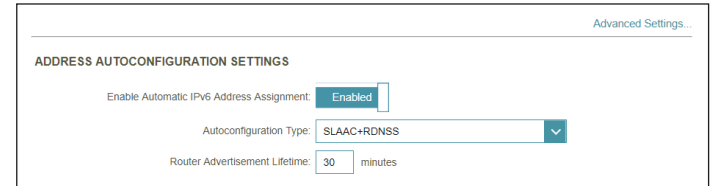


If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IPv6 address lifetime (in minutes). The default is 10080 minutes.

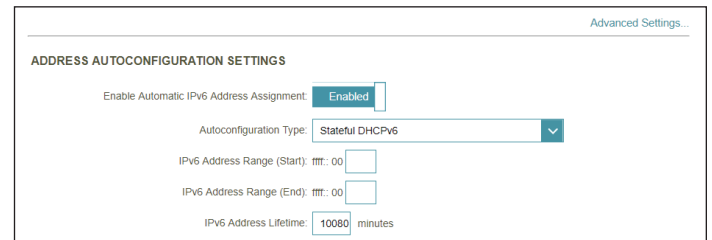

IPv6 - Local Connectivity Only

Local Connectivity Only allows you to set up an IPv6 connection that will not connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

Settings>>Internet>>IPv6

VLAN IPv4 Save

My Internet Connection is: Local Connectivity Only

Advanced Settings...

IPv6 ULA SETTINGS

Enable ULA: Enabled

Use Default ULA Prefix: Disabled

ULA Prefix: /64

CURRENT IPv6 ULA SETTINGS

Current ULA Prefix: Not Available

LAN IPv6 ULA: Not Available

Advanced Settings... - IPv6 ULA Settings

Enable ULA Click here to enable Unique Local IPv6 Unicast Addresses settings.

Use Default ULA Prefix Enable this option to use the default ULA prefix.

ULA Prefix If you disable Use Default ULA Prefix, enter your own ULA prefix.

Advanced Settings... - Current IPv6 ULA Settings

Current ULA Prefix Displays the current ULA prefix.

LAN IPv6 ULA Displays the LAN's IPv6 ULA.

Internet - VLAN

Go to **Settings > Internet**, then click the **VLAN** link to access the configuration options for the VLAN.

VLAN allows Triple-Play services to be differentiated by dividing a network into segments and allowing access to these services by devices only in the assigned segment.

To configure the IPv4 Internet and network connection details, click the **IPv4** link. Refer to **Internet - IPv4** on page **27**

To configure the IPv6 Internet and network connection details, click the **IPv6** link. Refer to **Internet - IPv6** on page **37**

Click **Save** at any time to save the changes you have made on this page.

Status Click to enable or disable the Triple-Play VLAN feature. More configuration options will be available if the Status is enabled.

Settings>>Internet>>VLAN

IPv6 IPv4 Save

Triple-Play

Status: Enabled

Internet VLAN

VLAN TAG: Enabled

Internet VLAN ID: Priority ID: 0

IPTV VLAN

VLAN TAG: Enabled

IPTV VLAN ID: Priority ID: 0

VOIP VLAN

VLAN TAG: Disabled

VoIP VLAN ID: Priority ID: 0

Interface Traffic Type Setting

LAN Port 1: Internet

LAN Port 2: Internet

LAN Port 3: Internet

LAN Port 4: Internet

If Triple-Play is **Enabled**:

VLAN TAG Enable VLAN TAG to enter VLAN ID, as provided by your ISP

Internet VLAN ID Enter the VLAN ID for your Internet connection, as provided by your ISP.

IPTV VLAN ID Enter the VLAN ID for your IPTV service, as provided by your ISP.

VOIP VLAN ID Enter the VLAN ID for your VoIP network, as provided by your ISP.

Priority ID Enable or disable traffic priority ID for the Internet, IPTV, and VoIP VLANs. Select a priority ID from the drop-down menus to assign to the corresponding VLAN (0-7). Higher priority ID traffic takes precedence over traffic with a low priority ID tag.

Interface Traffic Type Setting

LAN Port 1-4 Select the type of connection (Internet, IPTV, or Voice over IP) coming from the WAN connection to each interface on the router.

Settings>>Internet>>VLAN IPv6 IPv4 Save

Triple-Play

Status: Enabled

Internet VLAN

VLAN TAG: Enabled

Internet VLAN ID: Priority ID: 0

IPTV VLAN

VLAN TAG: Enabled

IPTV VLAN ID: Priority ID: 0

VOIP VLAN

VLAN TAG: Disabled

VoIP VLAN ID: Priority ID: 0

Interface Traffic Type Setting

LAN Port 1: Internet

LAN Port 2: Internet

LAN Port 3: Internet

LAN Port 4: Internet

Wireless

Go to **Settings > Wireless** to see your wireless network settings for your router.

Click **Save** at any time to save the changes you have made on this page.

2.4GHz

Status Enable or disable the 2.4GHz wireless network.

Wi-Fi Name (SSID) Create a name for your wireless network. Up to 32 characters are allowed.

Password Create a Wi-Fi password. Wireless clients will need to enter this password to connect to the network.

2.4GHz

Status: Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

HT20/40 Coexistence: Enabled

Visibility Status:

Schedule:

2.4GHz - Advanced Settings...

Security Mode Choose **None**, **WPA/WPA2-Personal**, **WPA2-Personal**, **WPA2/WPA3-Personal**, or **WPA3-Personal**. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if WPA3 is used.

802.11 Mode Select the desired wireless networking standards to use in your environment. The available options for the 2.4 GHz wireless network are **Mixed 802.11b/g/n**, **Mixed 802.11b/g**, **Mixed 802.11g/n**, **802.11b only**, **802.11g only**, and **802.11n only**.

Wi-Fi Channel Select the desired channel:1-11. The default is **Auto** (recommended).

Transmission Power Select the desired wireless transmission power: High, Medium, or Low.

Channel Width Select **Auto 20/40 MHz** if you are using both 802.11n and non-802.11n (802.11b/g) devices, or select **20 MHz** if you are using a mix of 802.11b/g devices.

HT20/40 Coexistence Enable or disable the existence of both 20 MHz and 40 MHz channel width. Keep it enabled to achieve the maximum operability of wireless products using different standards in your environment. However, it might prevent your 802.11n devices from reaching the maximum performance.

Visibility Status The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

Schedule Select the time during which the wireless network will be available. The schedule may be set to **Always Enable** or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

The screenshot displays the '2.4GHz' configuration page. At the top, there are fields for 'Status' (set to 'Enabled'), 'Wi-Fi Name (SSID)' (set to 'R15-5659'), and 'Password' (set to 'kkqur47847'). Below these is an 'Advanced Settings...' link. The main configuration area includes several dropdown menus: 'Security Mode' (set to 'WPA3-Personal'), '802.11 Mode' (set to 'Mixed 802.11b/g/n'), 'Wi-Fi Channel' (set to 'Auto'), 'Transmission Power' (set to 'High'), and 'Channel Width' (set to 'Auto 20/40 MHz'). There are also checkboxes for 'HT20/40 Coexistence' (checked) and 'Visibility Status' (set to 'Visible'). At the bottom, there is a 'Schedule' dropdown set to 'Always Enable' with a '+' icon to add a custom schedule.


AI Wi-Fi Optimizer

AI-assisted Wi-Fi Optimizer intelligently assists in bandwidth optimization in your home or office network. It automatically adopts the "cleanest" channel and utilizes beamforming technology to improve signal efficiency and reduce interference. It also provides push notifications of weekly reports about automatic optimization performed when network congestion occurs. Refer to **EAGLE PRO AI** on page **88** for more information.

AI Wi-Fi Optimizer Enable or disable AI Wi-Fi Optimizer functionality.

Choose Optimization Time Enable or disable scheduled optimization. Select the time at which the AI Wi-Fi Optimizer will start.

Once this is turned on, you will start receiving weekly reports on Wi-Fi conditions through AI Assistant.

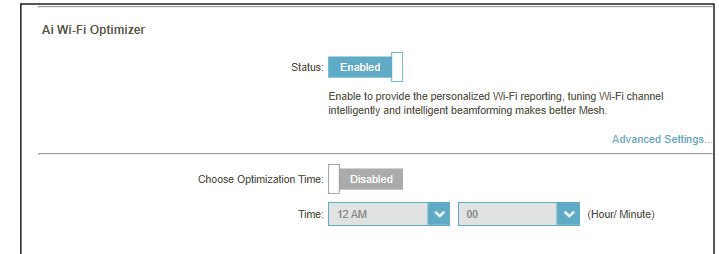


Wi-Fi Protected Setup

The easiest way to connect your wireless devices to the router is with Wi-Fi Protected Setup (WPS).

WPS-PBC Status Enable or disable WPS-PBC (Push Button Configuration) functionality. Press to establish a connection with another WPS compatible device.

 Note that WPS will be disabled if WPA3 is used.



Guest Zone

Go to **Settings > Wireless**, then click the **Guest Zone** tab to configure your guest Wi-Fi.

The **Guest Zone** feature will allow you to create a temporary zone that can be used by guests to access the Internet. The Guest Zone will be separate from your main wireless network.

Click **Save** at any time to save the changes you have made on this page.

Wireless

Status Enable or disable the Guest Zone feature. The status is disabled by default.

Wi-Fi Name (SSID) Create a name for your wireless network using up to 32 characters.

Password Create a password to use for wireless security. Your password must be between 8-63 characters in length.

Schedule Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

Guest Zone

This page lets you enable and configure a Wi-Fi Guest Zone. Users connected to a Guest Zone cannot communicate or detect devices on your home network unless Internet Access Only is disabled under Home Network Access.

Settings>>Wireless>>Guest Zone Wi-Fi Save

Wireless

Status: Enabled

Wi-Fi Name (SSID):

Password:

Schedule: +


[Advanced Settings...](#)

Home Network Access

Internet Access Only: Enabled

Advanced Settings

Security Mode Choose **None, WPA/WPA2-Personal, WPA2-Personal, WPA2/WPA3-Personal, or WPA3-Personal**. WPA3 provides the highest level of encryption among these. Note that WPS will be disabled if WPA3 is used.

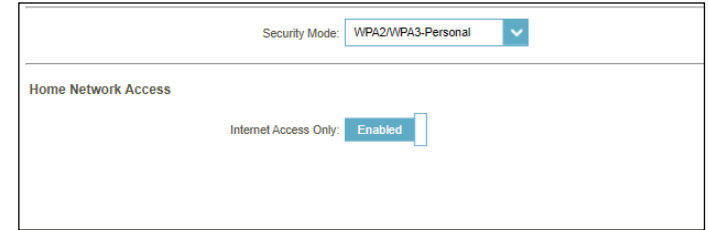

Home Network Access

Internet Access Only Enabling this option will confine connectivity to the Internet and prevent guests from accessing other local network devices.

Network

Go to **Settings > Network** to change the local network settings of the router and configure the DHCP settings.

Click **Save** at any time to save the changes you have made on this page.

Network Settings

LAN IP Address Enter the IP address of the router. The default IP address is **192.168.0.1**. If you change the IP address, you will need to enter the new IP address in your browser to log in to the web configuration.

Subnet Mask Enter the subnet mask of the router. The default subnet mask is **255.255.255.0**.

Management Link The default address to access the router's configuration is **http://R03-xxxx.local/** (where xxxx represents the last 4 digits of your router's MAC address). You can replace **R03-xxxx** with a name of your choice.

Local Domain Name Enter the domain name (optional).

Enable DNS Relay Disable this option to transfer the DNS server information from your ISP to network clients for setting DNS server. If enabled, network clients will instead set the router's IP address as the DNS server.

Network

Use this section to configure the network settings for your device. You can enter a name for your device in the management link field, and use the link to access web UI in a web browser. We recommend you change the management link if there are more than one D-Link devices within the network.

Settings>>Network Save

Network Settings

LAN IP Address:

Subnet Mask:

Management Link: .local/

Local Domain Name:

Enable DNS Relay: Enabled

[Advanced Settings...](#)

DHCP Server

- Status** Enable or disable the DHCP server.
- DHCP IP Address Range** Enter the start and end IP addresses for the DHCP server's IP assignment. **Note:** *If you statically assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.*
- DHCP Lease Time** Enter the length of time for IP address lease in minutes. The default is 10080 minutes.
- Always Broadcast** Enable this feature to broadcast your network's DHCP server to LAN/WLAN clients.

Advanced Settings...

DHCP Server

Status: Enabled

DHCP IP Address Range: 192.168.0.100 to 192.168.0.199

DHCP Lease Time: 10080 minutes

Always Broadcast: Disabled
(compatibility for some DHCP Clients)

Advanced Settings

WAN Port Speed: ▼

UPnP: Enabled

IPv4 Multicast Streams: Enabled


IPv6 Multicast Streams: Enabled

Advanced Settings...

- WAN Port Speed** You may set the link speed of the Internet port to **10 Mbps**, **100 Mbps**, or **Auto** (recommended).
- UPnP** Enable or disable Universal Plug and Play (UPnP). UPnP provides compatibility with networking equipment, software, and peripherals. This is enabled by default.
- IPv4 Multicast Streams** Allow or disallow IPv4 multicast traffic to pass through the router from the Internet. This is enabled by default.
- IPv6 Multicast Streams** Allow or disallow IPv6 multicast traffic to pass through the router from the Internet. This is enabled by default.

D-Link Cloud

Go to **Settings > D-Link Cloud** to see your D-Link Cloud Service details. This page lists whether you are registered with D-Link Cloud Service and email address associated with the account. It enables you to manage your device anytime, anywhere and check the status of your router. Use EAGLE PRO AI to find out more about D-Link Cloud's features.

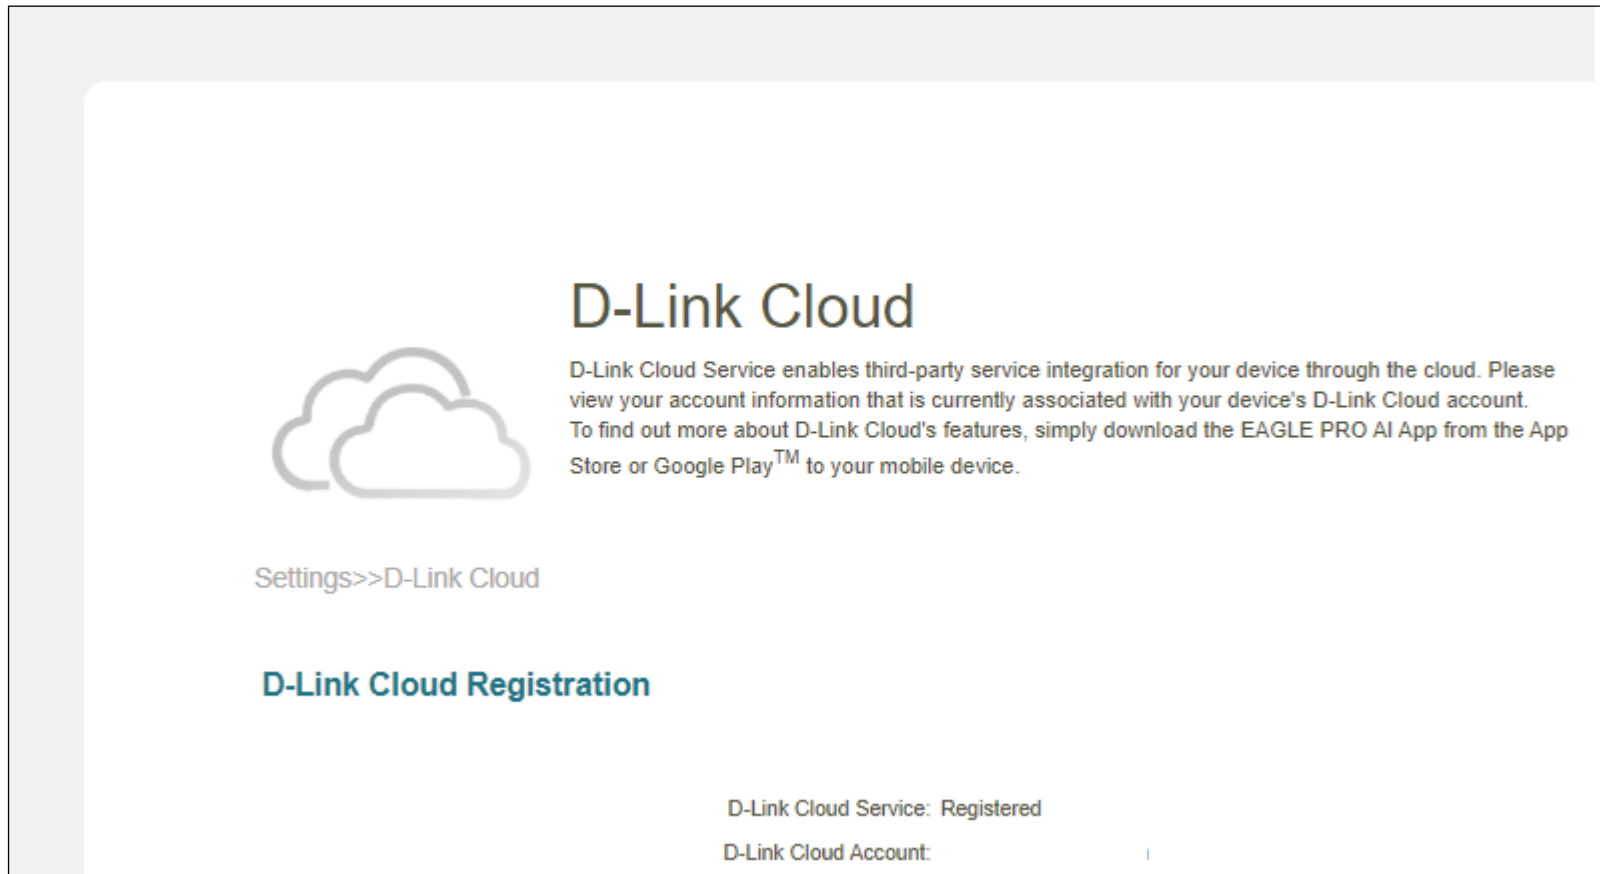

Operation Mode

Go to **Settings > Operation Mode** to select your operation mode. Depending on your network architecture, you can configure the router to function as one of the following types of network device: router or extender.

Router Mode: In this mode, the R03 directly connects to the Internet provided by your ISP (Internet Service Provider). All client devices from a network group are connected and managed under this router. This is the default mode.

Extender Mode: In this mode, this device acts as an extender to connect your wireless devices, expanding Wi-Fi coverage. It provides connectivity between various wireless devices. This can be useful if you already have an existing wireless router. You can then manage the extender through the main router under this mode.

The screenshot shows the 'Operation Mode' configuration page. At the top left is a circular icon with two arrows pointing in opposite directions. The title 'Operation Mode' is centered at the top, with a subtitle below it: 'This device has multiple operating modes. Please choose the one that best suits your needs.' Below the title, the breadcrumb 'Settings >> Operation Mode' is on the left, and a 'Save' button is on the right. The main section is titled 'Operation Mode Settings'. It features a dropdown menu labeled 'Your device operation mode is:' with 'Router Mode' selected. Below this, there is explanatory text: 'In Router mode, the device directly connects to the Internet provided by your Internet Service Provider. All client devices from a network group under this router.' and 'The device operates under Router mode by default.' At the bottom, a network diagram shows 'Internet' (globe icon) connected to 'Your Device' (router icon), which is then connected to 'Wi-Fi Client' (smartphone icon).

Features

Parental Control

Go to **Features > Parental Control** to configure parental control policies. You can configure schedules that set time limits for Internet access and prevent access to certain websites.

Click **Save** at any time to save the changes you have made on this page.


This page displays a list of profiles with the following information:

- Profile Name** The name describes this profile.
- Device Count** The number of devices that this policy will be applied to.
- State** Displays the status of Internet accessibility, i.e. Normal, Schedule Paused, or Paused on Demand.
- Edit** Edit this access profile.
- Delete** Remove this access profile.

To add a profile, configure the following:

Schedule

- Profile Name** Enter a name for this profile.
- Allow Internet Access Time** Click **Enabled** and define the schedule to allow Internet access. Select the time during which the Internet will be available.
 To add a schedule:
 Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule. If no time periods are selected, all devices in this profile will be denied Internet access.

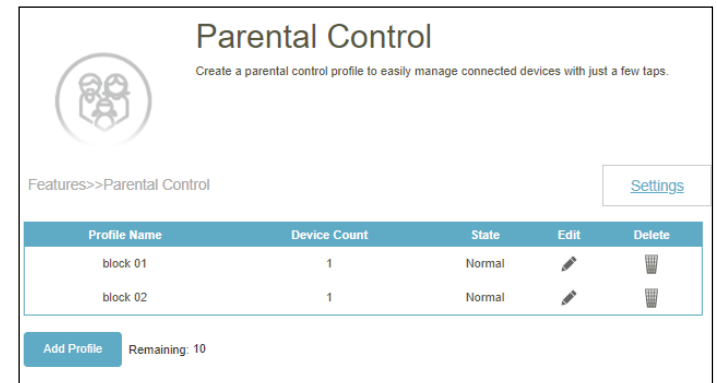

Block Internet Access During Bedtime

Click **Enabled** and define the schedule to block Internet access during bedtime.

To add a bedtime schedule:

Select the days of the week, then select the pause time and the resume time for the time span during which Internet access will be blocked. To specify a different time span for other days of the week, click **Add another Bedtime schedule...** A maximum of 2 schedules can be defined.

Allow Limited Access

Enable this option to allow slow Internet access with reduced speed during restricted hours set above.

You can also modify an existing schedule by clicking **Edit**.

Website Filter

Click **Add Rule** to add a new website to be blocked:


Website Name Enter the name for the website. This blocks access to websites based on a website's address. For example, enter "ABC.com" or "www.ABC.com."




URL Keyword This blocks access to websites based on the keywords with matching URLs. For example, use "ABC" to block "www.ABC.com" and "xxx.ABC.com" and other URLs containing ABC. Enter the same website name as the above in this field to block only the specific URL.

You can also modify or delete an existing rule by clicking **Edit** or **Delete** respectively.

Device

Click **Add Device** to add devices to be in the defined profile. Select the devices from the list of connected devices to which the access policy should be applied, then click **Apply** to close the screen. Click **Save** to save your profile settings and the new profile will be added to the profile list. You can also modify or delete an existing profile by clicking **Edit** or **Delete**

respectively. On the Edit page for a selected profile, you can click  **Pause for Internet access** to pause Internet access to specified devices of the profile immediately.

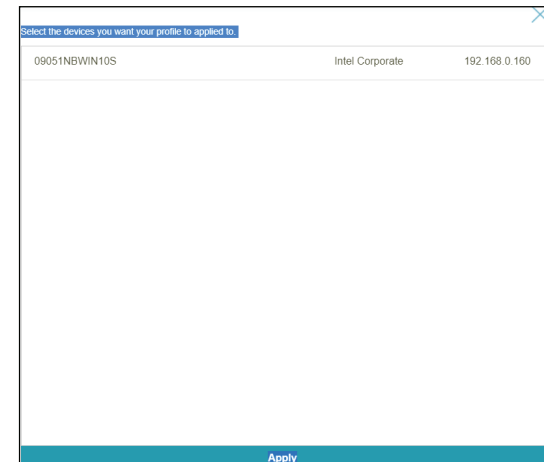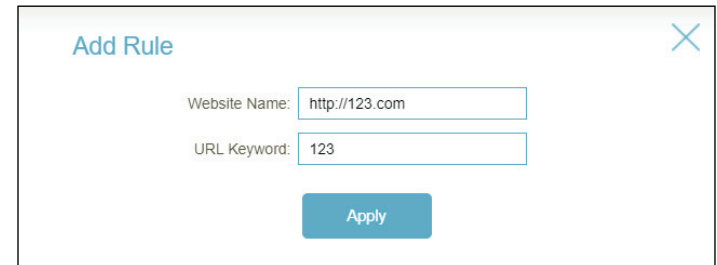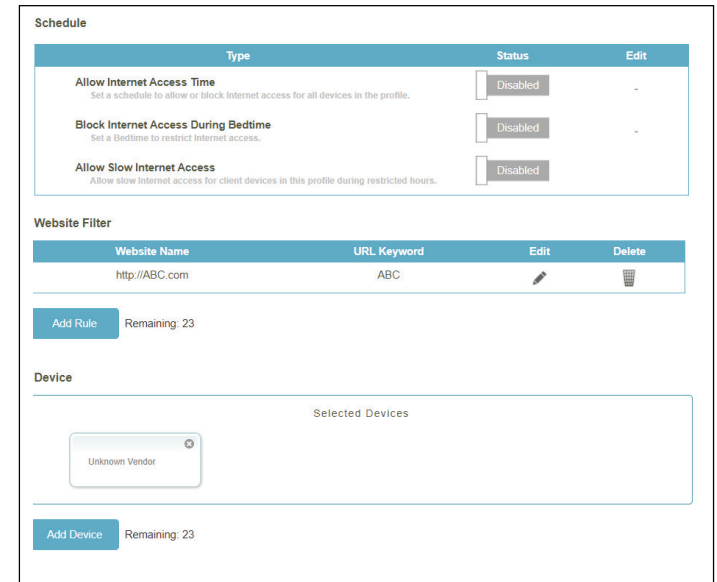

Click **Settings** to view the messages displayed to the device users whose Internet access has been restricted.

Blocked Webpage Message


For these access controls: **Manual Pause Control**, **Website Filter**, **Custom Schedule**, and **Bedtime Schedule**, you can view and customize the messages as well as the titles:

Title Enter the title of the message in the text box.

Description State the message to inform the user about the restricted access.

Reset this message Click this button to reset the modified message to its factory default.

Preview this message Display the presentation of the message on a new webpage.

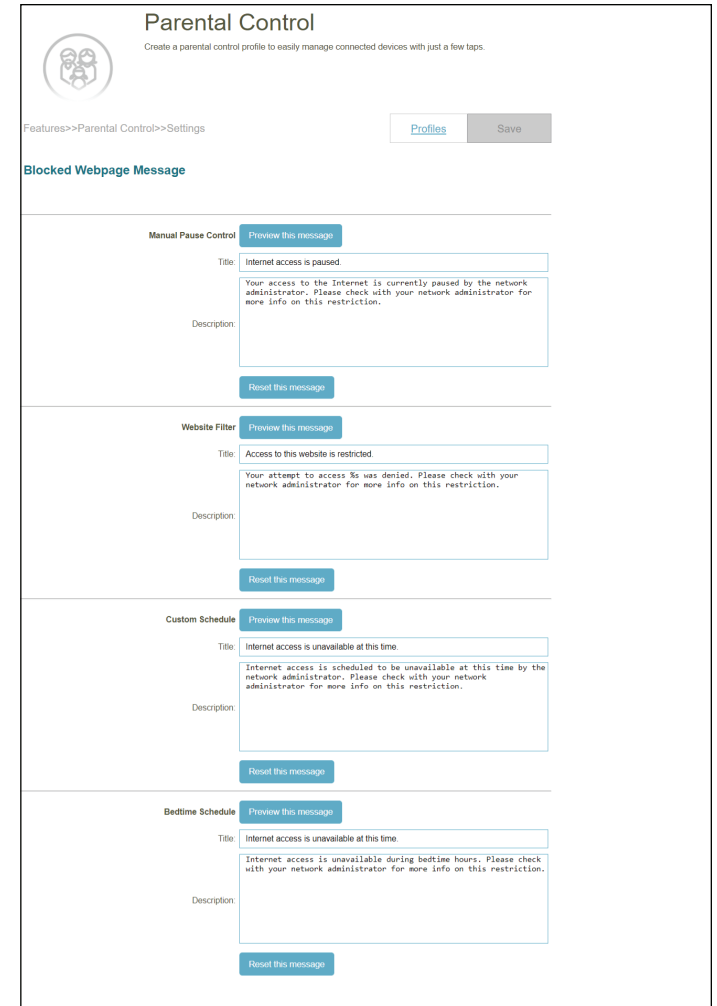

QoS Engine

Go to **Features > QoS Engine** to configure clients' Internet access priorities. It aims to optimize Internet traffic to enhance the overall user experience.

Click **Save** at any time to save the changes you have made on this page.

Click **Check Speed** to run a speed check to obtain the upload and download speeds of your Internet service. Determining Internet speed helps the QoS engine to distribute Wi-Fi bandwidth to prioritized devices (configured in the device cards below).

AI Traffic Optimizer

The advanced QoS Engine is capable of allocating appropriate bandwidth to connected devices based on their priorities to maintain quality Internet experience.

Upload Speed (Mbps)

The rate at which the data is being transferred to the Internet.

Download Speed (Mbps)

The rate at which the data is being transferred to the router.

Click **Apply to QoS** after the Speed Test to automatically fill in the above information.

QoS Engine
Connected clients can be assigned Internet access priority. Click and drag client cards into open slots.

Features>>QoS Engine Save

Internet Speed Checkup:

AI Traffic Optimizer:

Download Speed (Mbps): ⓘ

Upload Speed (Mbps):

Set the download and upload speed based on your ISP subscription plan in order to adjust the QoS engine to provide precise client priorities.

Connected Clients

| | |
|----------------------------------|---------------------------------|
| DCS-8528LH ⓘ Priority: Normal | undefined ⓘ Priority: Normal |
|----------------------------------|---------------------------------|

This **Quality of Service (QoS) Engine** allows you to prioritize particular clients over others, so that these clients receive higher bandwidth. For example, if one client is streaming a movie and another is downloading a bulk of files, you might want to assign the former device a higher priority than the latter so that the movie streaming is not disrupted.

Under **Connected Clients**, you will see device cards representing each connected client.

To assign a priority level to a device, enable **AI Traffic Optimizer** first. Then click the client to open its information page. It shows the following information:


Device Name: The name that describes the client device.

MAC Address: The MAC address of the client device.

IPv4/IP v6 Address: The IP address in IPv4 and IPv6 addressing mechanism of the client device.

Priority: Select the priority for the client device with the following categories:

Normal; High: Always Enable, for **1 Day**, for **4 Hours**, for **2 Hours**, or for **1 Hour**; **Low: Always Enable**, for **1 Day**, for **4 Hours**, for **2 Hours**, or for **1 Hour**.

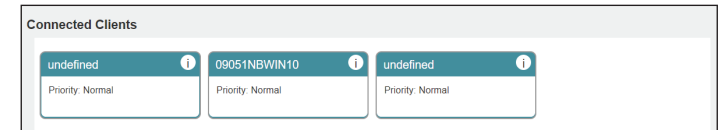

Firewall

Go to **Features > Firewall** to configure the router's firewall settings. The firewall feature helps protect your network from malicious attacks over the Internet.

To configure the IPv4 firewall rules, click the **IPv4 Rules** tab. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 70

To configure the IPv6 firewall rules, click the **IPv6 Rules** tab. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 70

Click **Save** at any time to save the changes you have made on this page.

Enable DMZ Enable or disable Demilitarized Zone (DMZ). Devices in this zone are completely exposed to threats over the Internet. This is not recommended unless they are servers that must be exposed to the WAN.


DMZ IP Address If you enable DMZ, enter the IP address of the client to be placed in this zone, or use the drop-down menu to quickly select one of the clients.

Enable SPI IPv4 Enabling Stateful Packet Inspection (SPI) or dynamic packet filtering helps prevent cyber attacks by tracking more states per session to validate that the traffic passing through the session conforms to the protocol.

Enable Anti-spoof Checking Enable this feature to help protect your network from certain kinds of "spoofing" attacks.

IPv6 Simple Security Enable or disable IPv6 simple security. A simple firewall configuration that denies access directly to computers behind the router.

IPv6 Ingress Filtering Enable or disable IPv6 ingress filtering for incoming packets to prevent suspicious senders.

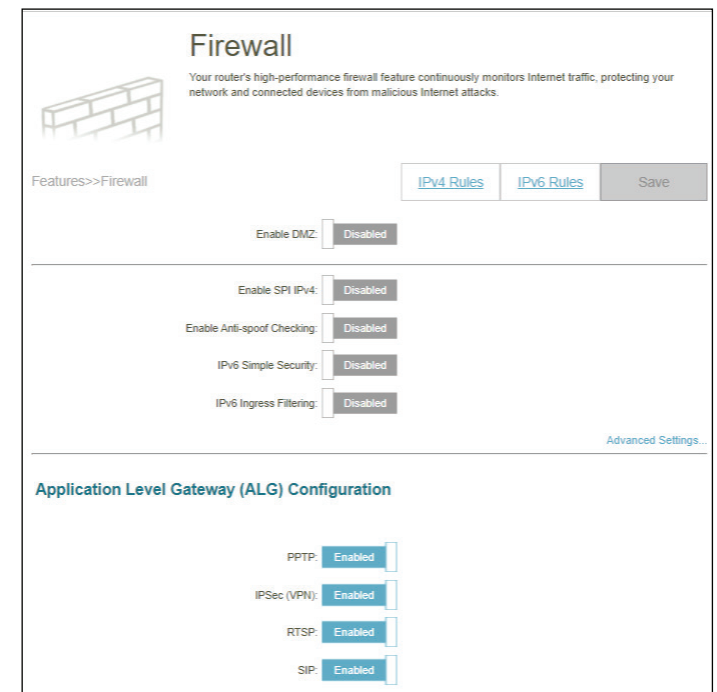

Advanced Settings... - Application Level Gateway (ALG) Configuration


Different ALGs provide special handling for specific protocols or applications. A number of ALGs for common applications are enabled by default as stated below.

PPTP Allows multiple machines on the LAN to connect to their corporate network using the PPTP protocol.

IPSec (VPN) Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This Application Level Gateway (ALG) may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.

RTSP Allows applications that uses Real Time Streaming Protocol (RTSP) to receive streaming media from the Internet.

SIP Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This ALG may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.

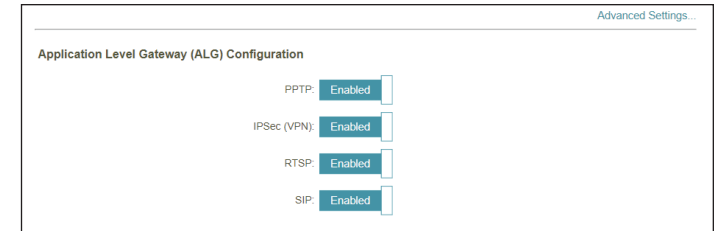



Firewall Settings - IPv4/IPv6 Rules


Go to **Features > Firewall**, then click the **IPv4 Rules** tab or the **IPv6 Rules** tab to configure rules for traffic filtering based on parameters like IP addresses with port numbers.

To configure the Firewall Advanced settings, click the **Advanced** link. Refer to **Firewall** on page **68**

Click **Save** at any time to save the changes you have made on this page.

To begin, use the drop-down menu to select whether it is an **ALLOW** or **DENY** rule. You can also choose to turn filtering **OFF**.

If you want to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

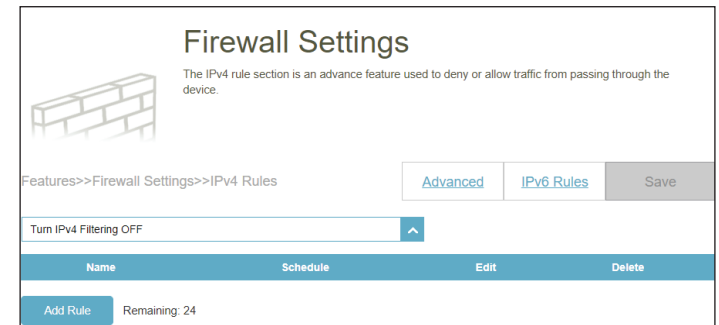

If you click **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Source IP Address Range** Enter the source IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Destination IP Address Range** Enter the destination IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Protocol & Port Range** Select the protocol of the traffic to allow or deny (**Any, TCP, or UDP**) and then enter the range of ports (e.g. 21-23) that the rule will apply to. Select **Any** to allow/deny all types of traffic regardless of the port number.
- Schedule** Use the drop-down menu to select the time schedule for the rule. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Management > Time & Schedule - Schedule** on page **81** for more information.



A maximum of 24 rules can be defined.


Port Forwarding

Go to **Features > Port Forwarding** to specify a port or range of ports to open for specific devices on the network. This might be necessary for certain applications to connect through the router. For example, access from the Internet can be redirected to a DMZ host using Port Forwarding.

To configure the Virtual Server settings, click the **Virtual Server** link. Refer to **Port Forwarding - Virtual Server** on page **74**.

Click **Save** at any time to save the changes you have made on this page.

If you want to remove a rule, click  in the Delete column. If you want to edit a rule, click  in the Edit column. If you want to create a new rule, click the **Add Rule** button.

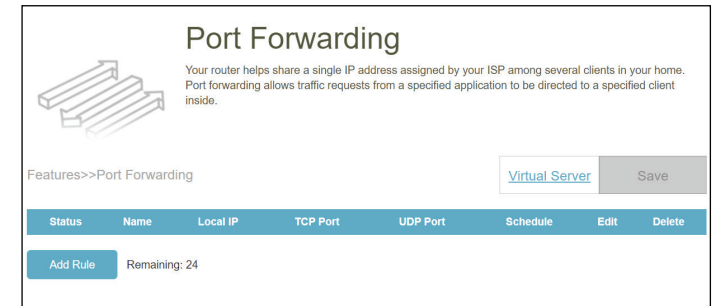

If you click **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Local IP** Enter the IP address of the computer on your local network to which you want to direct the incoming service. Alternatively, select the device from the drop-down menu.
- TCP Port** Enter the TCP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- UDP Port** Enter the UDP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- Schedule** Use the drop-down menu to select the time schedule for the rule. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Management > Time & Schedule - Schedule** on page **81** for more information.

The screenshot shows a 'Create New Rule' dialog box. It features a title bar with the text 'Create New Rule' and a close button (X) in the top right corner. The main area contains the following fields and controls:



- Name:** A text input field.
- Local IP:** A text input field followed by a dropdown menu currently displaying '<< Computer Name'.
- TCP Port:** A text input field.
- UDP Port:** A text input field.
- Schedule:** A dropdown menu currently set to 'Always Enable'.
- Apply:** A teal button located at the bottom right of the dialog.


Port Forwarding - Virtual Server

Go to **Features > Port Forwarding** then click the **Virtual Server** tab to configure its settings and specify a public port on your router for redirection to an internal LAN IP with a mapped port. This might be necessary if you are hosting services behind the router.

To configure the Port Forwarding settings, click the **Port Forwarding** link. Refer to **Port Forwarding** on page **72**

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

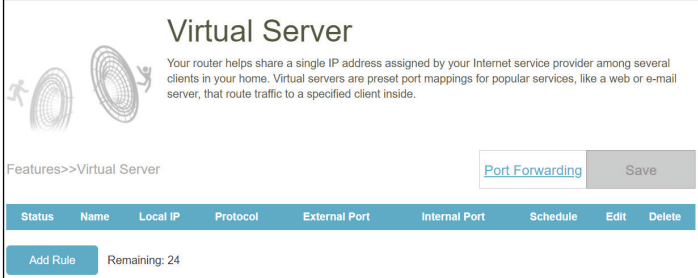

The screenshot shows the 'Virtual Server' configuration page. At the top, there is a title 'Virtual Server' and a brief description: 'Your router helps share a single IP address assigned by your Internet service provider among several clients in your home. Virtual servers are preset port mappings for popular services, like a web or e-mail server, that route traffic to a specified client inside.' Below the description, there is a breadcrumb trail 'Features>>Virtual Server' and two buttons: 'Port Forwarding' (highlighted) and 'Save'. A table with the following columns is visible: Status, Name, Local IP, Protocol, External Port, Internal Port, Schedule, Edit, and Delete. At the bottom left, there is an 'Add Rule' button and a 'Remaining: 24' indicator.

If you click on **Edit** or **Add Rule**, the following options will appear:

Name Enter a name for the rule. Alternatively, select the protocol/Application Name from the drop-down menu. Depending on the requested service, the router redirects the external service request to the appropriate internal host.

Local IP Enter the IP address of the computer on your local network that you want to direct the incoming service to. Alternatively, select the device from the drop-down menu.

Protocol Select the protocol of the traffic to allow or deny (**TCP**, **UDP**, **Both**, or **Other**).

Protocol Number If you entered **Other** above, enter the protocol number. Refer to <https://www.iana.org/assignments/protocol-numbers/protocol-numbers.xhtml> for Assigned Internet Protocol Numbers.

External Port Enter the public port you want to open.

Internal Port Enter the private port you want to open.

Schedule Use the drop-down menu to select the time schedule for the rule. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **81** for more information.

The screenshot shows a 'Create New Rule' dialog box with the following fields and values:



- Name:** [Empty text box] << Application Name [Dropdown arrow]
- Local IP:** [Empty text box] << Computer Name [Dropdown arrow]
- Protocol:** TCP [Dropdown arrow]
- External Port:** [Empty text box]
- Internal Port:** [Empty text box]
- Schedule:** Always Enable [Dropdown arrow]
- Apply** [Button]


Static Routes - IPv4

Go to **Features > Static Routes** to define custom routes to control how traffic moves around your network.

To configure the Static Route IPv6 settings, click the **IPv6** tab. Refer to **Static Routes - IPv6** on page 77

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

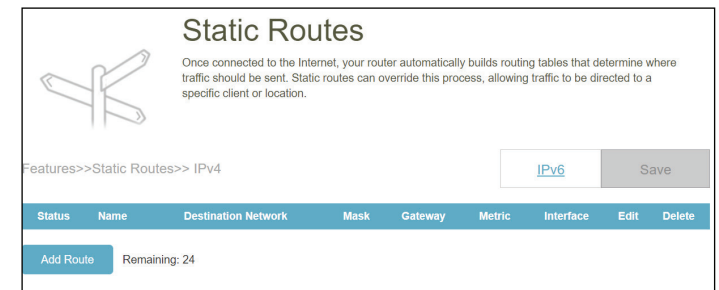

If you click on **Edit** or **Add Route**, the following options will appear:

Name Enter a name for the route.

Destination Network Enter the destination IP address of the subnetwork.

Mask Enter the subnet mask of the destination address.

Gateway Enter the IP address of the next hop, which is the gateway to the remote network.

Metric Enter a route metric value between 1 and 16. This value indicates the cost of using this route.



Interface Select the interface that the IP packet will use to transit out of the router when this route is used.


Static Routes - IPv6

Go to **Features > Static Routes**, then click **IPv6** to configure the IPv6 Static Routes.

To configure the Static Route IPv4 settings, click the **IPv4** tab. Refer to **Static Routes - IPv4** on page **76**.

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

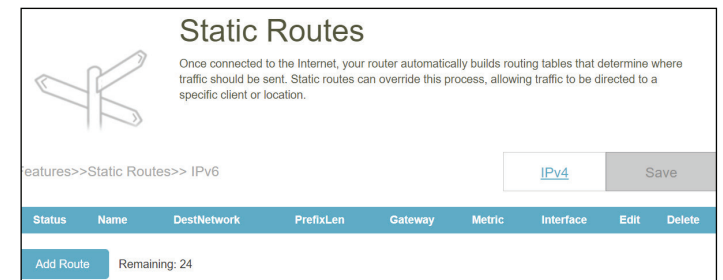

If you click on **Edit** or **Add Route**, the following options will appear:

- Name** Enter a name for the route.
- DestNetwork** Enter the destination IPv6 address of the subnetwork or the prefix, for example, 2010:db9:abcd:1234::
- PrefixLen** Enter the prefix length, which is the number of prefix bits of the IPv6 address. Enter a value between 64 and 128.
- Gateway** Enter the IP address of the next hop, which is the gateway to the remote network.
- Metric** Enter a route metric value between 1 between 128. This value indicates the cost of using this route.
- Interface** Select the interface that the IP packet will use to transit out of the router when this route is used.

Dynamic DNS

Go to **Features > Dynamic DNS**. This page provides a method of associating a fixed domain name such as [YourDomainName].com with a regularly changing IP address assigned by your Internet Service provider. This feature is helpful when running a virtual server.

Click **Save** at any time to save the changes you have made on this page.

- Enable Dynamic DNS** Enable or disable dynamic DNS. Enable this feature to display more configuration options.
- Status** Displays the current dynamic DNS connection status.
- Server Address** Select the DDNS service provider from the drop-down menu.
- Host Name** Enter the host name that you registered with your dynamic DNS service provider.
- User Name** Enter your dynamic DNS account name.
- Password** Enter your dynamic DNS account password.
- Time Out** Enter a time-out value (in hours) to indicate how often the router should update its Dynamic DNS settings.

Dynamic DNS

Dynamic Domain Name Service allows your router to associate an easy-to-remember domain name such as [YourDomainName].com with the regularly changing IP address assigned by your Internet Service provider. This feature is helpful when running a virtual server.

Features >> Dynamic DNS Save

Enable Dynamic DNS: Enabled

Status: Disconnected

Server Address: ^

Host Name:



User Name:

Password:

Time Out: hours

| Status | Host Name | IPv6 Address | Edit | Delete |
|---|-----------|--------------|------|--------|
| <input type="button" value="Add Record"/> Remaining: 10 | | | | |

At the bottom of the page are the IPv6 host settings.

If you wish to remove a record, click  in the Delete column. If you wish to edit a record, click  in the Edit column. If you wish to create a new record, click the **Add Record** button.

Host Name Enter the host name that you registered with your dynamic DNS service provider.

IPv6 Address Enter the IPv6 address of your host or server for DDNS configuration. Alternatively, select the network interface from LAN devices for DDNS configuration.

A maximum of 10 records can be defined.

| Status | Host Name | IPv6 Address | Edit | Delete |
|------------|---------------|--------------|------|--------|
| Add Record | Remaining: 10 | | | |

Create New Record ✕

Host Name:

IPv6 Address: << Computer Name ▾

Management

Time & Schedule - Time

Go to **Management > Time & Schedule**. The **Time** page allows you to configure, update, and maintain the correct time on the internal system clock. From here you can set the time zone and the Network Time Protocol (NTP) server.

To configure the Schedule settings, click the **Schedule** tab. Refer to **Time & Schedule - Schedule** on page **81**

Click **Save** at any time to save the changes you have made on this page.

Time Configuration

Time Zone Select your time zone from the drop-down menu.

Time Displays the current system date and time.

Time

Your device's internal clock is used for time sensitive applications, such as firmware online checking, data logging and schedules for features. The date and time can be synchronized with a public time server through the Internet.

Management >> Time

Schedule Save

Time Configuration

Time Zone: Asia/Taipei

Time: 2021/07/25 12:02:53 AM

Automatic Time Configuration

NTP Server: D-Link NTP Server D-Link NTP Server

Automatic Time Configuration

NTP Server Select from the drop-down menu to use one of the following servers to synchronize the time and date for your router: D-Link NTP Server or Google NTP Server. Choose Manual to set the NTP server's IP address or server name.

Automatic Time Configuration



NTP Server: Manual

Time & Schedule - Schedule

Go to **Management > Time & Schedule**, then click the **Schedule** tab. The **Schedule** page allows you to control some of the functions based on a pre-configured schedule, for example, Port Forwarding in **Features > Port Forwarding** and Firewall Settings in **Features > Firewall** as well as sending system logs via email in **Management > System Log**.

To configure the Time settings, click the **Time** tab. Refer to **Time & Schedule - Time** on page 80

Click **Save** at any time to save the changes you have made on this page.



If you wish to remove a schedule, click  in the Delete column. If you wish to edit a schedule, click  in the Edit column. If you wish to create a new schedule, click the **Add a Schedule** button.

On the Schedule creation page, enter a name for your schedule in the **Name** field.

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** to save and close the page. Then click **Save** when you are done creating schedules.

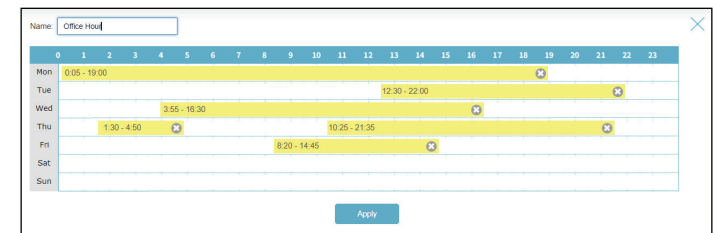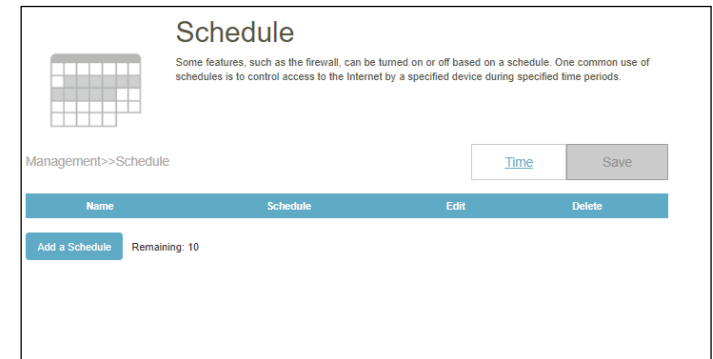

System Log

Go to **Management > System Log**. The router keeps a running log of events. This log can be sent to a Syslog server or to your email address.

Click **Save** at any time to save the changes you have made on this page.

Log Settings

System Log

Click the **Check System Log** button to download a text file containing the system log. You can view the log entries using any text editor such as WordPad on Windows.

SysLog Settings

Enable Logging to Syslog Server

Check this box to send system logs to a SysLog Server.

SysLog Server IP Address

Configurable if **Enable Logging to Syslog Server** is enabled. Enter the IP address of the Syslog server. If the Syslog server is connected to the router, select it from the drop-down menu to automatically populate the field.

The screenshot shows the 'System Log' configuration page. At the top, there is a title 'System Log' and a brief description: 'On-board diagnostics run continually in the background to monitor the health of your router. The results are recorded in the system log if it is enabled. This info can be used to diagnose common problems or help Customer Support resolve issues more quickly.' Below this, there is a breadcrumb 'Management >> System Log' and a 'Save' button. The page is divided into three sections: 'Log Settings' with a 'Check System Log' button; 'SysLog Settings' with a checkbox for 'Enable Logging to Syslog Server' (currently 'Disabled'); and 'E-mail Settings' with a checkbox for 'Enable E-mail Notification' (currently 'Disabled').

E-mail Settings

Enable E-mail Notification

Enable this option if you want the logs to be automatically sent to an email address.

If you turn on **Enable E-mail Notification**, configure the following:

From E-mail Address

Enter the sender's email address of the SysLog messages.

To E-mail Address

Enter the recipient's email address.

SMTP Server Address

Enter the SMTP server address.

SMTP Server Port

Enter the SMTP server port. The default is 25.

Enable Authentication

Enable this if your SMTP server requires authentication.

Account Name

Enter your SMTP account name.

Password

Enter your SMTP account's password.

E-mail Log When Full or On Schedule

Send When Log Full

If enabled, this option will set the router to send the log when the log buffer is full. The email account for sending logs is configured in the above section.

Send on Schedule

If enabled, this option will set the router to send the log according to a set schedule periodically, so the administrator is always up to date on the operation of the router. The email account for sending logs is configured in the above section.

Schedule

If you enable Send On Schedule, use the drop-down menu to select a schedule to apply. The schedule may be set to Always Enable, or you can create your own schedules on the Schedule page. Refer to **Time & Schedule - Schedule** on page **81** for more information.

System Admin - Admin

Go to **Management > System Admin**. The Admin page will allow you to change the administrator (Admin) password.

To configure the System settings, click the **System** tab. Refer to **System Admin - System** on page 85

Click **Save** at any time to save the changes you have made on this page.

Admin Password

Password Enter a new password for the administrator account. You will need to enter this password whenever you configure the router using a web browser or add the router to EAGLE PRO AI.

Advanced Settings... - Administration

Enable HTTPS Management Enable router management using an encrypted HTTP connection.

Enable HTTPS Remote Management Enable remote management over the Internet using an encrypted HTTP connection.

Remote Admin Port Specify the port number for accessing the web configuration interface. The default is 8081.

LED Control

Status LED Turn the LED status lights on or off.

The screenshot shows the 'Admin' configuration page. At the top, there is a key icon and the title 'Admin'. Below the title, a message states: 'The administrator can change device's settings. To keep your device secure, you should give have a strong password.' A breadcrumb trail reads 'Management >> Admin'. There are two buttons: 'System' and 'Save'. The 'Admin Password' section features a password input field with masked characters and a link for 'Advanced Settings...'. The 'Administration' section contains four settings: 'Enable HTTPS Management' (Disabled), 'Enable HTTPS Remote Management' (Disabled), 'Remote Admin Port' (8081), and 'Use HTTPS' (Disabled). The 'LED Control' section has a 'Status LED' toggle set to 'On'.

System Admin - System

Go to **Management > System Admin**, then click **System**. This page allows you to save the router's current configuration, load a previously saved configuration, reset the router to its factory default settings, or reboot the router.

To configure the Admin settings, click the **Admin** tab. Refer to **System Admin - Admin** on page **84**

Click **Save** at any time to save the changes you have made on this page.

System

Save Settings to Local Hard Drive

This option will save the current router configuration settings to a file (bin type) on your computer.

Load Settings from Local Hard Drive

This option will load a previously saved router configuration file. This will overwrite the router's current configuration.

Restore to Factory Default Settings

This option will restore the router back to the default configurations stored in the firmware. Any settings that have not been saved will be lost, including any rules that you have created. If you want to back up the current router configuration settings before restoring to factory defaults, use the **Save Settings to Local Hard Drive** function above.

Auto Reboot Configuration

Reboot the Device

Click this button to reboot the router immediately.

Auto Reboot

You may set the router to automatically reboot at a set time. The options are **Never**, **Daily**, or **Weekly**. You may set the day, as well as the hour and minute of the day for automatic reboot.

The screenshot shows the 'System' configuration page. At the top, there is a gear icon and the text 'System'. Below this, a message states: 'This page lets you save your router's current settings to a file, restore your settings from a file, restore your router to factory default settings, or reboot the device. Please note that restoring the settings to the factory defaults will erase all settings, including any rules you have created.' There are two tabs: 'Admin' (selected) and 'Save'. Below the tabs, the 'System' section contains three options: 'Save Settings To Local Hard Drive' with a 'Save' button, 'Load Settings From Local Hard Drive' with a 'Select File' button, and 'Restore To Factory Default Settings' with a 'Restore' button. Below this is the 'Auto Reboot Configuration' section, which includes 'Reboot The Device' with a 'Reboot' button and 'Auto Reboot' with a dropdown menu set to 'Never'.

The screenshot shows the 'Auto Reboot Configuration' page. It features a 'Reboot The Device' button labeled 'Reboot'. Below it, the 'Auto Reboot' dropdown is set to 'Weekly'. The 'Day of week' dropdown is set to 'Mon'. The 'Time' is set to '12 AM' and '00' (Hour/Minute).

Upgrade

Go to **Management > Upgrade**. This page allows you to upgrade the router's firmware, either automatically or manually. To manually upgrade the firmware, you must first download the firmware file from <http://support.dlink.com>.

Click **Save** at any time to save the changes you have made on this page.

Firmware Information

Current Firmware Version Displays the current firmware version.

Check for New Firmware Click this button to prompt the router to automatically check for a new firmware version. If a newer version is found, it will prompt you to install it.

Upgrade Manually

Select File If you wish to upgrade manually, first download the firmware file. Then, click the **Select File** button and locate the file to install the new firmware.

Automatic Firmware Upgrade

Automatic Upgrade If enabled, the router will automatically upgrade to the newest firmware. The system will automatically upgrade to the latest firmware every day at 3:30-4:00 AM.

Choose Upgrade Time Enable this function to set the router to automatically upgrade its firmware at a set time every day.

Upgrade Time Configurable if **Choose Upgrade Time** is enabled. Set the hour and minute for automatic upgrade.

The screenshot shows the 'Upgrade' page in a web browser. At the top left is a circular arrow icon with 'FW' in the center. To its right is the title 'Upgrade' and a paragraph of text: 'Your device can automatically detect firmware updates, but requires your authorization to install them. You can also check for new firmware manually, and upgrade it from a local file. Firmware may use code that is subject to the GPL licenses. For more information, visit <http://tsd.dlink.com.tw/GPL.asp>.' Below this is the breadcrumb 'Management > Upgrade' and a 'Save' button. The 'Firmware' section displays 'Current Firmware Version: 1.00.04' and a 'Check for New Firmware' button. The 'Automatic Firmware Upgrade' section has 'Automatic Upgrade' set to 'Enabled' and 'Choose Upgrade Time' set to 'Disabled'. The 'Upgrade Time' is set to '3:30 AM'. The 'Upgrade Manually' section has an 'Upgrade Firmware' label and a 'Select File' button.

Statistics


Go to **Management > Statistics**. On the Statistics page you can view the amount of traffic that passes through the router on the Internet and LAN interfaces, and the traffic from Wi-Fi 2.4 GHz network.

Router

You can view the **Internet**, **LAN**, and **Wi-Fi 2.4 GHz** traffic by clicking the respective tab at the top. The real-time graph of network traffic will be shown.

The table below for each interface and radio frequency shows the total number of packets and data that are sent and received through the interface.

The traffic counter will reset if the device is rebooted.

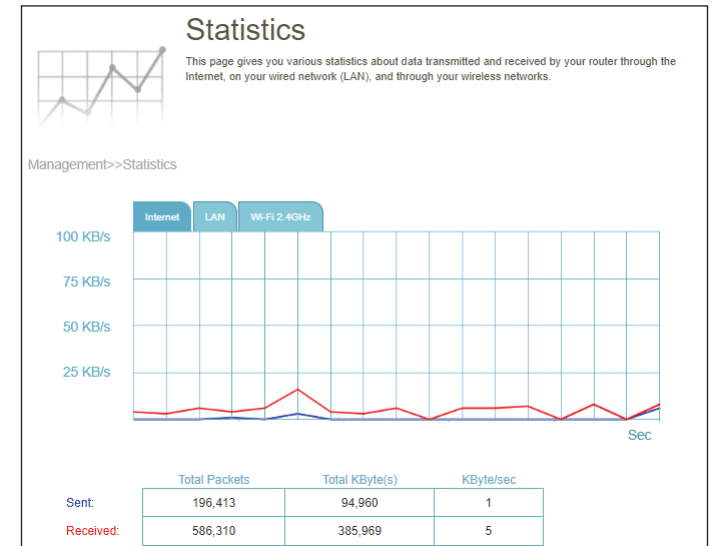

EAGLE PRO AI

With the EAGLE PRO AI on your smart devices, you can get the R03 up and running quickly. Just plug in the router, open the app and build your home network by following the easy instructions on the screen. The new EAGLE PRO AI is especially designed to ease your management work with the following features:


AI Wi-Fi Optimizer: Enable this feature to always connect to the cleanest Wi-Fi Channel for optimal transmission and receive information about automatic optimization for continuous improvement in the Wi-Fi environment.


AI Traffic Optimizer: The QoS engine controls traffic flows based on assigned priorities to improve the overall user experience.

AI Assistant: The message center reports Wi-Fi environment conditions and optimization performed by AI Wi-Fi Optimizer.

Profile-based Parental Control: The Parental Control provides the highest flexibility of Internet accessibility and website filtering. It allows administrators to control the availability of Internet access and speed on individual devices during the designated time periods.

AI Wi-Fi Optimizer:

To enable this function, open the app. From the **Home** screen, tap **Wi-Fi** and tap . Then tap the slider for **AI Wi-Fi Optimizer**. Turn on Wi-Fi Optimizer to have your wireless connection adopting an interference-free channel automatically and receive weekly Wi-Fi environment reports every Monday at 8 AM local time.


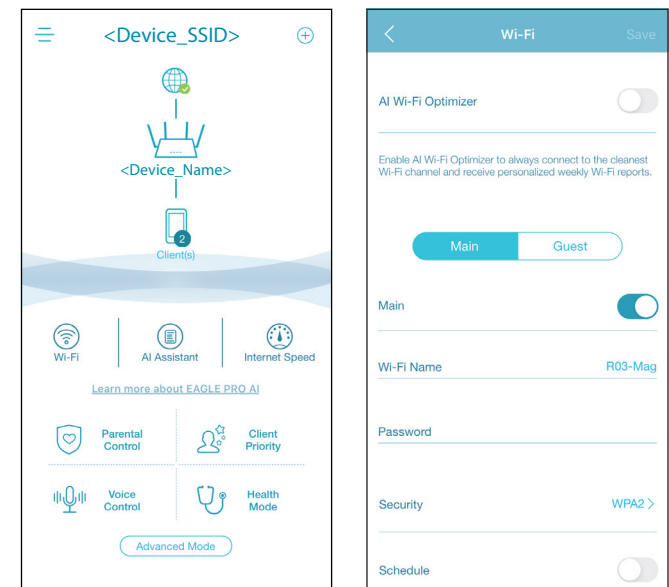


AI Traffic Optimizer:

To enable this function, open the app. From the **Home** screen, tap the main router, scroll down the **Device Info** screen to **Settings**, and tap **QoS**. Then tap the slider for **AI Traffic Optimizer**.

Before you start the AI Traffic Optimizer, run Internet speed test from the **Home** screen (go to **Home > Internet Speed**) to set the download and upload speeds to assist the QoS engine in distributing the bandwidth to prioritized clients.

To prioritize clients, tap **Client Priority** from the **Home** screen. Tap a client device and assign a priority level with effective duration to this device. High priority devices running online games, video conferences, or other real-time programs will then have the best access.

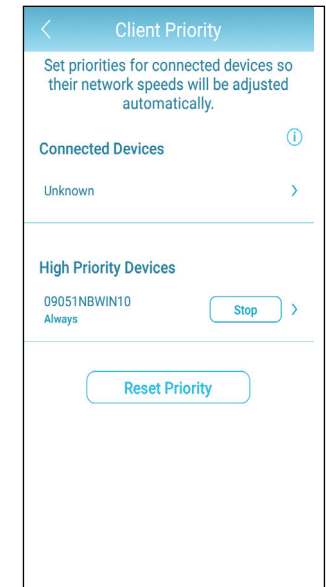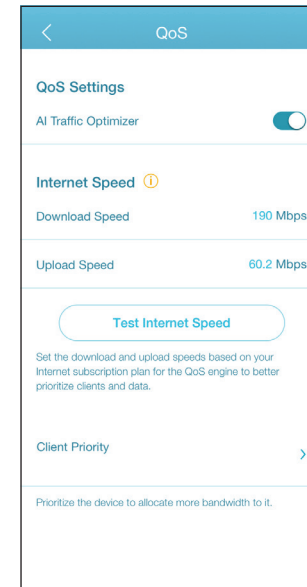

Profile-based Parental Control:



To enable this function, open the app. From the **Home** screen, tap **Parental Control**.

Then use the following procedure to add a new control profile:



1. Tap **Start**.
2. Name this profile. Then tap **Next** to continue.
3. Select client devices to which the profile will be applied.
4. Tap **Done** to proceed.
5. The profile summary will be displayed. On this page you can tap **Pause** to pause Internet immediately to the devices specified in the profile.

You can set schedules to restrict Internet access.

Use **Block Bedtime Internet Access** to block Internet access during the defined time periods for the specified days. Use **Allow Scheduled Internet Access** to allow Internet access only within the specified days and times. Users cannot access the Internet except during the hours that you specify. Note that bedtime restriction takes precedence over the allowed schedules here.

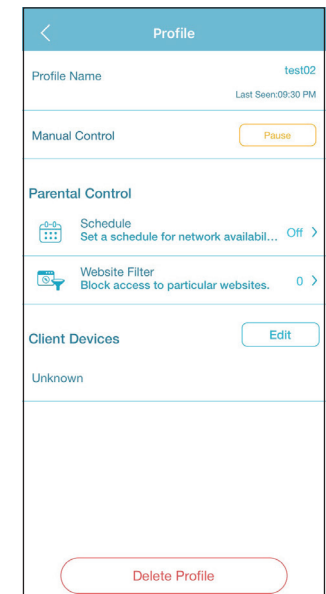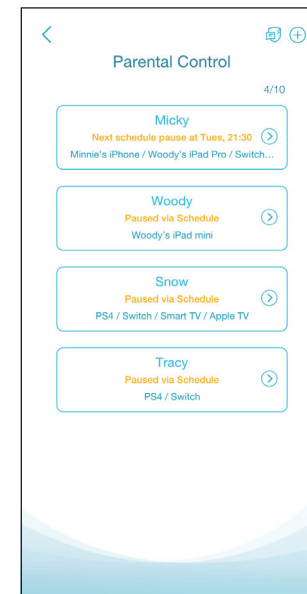

You can also block specific websites on this page to prevent the specified devices from accessing these websites. To do this, tap **Website Filter**, tap **Add Website**, then enter the website name and the domain keyword, for example, enter *violent.com* to block all access to this site and *violent* to block domain names that contain this keyword. Then tap **Add** at the top right.

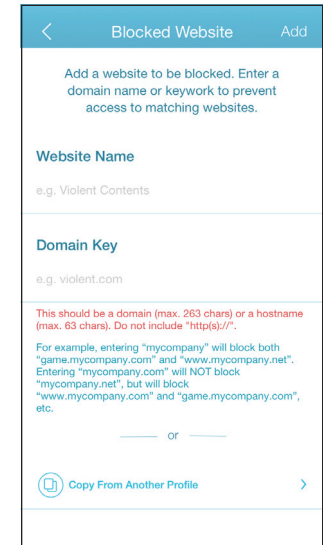
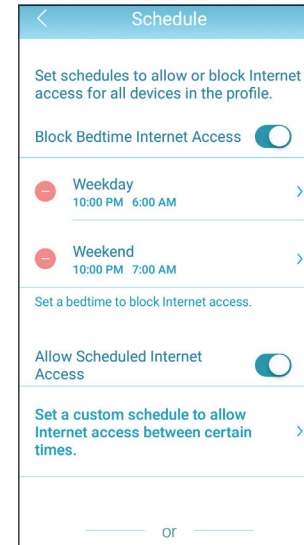


AI Assistant:

Tap **AI Assistant** to display weekly reports on Wi-Fi conditions. Weekly reports also inform you about automatic optimization in action when congestion occurs and provides qualitative rating on your Wi-Fi environment.

This app enables you to proactively improve sleep quality by restricting Internet access during nighttime. Tap **Health Mode** to set the bedtime during which Internet access will be blocked on *all* devices within the network.

Note: The bedtime scheduling also restricts local access by disabling Wi-Fi connectivity. However, remote management through the Internet is allowed.

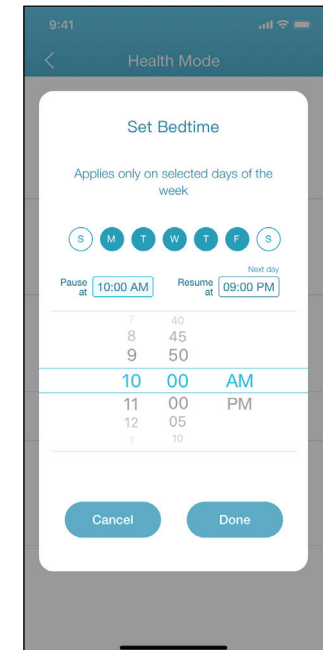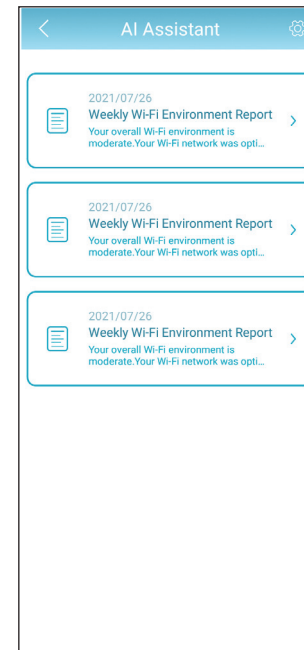


Other Features

Advanced Mode

The advanced mode provides links to the web configuration interface of the device. Note that this feature is only available with local access (i.e. connected within the same Wi-Fi network). To access, go to **Home > Advanced Mode**.


Device Information and Settings

From **Home**, tap the **device (router)** of the illustrated network topology to view its information and settings: name, IP and MAC address, hardware and firmware version, time zone, and model number. You can also configure the Internet connection method and change the device password on this page. It also provides basic device maintenance functions: reboot, LED indicator on/off, factory reset, and device identification with flashing LED.

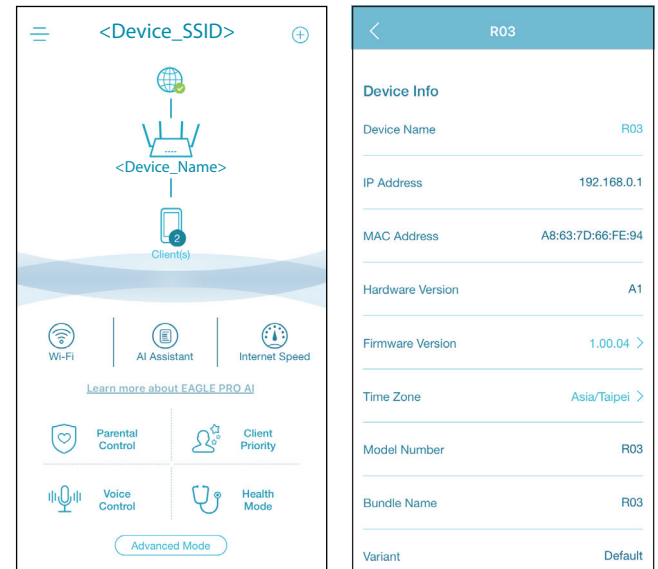


Client Information with Assigned Parental Control Profile

From **Home**, tap the **device (Clients)** of the network topology to view the clients currently online and blocked. Tap a device to obtain its information: name, IP and MAC address, and parental control profile. The Priority function allows you to assign a High/Low priority with an effective duration for this device: Always, 1 Day, 4 Hours, 2 Hours, or 1 Hour.

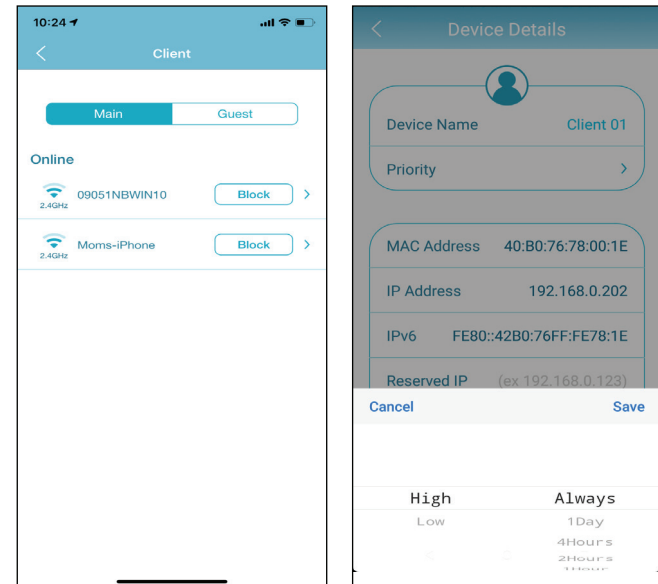

Voice Control

With the R03, you can command your router's functionality with your voice through Amazon Alexa and the Google Assistant, enabling you to control your network with voice commands. Features include enabling and disabling your Wi-Fi guest zone without logging in to the web interface, rebooting the router, and checking your router for firmware upgrades. In order to use third-party services to control and manage your device, please register your device with D-Link Cloud Service first.

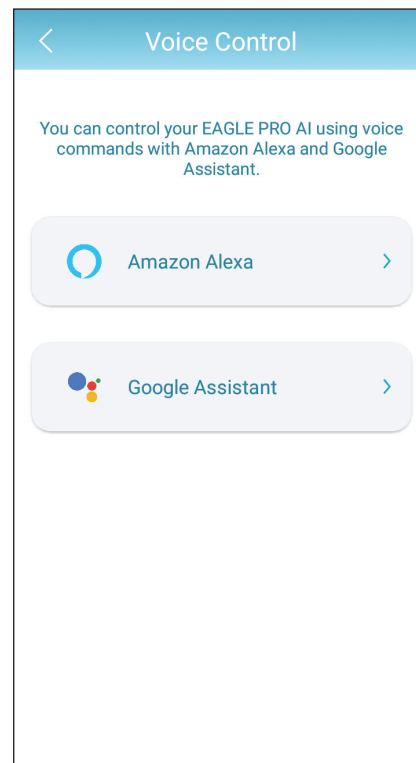

Link D-Link Cloud Service with Other Services

In order to use third-party apps to control and manage your device, you will first need to link your D-Link account with the app such as Google Assistant.


Step 1

Launch EAGLE PRO AI and go to the **Home** screen.




Step 2

Tap **Voice Control** from the **Home** screen.

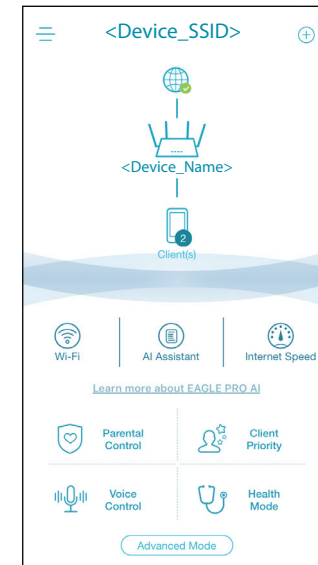


Step 3

Choose the cloud service.

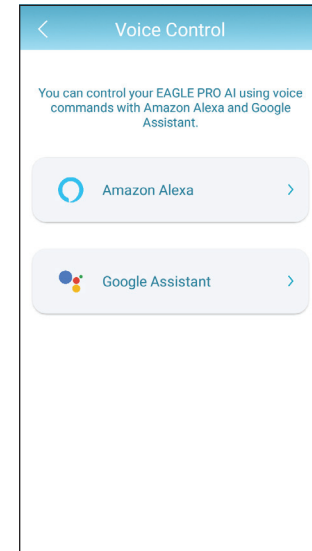


Step 4

Link your Google account.

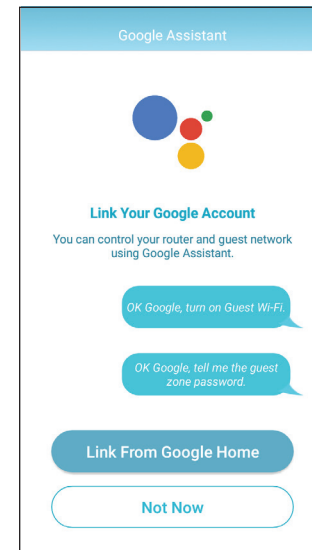

Step 5


The Google Home app will be launched.

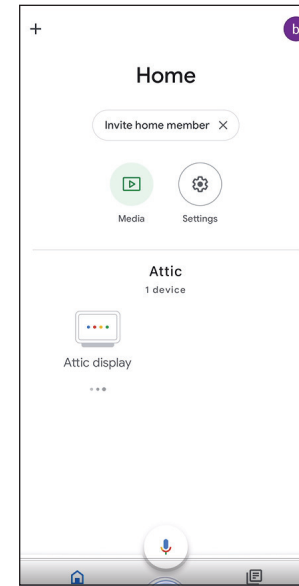

Step 6


Link your registered account with Google. Depending on your system, note that if the account link page does not display, please tap "+" on the top left from the above step to add the device manually:

Tap + **Set up device**, choose **Works with Google**, and search for EAGLE PRO AI. Then sign in using your registered D-Link account.

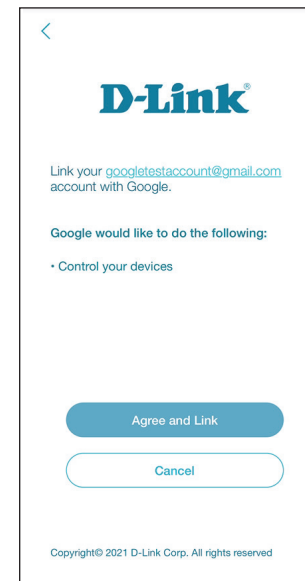


Step 7

Choose your device.

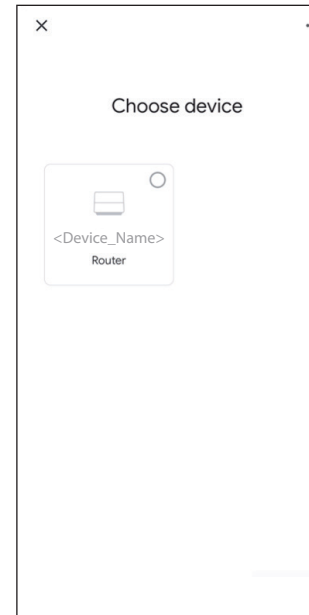


Step 8

Choose a home.

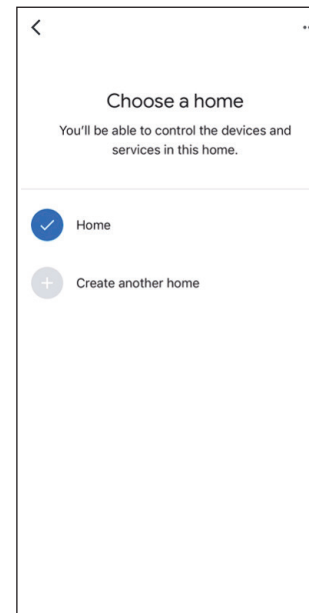


Step 9

Choose a location for your device.

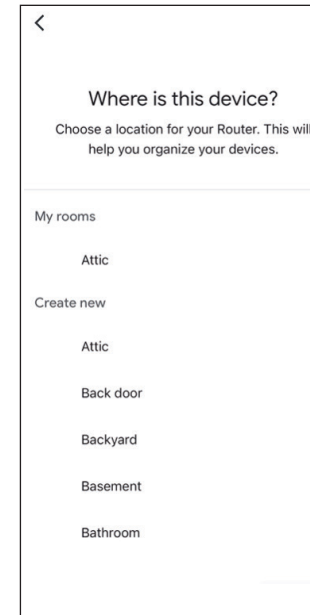

Step 10

Device is now successfully set up with the Google Home.

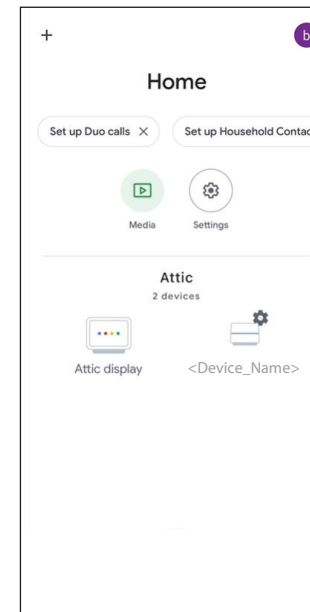

Amazon Alexa Setup

You will need the Amazon Alexa app, an Amazon account, and a D-Link account to use this feature.

Note: The screenshots may be different depending on your mobile device's OS version. However, the process is the same.

Step 1


Launch the **Amazon Alexa** app.



Amazon Alexa


Step 2

Tap **Browse Skills**.

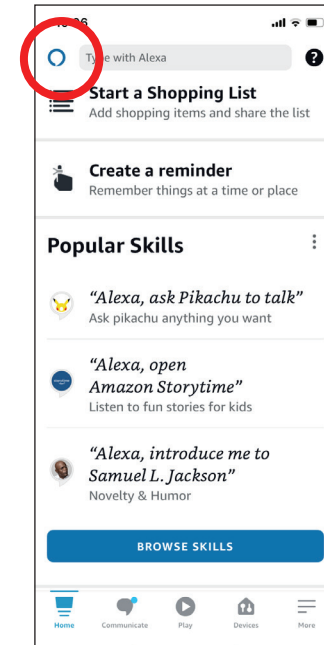


Step 3

Search EAGLE PRO AI for **Skills & Games**.

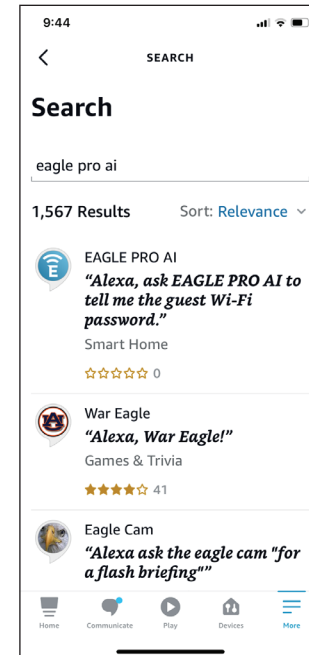


Step 4

The EAGLE PRO AI page.

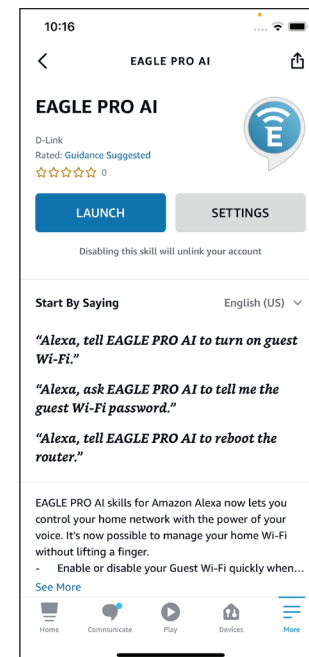


Step 5

Tap **LAUNCH** to link the skill.

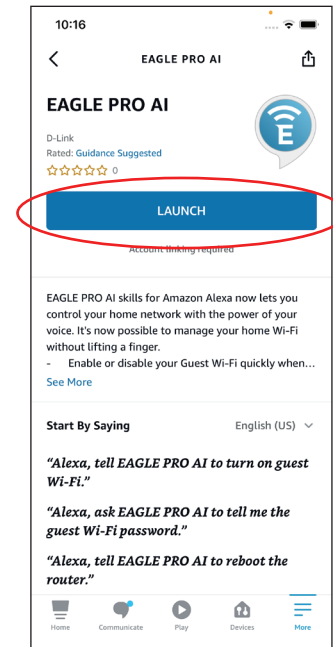

Step 6

Congratulations! **EAGLE PRO AI** has been successfully linked as a skill for your Amazon device. Refer to **Amazon Alexa Voice Commands** on the next page for tasks that you can ask your Amazon Alexa to perform.

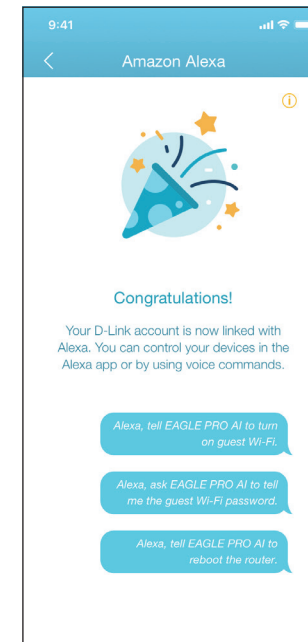

Amazon Alexa Voice Commands

With **EAGLE PRO AI** enabled as a skill for Alexa, you can ask Alexa to do any of the following tasks. Before commanding Alexa, say "Open EAGLE PRO AI" and respond to Alexa's offering by saying "Help."

| Task | Command |
|--|--|
| Enable the guest Wi-Fi | "Enable my guest Wi-Fi." |
| Disable the guest Wi-Fi | "Disable my guest Wi-Fi." |
| Find out your Wi-Fi SSID | "What is my Wi-Fi SSID?" |
| Find out the guest Wi-Fi name and password | "What are my guest Wi-Fi credentials?" |
| Reboot the router | "Reboot my router." |
| Upgrade the router | "Upgrade my router." |
| Obtain weekly report messages | "Read messages." |
| Note: Network can be substituted for Wi-Fi. | |

If using an Alexa speaker, start your command with one of the following:

1. "Alex, ask EAGLE PRO AI to." For example, command Alexa by saying, "Alex, ask EAGLE PRO AI to enable my guest Wi-Fi."
2. "Alex, talk to EAGLE PRO AI" and wait for Alexa to respond. Then say your command.


The Google Assistant Setup

You will need the Google Assistant app, a Google account, and a D-Link Cloud Service account to use this feature.

Note: The screenshots may be different depending on your mobile device's OS version. However, the process is the same.


Step 1

We will set up the pin code first for controls such as reboot and enable or disable guest Wi-Fi. Tap **Voice Control** from the **Home** screen of the EAGLE PRO AI app.

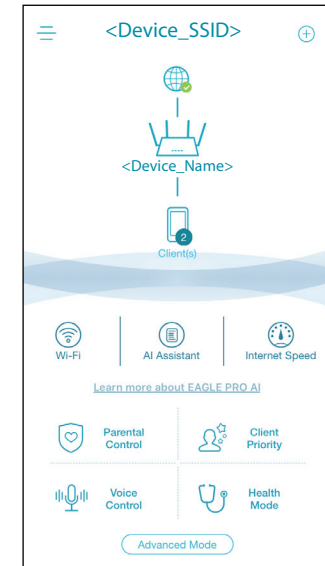

Step 2

Tap **Edit** to customize the pin code or use the randomly generated number.

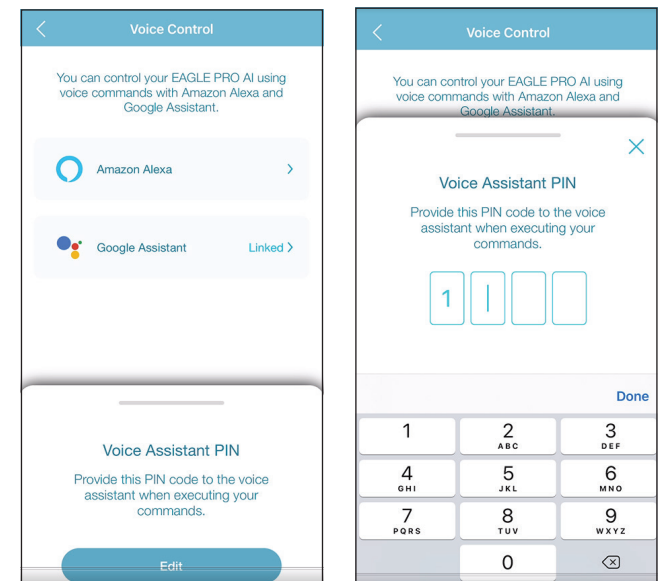


Step 3

Launch the **Google Assistant** app.



Step 4

Say or type in your command and provide the pin code as required. Refer to **Google Assistant Voice Commands** on the next page for tasks that you can ask your Google Assistant to perform.

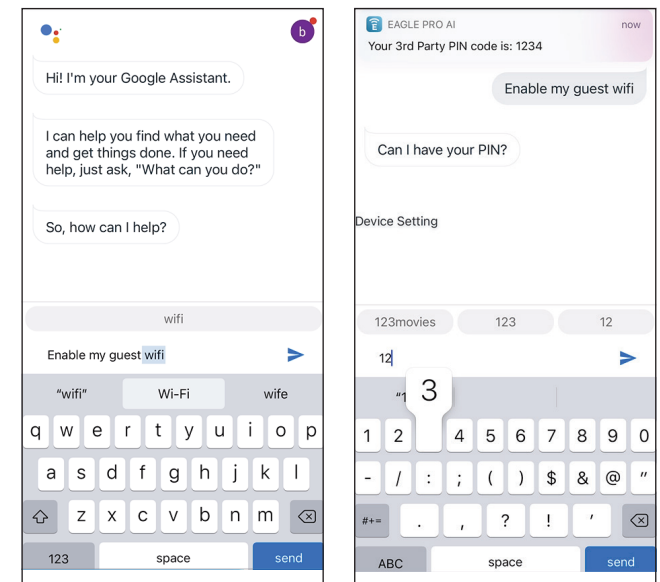

Google Assistant Voice Commands

With **EAGLE PRO AI** linked with the Google Assistant, you can ask your Google Assistant to do any of these tasks:

| Task | Command |
|---|---|
| Check guest Wi-Fi status | "Is my guest Wi-Fi enabled?" |
| Check Wi-Fi status | "Is my Wi-Fi enabled?" |
| Check guest Wi-Fi SSID | "What is my guest Wi-Fi SSID?" |
| Check Wi-Fi SSID | "What is my Wi-Fi SSID?" |
| Enable the guest Wi-Fi | "Enable my guest Wi-Fi." |
| Disable the guest Wi-Fi | "Disable my guest Wi-Fi." |
| Find out the guest Wi-Fi password | "What is my guest Wi-Fi password?" ¹ |
| Reboot the router | "Reboot my router." |
| Update the router | "Software update my router." |
| Notes: 1. Only supported on Nest Hub with screen display. 2. Network can be substituted for Wi-Fi. | |


If using a Google Home speaker, start your command by saying "Hey Google."

Connect a Wireless Client to your Router

WPS Button

The easiest and most secure way to connect your wireless devices to the router is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blue-ray DVD players, wireless printers and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the router. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow these steps below:

Step 1 - Press the WPS button on the router for about 1 second. The wireless LED will start to blink slowly.

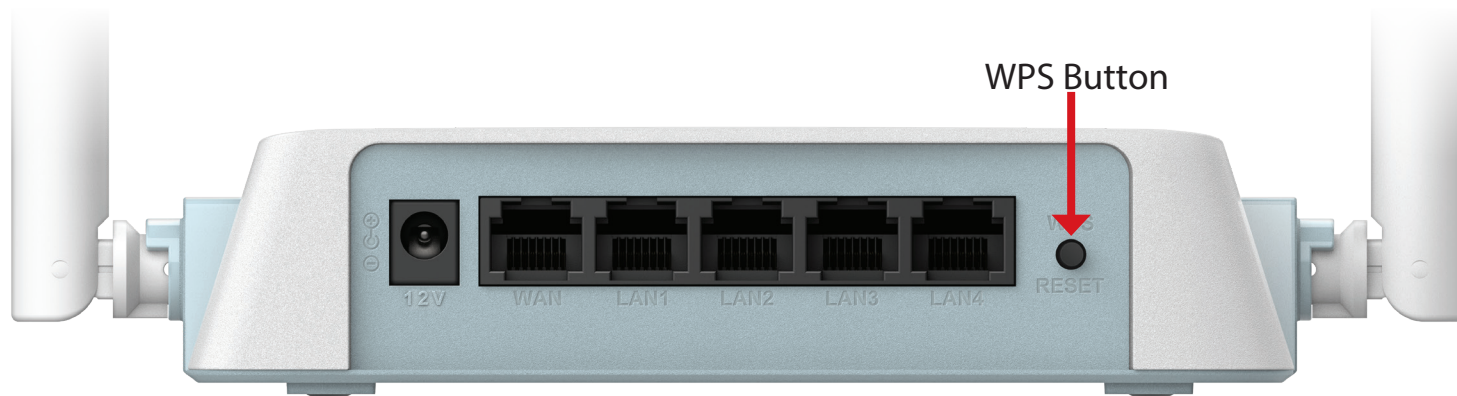




Step 2 - Within 2 minutes, press the WPS button on your wireless device (or launch the software utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the LED stops blinking, you will be connected.

Windows® 10

WPA/WPA2/WPA3

Note: To enjoy the benefits offered by Wi-Fi 6 and WPA3, please make sure that your operating system and wireless network adapter support Wi-Fi 6.

To join an existing network, locate the wireless network icon  in the taskbar, next to the time display and click on it. Depending on your current connection state, you may see  or  instead.

Clicking on this icon will display a list of wireless networks which are within range of your computer. Select the desired network by clicking on the SSID.




To connect to the SSID, click **Connect**.

To automatically connect with the router when your device next detects the SSID, check the **Connect Automatically** check box.

You will then be prompted to enter the Wi-Fi password (network security key) for the wireless network. Enter the password into the box and click **Next** to connect to the network. Your computer will now automatically connect to this wireless network when it is detected.




Wireless Icon

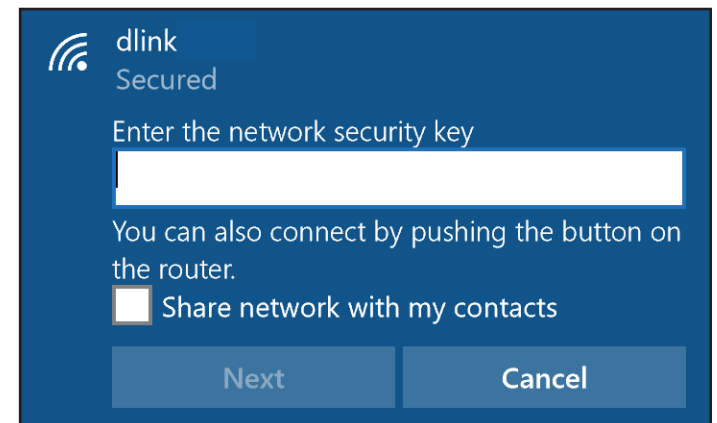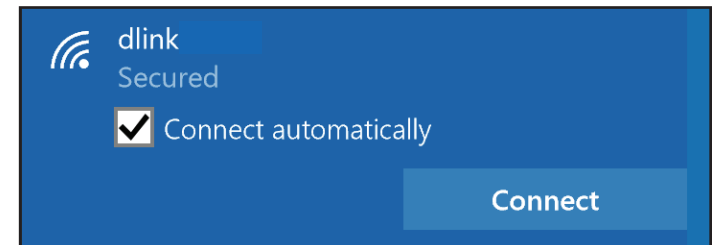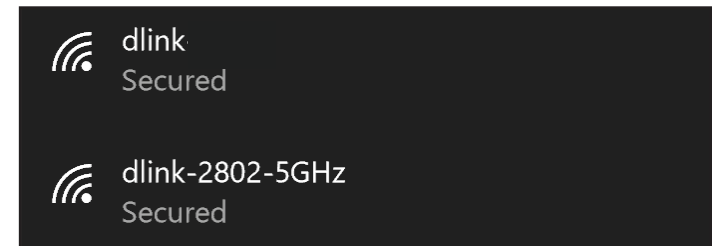


Windows® 8 - WP WPA/WPA2

 To join an existing network, locate the wireless network icon in the taskbar, next to the time display.




↑
Wireless Icon

Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the extender's network by clicking on the network name.

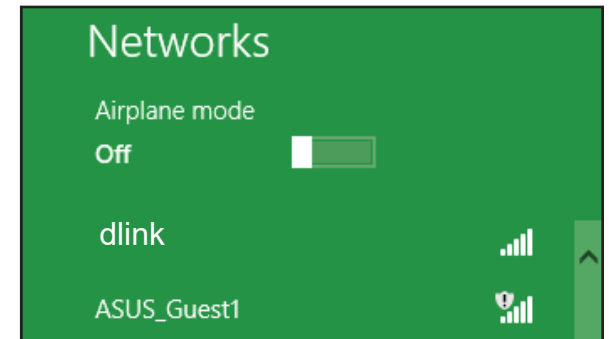


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

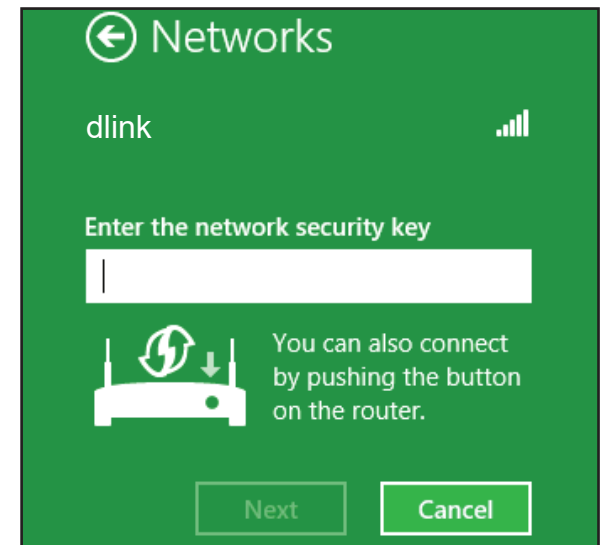

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

When you have established a successful connection with a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

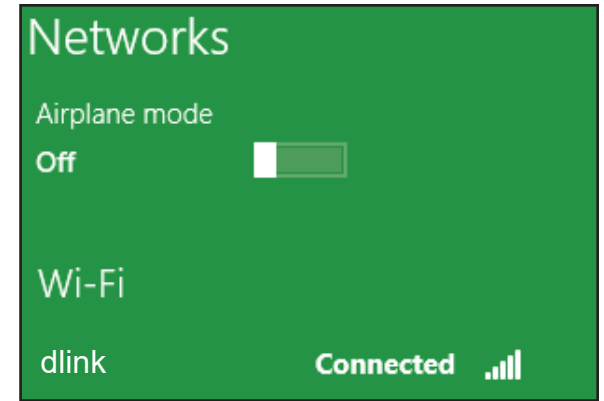

Windows® 7

WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

Click on the wireless icon in your system tray (lower-right corner).




The utility will display any available wireless networks in your area.

Highlight the wireless connection with Wi-Fi name (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page **117** for more information.




The following window appears while your computer tries to connect to the router.

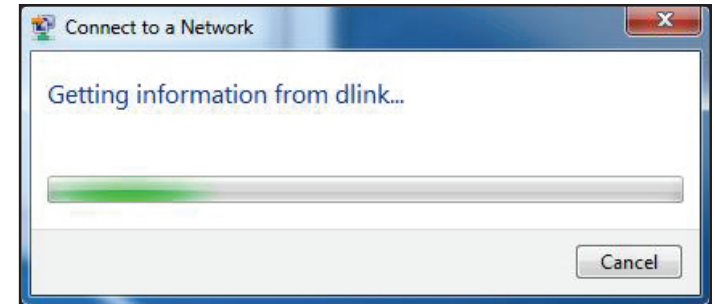

Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **OK**. You can also connect by pushing the WPS button on the router.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one on the wireless router.

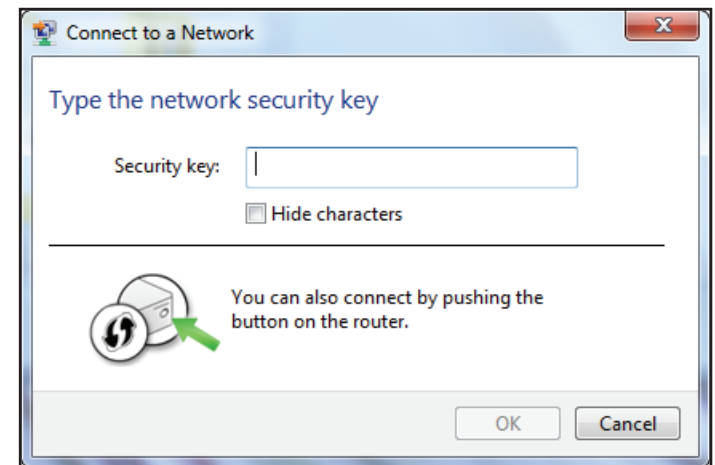

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the router. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (**192.168.0.1** for example), you are not connecting to a website, nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Internet Explorer® 11 or higher
 - Mozilla Firefox 28 or higher
 - Google™ Chrome 28 or higher
 - Apple Safari 6 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable, or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate and Norton Personal Firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for the web configuration.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. This process will change all your settings back to the factory defaults.

To reset the router, locate the Reset/WPS button on the rear panel of the unit. With the router powered on, press this button until all three LEDs (Power, Internet and Wireless) turn off. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is **192.168.0.1**. When logging in, enter the default device password printed on the device label.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business, or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to access the data you want, when, and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

The N300 Smart Router supports 802.11n standard. Starting from 802.11n (also referred to as Wi-Fi 4), multiple-input multiple-output (MIMO) has been adopted to increase data transfer rate. Different combinations of transmit and receive antennas that support multiple data streams are utilized to achieve different throughput.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A wireless router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly so you have the freedom to connect computers anywhere in your home or office network.

How does wireless work?

Wireless works similarly to how cordless phones work, through radio signals that transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks: Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, university and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away. Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power. This makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home Uses/Benefits

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office Uses/Benefits

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere, not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link USB adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: airports, hotels, coffee shops, libraries, restaurants, and convention centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or access point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Increase Robustness in Security

Don't let your next-door neighbors or intruders connect to your wireless network. Encrypt your wireless network with the latest WPA3 security protocol. Refer to the product manual for detail information on how to set it up.

Networking Basics

Check your IP address


After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** and type *cmd* in the **Search** box.

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the IP address is 0.0.0.0 or empty, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

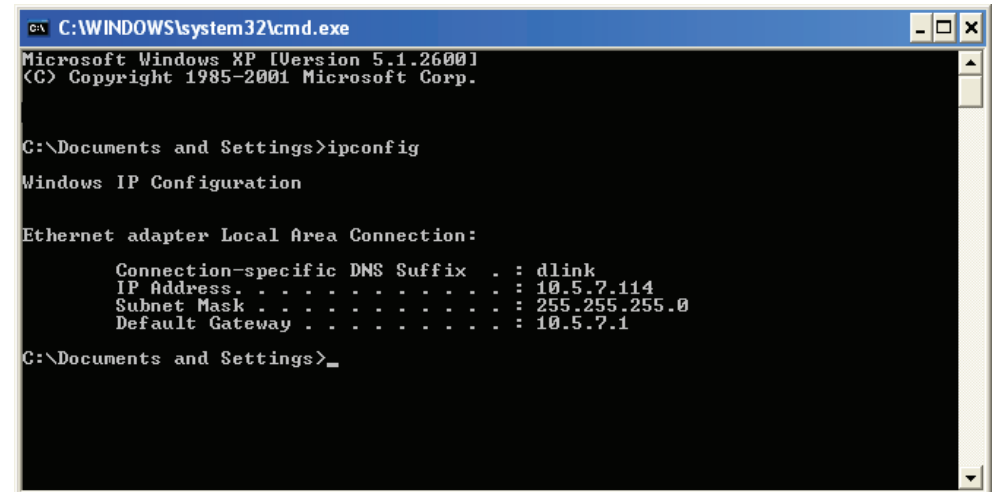

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

Statically Assign an IP Address

1. If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- Windows® 10** Start > Settings > Network & Internet.
Windows® 7 /8 Start > Control Panel > Network and Internet > Network and Sharing Center
Windows® XP Start > Control Panel > Network Connections

2. Select **Wi-Fi > Manage known networks**. For Windows 7/8/XP, click **Change adapter settings**. Choose the network you want to modify, right-click on it, then select **Properties**.

3. Under **IP assignment**, select **Edit**. For Windows 7/8/XP, select **Internet Protocol Version 4 (TCP/IPv4) Properties** or **Internet Protocol Version 6 Properties (TCP/IPv6)**. Then select **Use the Following IP Address**.

4. Under **Edit IP settings**, select **Manual**. If IPv4 is selected, type the IP address settings in **IP address**, **Subnet prefix length** (subnet mask), and **Gateway** fields. If IPv6 is selected, type the IP address settings in **IP address**, **Subnet prefix length**, and **Gateway** fields.

Example: Enter x.x.x.x for IPv4 addressing scheme (where x is between 0 and 255) and xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx for IPv6 addressing scheme (where x is a hexadecimal digit).

Set Preferred DNS the same as the LAN IP address of your router.
 The Alternate DNS is only optional or you may enter a DNS server from your ISP.

5. When you're done, click **Save**.

The screenshot shows the 'Edit IP settings' window with the following configuration:

- Mode: Manual
- IPv4: On
- IP address: 10.1.2.222
- Subnet prefix length: 24
- Gateway: 10.1.2.1
- Preferred DNS: (empty)
- Alternate DNS: (empty)

Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The router offers the following types of security:

- WPA3 (Wi-Fi Protected Access 3)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)
- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)

What is WPA?

WPA (Wi-Fi Protected Access), is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK/WPA3-SAE uses a passphrase or key to authenticate your wireless connection. The key is an alphanumeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless router or access point. Further, The Simultaneous Authentication of Equals (SAE) of WPA3 enhances the protection against dictionary attacks.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

WPA3 has the strongest encryption among these with the increased cryptographic capability and the requirements of the Protected Management Frames (PMFs) to protect from snooping attack.

Technical Specifications

Device Interfaces

- Wireless Interface (2.4 GHz): IEEE 802.11n/g/b
- One 10/100 Mbps WAN port
- Four 10/100 Mbps LAN ports

Standards

- IEEE 802.11n/g/b^{1,2}
- IEEE 802.11k/v
- IEEE 802.3u
- IEEE 802.3b

Antenna Types

- Two external antennas

Security

- WPA3/WPA2/WPA-Personal
- Wi-Fi Protected Setup (WPS)

WAN Connection Type

- Static IP
- Dynamic IP
- PPPoE
- PPTP
- L2TP
- DS-Lite

Power

- Input: 100 to 240 V AC, 50 / 60 Hz
- Output: 12 V, 1 A

Temperature

- Operating: 0 to 40 °C (32 to 104 °F)
- Storage: -20 to 65 °C (-4 to 149 °F)

Humidity

- Operating: 10% to 90% maximum, non-condensing
- Storage: 5% to 95% maximum, non-condensing

Certifications

- FCC
- CE

Dimensions

- L x W x H: 158 x 131.35 x 35.75 mm (L*W*H)

Weight

- 150 g

The marking information is located at the bottom of the apparatus.

¹ Maximum wireless signal rate derived from IEEE Standard 802.11b, 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors - including volume of network traffic, building materials and construction, and network overhead - lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.


² Frequency Range varies depending on country's regulation.

Wall Mounting

To mount the unit directly onto a wall, use 2 screws (not included) with the dimensions shown below. Install the screws 85 mm (3.35 in) apart and slide the mounting holes into the base of the router over them.



The screw head should project out from the wall at 7 mm (0.28 in) as shown below.

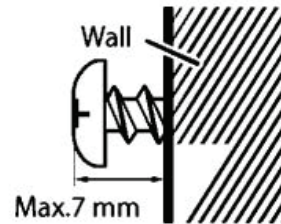

Regulatory Statements

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Non-modifications Statement:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Note

The country code selection is for non-USA models only and is not available to all USA models. Per FCC regulations, all WiFi product marketed in the USA must be fixed to USA operational channels only.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Innovation, Science and Economic Development Canada (ISED) Statement:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Innovation, Science and Economic Development Canada (ISED) Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.



| | Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s) | Max. Output Power (EIRP) Max. Output Power Consommation d'énergie max. Potencia máxima de Salida Potenza max. Output Max. Output Power |
|-------|---|---|
| 2.4 G | 2.4 – 2.4835 GHz | 100 mW |

European Community Declaration of Conformity:

| | |
|--------------------|---|
| Česky [Czech] | Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com . |
| Dansk [Danish] | D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com . |
| Deutsch [German] | Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung. |
| Eesti [Estonian] | Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com . |
| English | Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com |
| Español [Spanish] | Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com . |
| Ελληνική [Greek] | Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com . |
| Français [French] | Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le icroprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com . |
| Italiano [Italian] | Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com . |

| | |
|------------------------|---|
| Latviski [Latvian] | Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com . |
| Lietuvių [Lithuanian] | Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com . |
| Nederlands [Dutch] | Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com . |
| Malti [Maltese] | Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tniżżel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com . |
| Magyar [Hungarian] | Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen. |
| Polski [Polish] | D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com . |
| Português [Portuguese] | Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware |
| Slovensko[Slovenian] | Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com . |
| Slovensky [Slovak] | Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com . |
| Suomi [Finnish] | D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com . |
| Svenska[Swedish] | D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com . |

| | |
|----------------------|---|
| Íslenska [Icelandic] | Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com . |
| Norsk [Norwegian] | Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com . |

Warning Statement:

The power outlet should be near the device and easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is restricted to indoor use when operated in the European Community using channels in the 2.4 – 2.4835 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 2,4-2,4835 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 2,4 à 2,4835 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 2,4-2,4835 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 2,4 a 2,4835 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEbruik IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 2.4-2.4835 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSINFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing and Recycling Your Product



EN

ENGLISH



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO₂.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odneste jej prosím na sběrné místo určené místními úřady k tomuto účelu. Někteří sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR**HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK**NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK**DK**

Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

SUOMI**FI**

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.