
感谢您使用本产品!

THANK YOU FOR USING THIS PRODUCT!

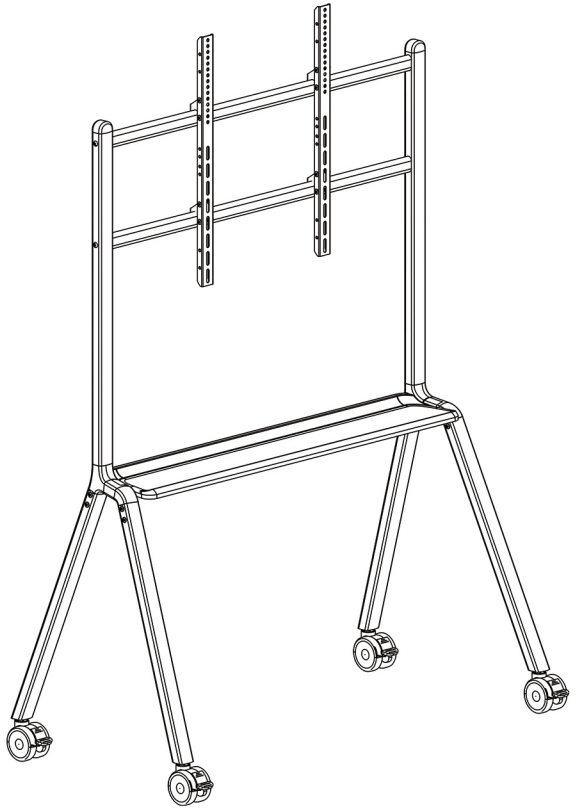

合 格 证
Certificate of Qualification

经检验该产品符合技术标准，准予出厂

After inspection, this product meets the technical standards and is approved for release from the factory.

产品类型：支架
Product Type

生产日期：
Manufacture Date

检 验 员：检03
Inspector

售后登记卡
After-sales Registration Card

需要售后维修时 以下由用户填写

To request after-sales service, please fill out the following information.

购买日期：
Purchase Date

联 系 人：
Contact Person

地　　址：
Address

电　　话：
Telephone

订单编号：
Order Number

故障现象：
Malfunction Symptoms


产品名称
PRODUCT NAME

电视架安装说明书
TV STAND INSTALLATION MANUAL

扫码观看安装视频

Scan the code to watch Installation video


型号 Model K35/K36

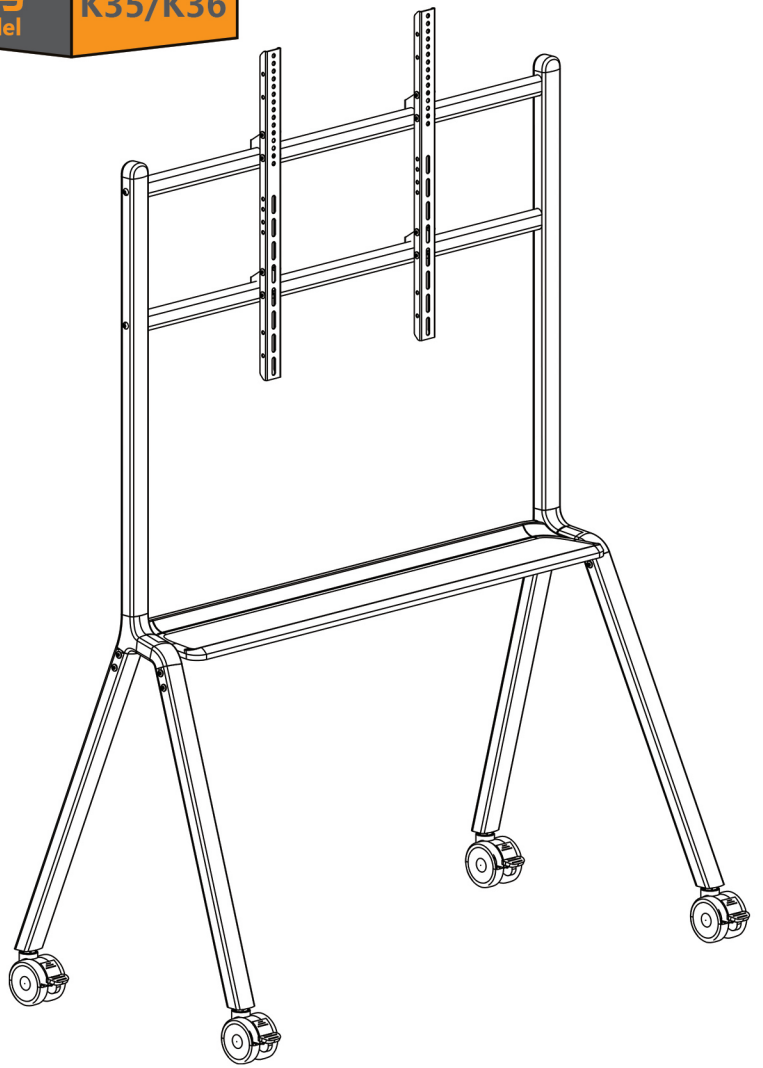

安装前请检查电视架兼容性
Please check the compatibility of the TV bracket before installation.

★如果您需要适用于更大或更小电视机尺寸时，可根据电视机背面VESA孔位及电视机重量选择适用。
★If you need it for larger or smaller TV sizes, you can choose the appropriate one according to the VESA hole position and the weight of the TV.

1 检查VESA安装孔位兼容性
Check VESA mounting hole position compatibility

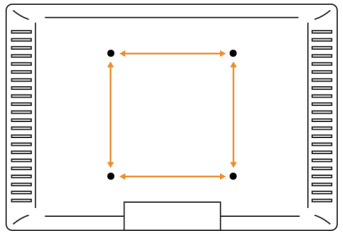

兼容的VESA安装孔位:
Compatible VESA Mounting Holes:

K35：200x200-800x600mm

K36：200x200-1000x600mm

如果此安装支架不兼容，请联系产品支持。
If this mounting bracket is incompatible, please contact product support.

2 适用电视屏幕/承重范围
Applicable TV Screen / Weight Capacity

型号	K35
适用电视屏幕	42"-86"
可承重范围	100KG/220LBS
托盘可承重范围	10KG/22LBS

型号	K36
适用电视屏幕	55"-100"
可承重范围	120KG/265LBS
托盘可承重范围	10KG/22LBS

3 检查最大负载
Check maximum load

警告
Warning

请勿超过最大负载，超载可能导致支架失效，造成人身伤害或财产损失。
Do not exceed the maximum load, overloading may cause the bracket to fail, resulting in personal injury or property damage.

如果您的电视机重量更大，此支架不兼容。
If your TV is heavier, this stand is not compatible.

4 说明/工具
Description/Tool




拧紧方向 Tightening direction
拧松方向 Loosen direction
手工 handmade
扳手 Wrench
六角扳手 Hex key wrench

4 重要提示安全信息
Important notice Safety information

警告！如果组装或安装不当，这可能导致人员重伤或财产损毁。请您在组装或安装前，先仔细阅读说明书及警告信息。
●如果您不理解说明或者遇到任何疑问或问题,请与具备资格的当地安装人员联系。
●如果产品或配件受损或缺失，请不要组装或安装。如果您需要备换零件或其他，请联络当地的经销商以获取帮助。
●除了产品本身设计的用途外，请不要将此产品用于其他领域。
●厂商在此声明，对于以下情况所造成的损毁或损伤不承担任何法律责任；对产品自行改造，或安装不当，或安装超过此产品所注明的承重范围,或使用不当而造成此产品磨损或毁坏。
●如果儿童或青少年因故爬上视听视频机组家具上；或因玩具、物品、遥控器等放于机组家具上，促使儿童或青少年爬上机组家具上，会造成机组家具脱落翻倒，以致儿童或青少年受到严重的损伤.。
●改换视听视频机组家具安装位置或地点，或从新安装到不能支持或承受视听视频机组家具重量，导致机组家具脱落翻倒造成人身的严重损伤。
▶图示与实物如若有不符现象，请以实物为准。

Warning! Improper assembly or installation may result in serious injury or property damage. Please read the instructions and warning information carefully before assembly or installation.
●If you do not understand the instructions or have any questions or issues, please contact a qualified local installer.
●Do not assemble or install the product if any parts or accessories are damaged or missing. If you need replacement parts or other assistance, please contact your local dealer for help.
●Do not use this product for purposes other than those for which it is designed.
●The manufacturer hereby declares that it assumes no legal responsibility for damage or injury caused by the following situations: modifying the product on your own; improper installation; exceeding the weight limits specified for this product; or improper use causing wear or damage to the product.
●If children or adolescents climb onto the audio-visual furniture; or if toys, objects, or remote controls are placed on the furniture, prompting children or adolescents to climb onto it, this could cause the furniture to fall over, resulting in serious injury.
●Changing the installation location or position of the audio-visual furniture, or reinstalling it in a place where it cannot support or bear its weight, may cause the furniture to fall and result in serious personal injury.
▶If there are discrepancies between the illustrations and the actual product, the actual product shall prevail.

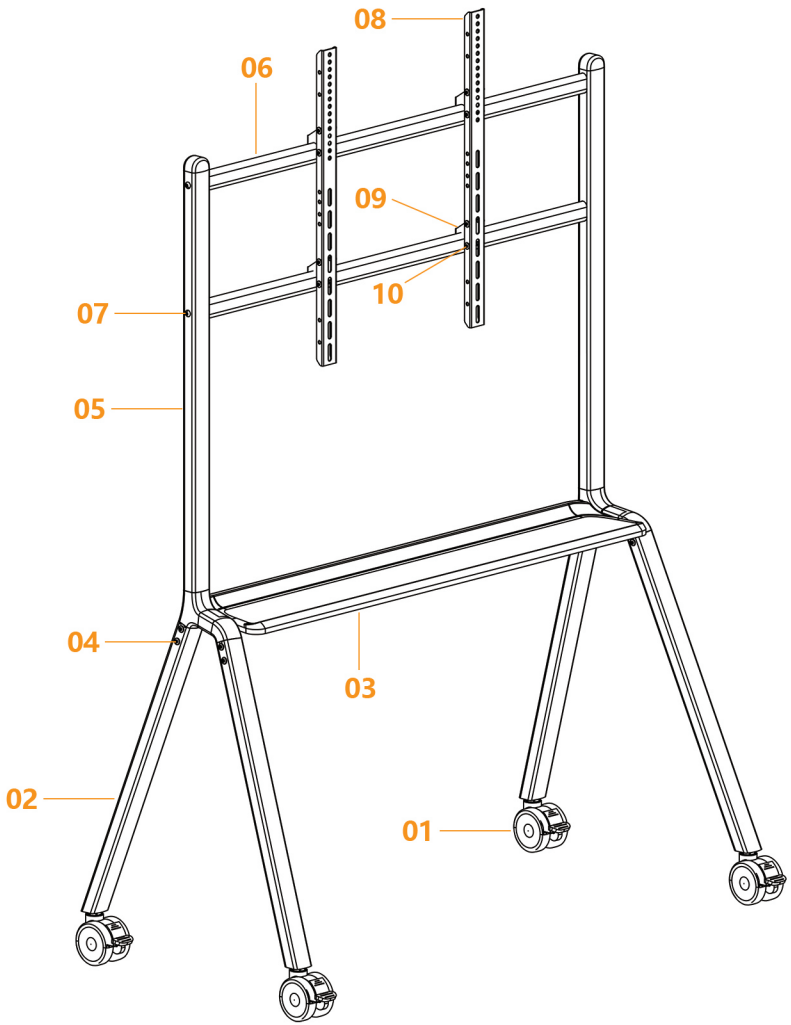

01 脚轮 castor

02 下立柱腿 Lower column leg
(前左/前右/后左/后右)(Front Left / Front Right / Rear Left / Rear Right)

03 托盘组件 Tray assembly

04 M6X12 TV Bolt

05 上立柱 Install the upright post

06 横梁 Beam

07 M8X20 TV Bolt


08 挂条 Hanging strip

09 挂钩 Hook

10 M6X12 TV Bolt


步骤一所需要的零件
Supplied Parts and Hardware for Step 1

注：本包装中包含的零件并非全部都会使用。
Note：Not all hardware included in this package will be used

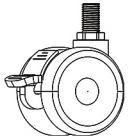
脚轮
castor
01 X 4


下立柱腿
Lower column leg
02 X 4



托盘组件
Tray assembly
03 X 1


M6X12
TV Bolt
04 X 12

步骤二所需要的零件
Supplied Parts and Hardware for Step 2



上立柱
Install the upright post
05 X 2



横梁
Beam
06 X 2


M8X20
TV Bolt
07 X 8

步骤三所需要的零件
Supplied Parts and Hardware for Step 3


挂条
Hanging strip
08 X 2

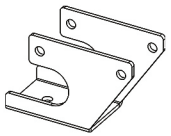
挂钩
Hook
09 X 4


M6X12
TV Bolt
10 X 16


安装 installation

步骤一 将脚轮、下立柱腿、托盘组件进行组装

Step one Assemble the casters, lower uprights, and pallet components

1-1 脚轮和下立柱腿组装

Caster and lower upright leg assembly

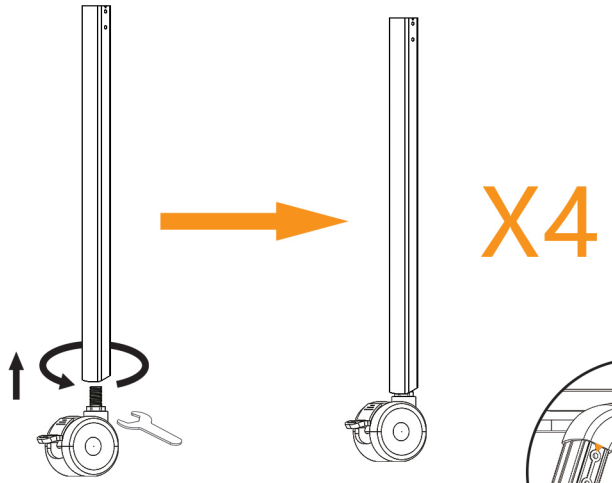

1-2 下立柱腿与托盘组件整体组装

Assemble the upright leg and tray assembly as a whole



如图所示：
按照三角、半圆图形安装，然后用六角板手按顺时针方向把螺丝拧紧。


As shown in the picture:
Install according to the triangle and semicircle patterns, then use a hex wrench to tighten the screws clockwise.

步骤二 将上立柱、横梁进行组装

Step two Assemble the vertical posts and horizontal beams

1-3 两根横梁与上立柱组装

Assemble the two horizontal beams with the upper vertical column

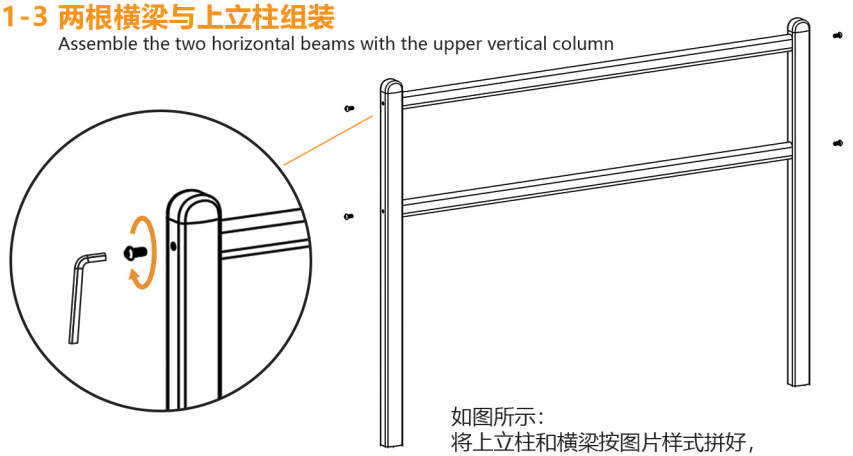


如图所示：
将上立柱和横梁按图片样式拼好，并用六角板手按顺时针方向把螺丝拧紧。

As shown in the picture:
Assemble the upright posts and horizontal beams according to the picture, and use a hex wrench to tighten the screws clockwise.

1-4 将上下两个部分进行组装

Assemble the top and bottom parts

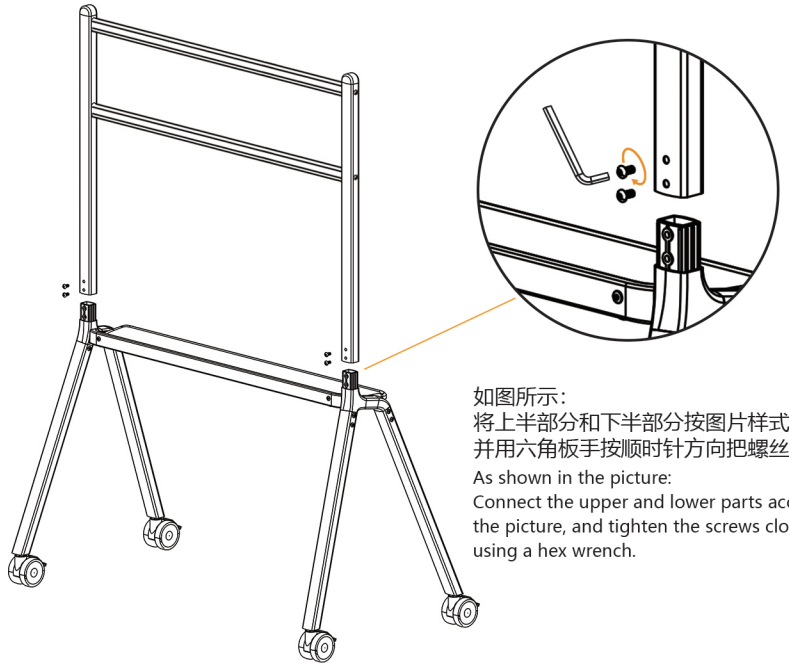

如图所示：
将上半部分和下半部分按图片样式连接好，并用六角板手按顺时针方向把螺丝拧紧。


As shown in the picture:
Connect the upper and lower parts according to the picture, and tighten the screws clockwise using a hex wrench.

步骤三 将挂条、挂钩进行组装

Step three Assemble the hanging strips and hooks

1-5 挂条和挂钩组装

Assembly of strips and hooks

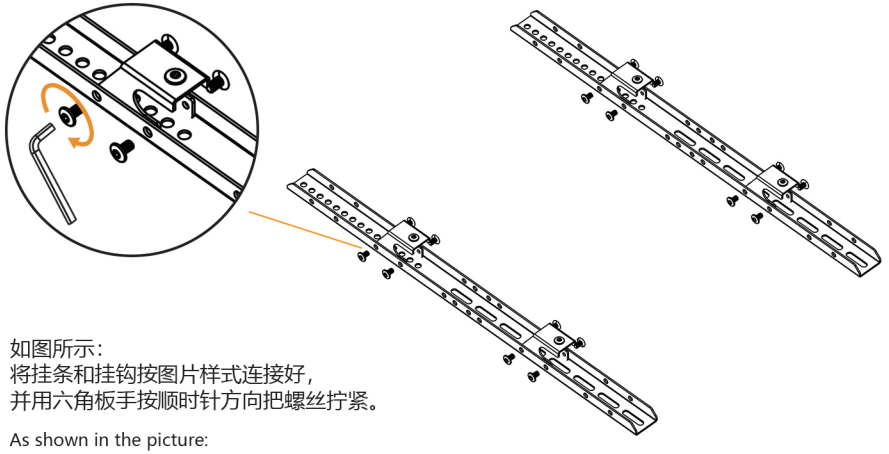


如图所示：
将挂条和挂钩按图片样式连接好，
并用六角板手按顺时针方向把螺丝拧紧。

As shown in the picture:
Connect the hanging strip and hook according to the picture,
and use a hex wrench to tighten the screws clockwise.

1-6 将电视和挂条进行组装

Assemble the TV and the mounting bracket

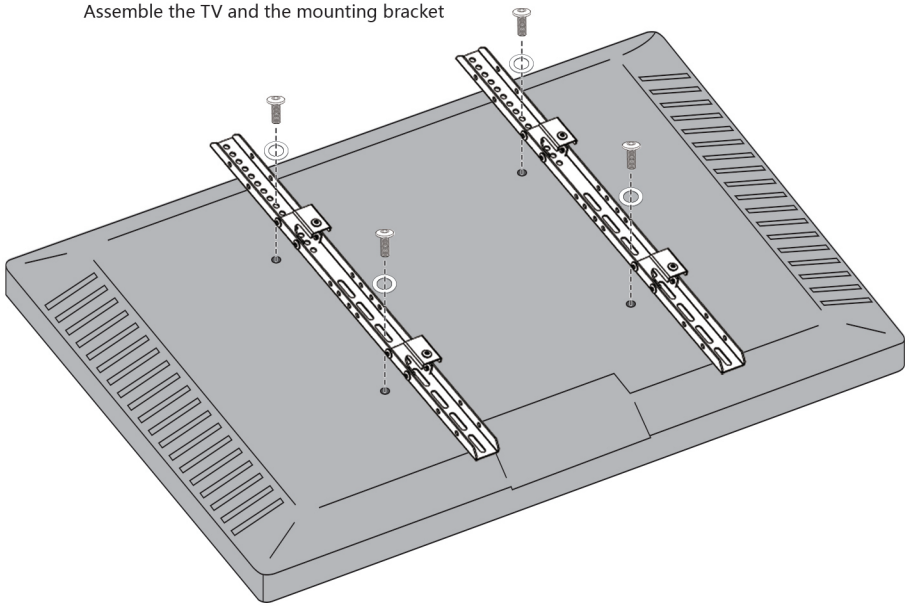


步骤四 将挂钩、架体进行组装

Step Four Assemble the hooks and frame

1-7 挂钩与架体组装（1）

Hook and Frame Assembly (1)

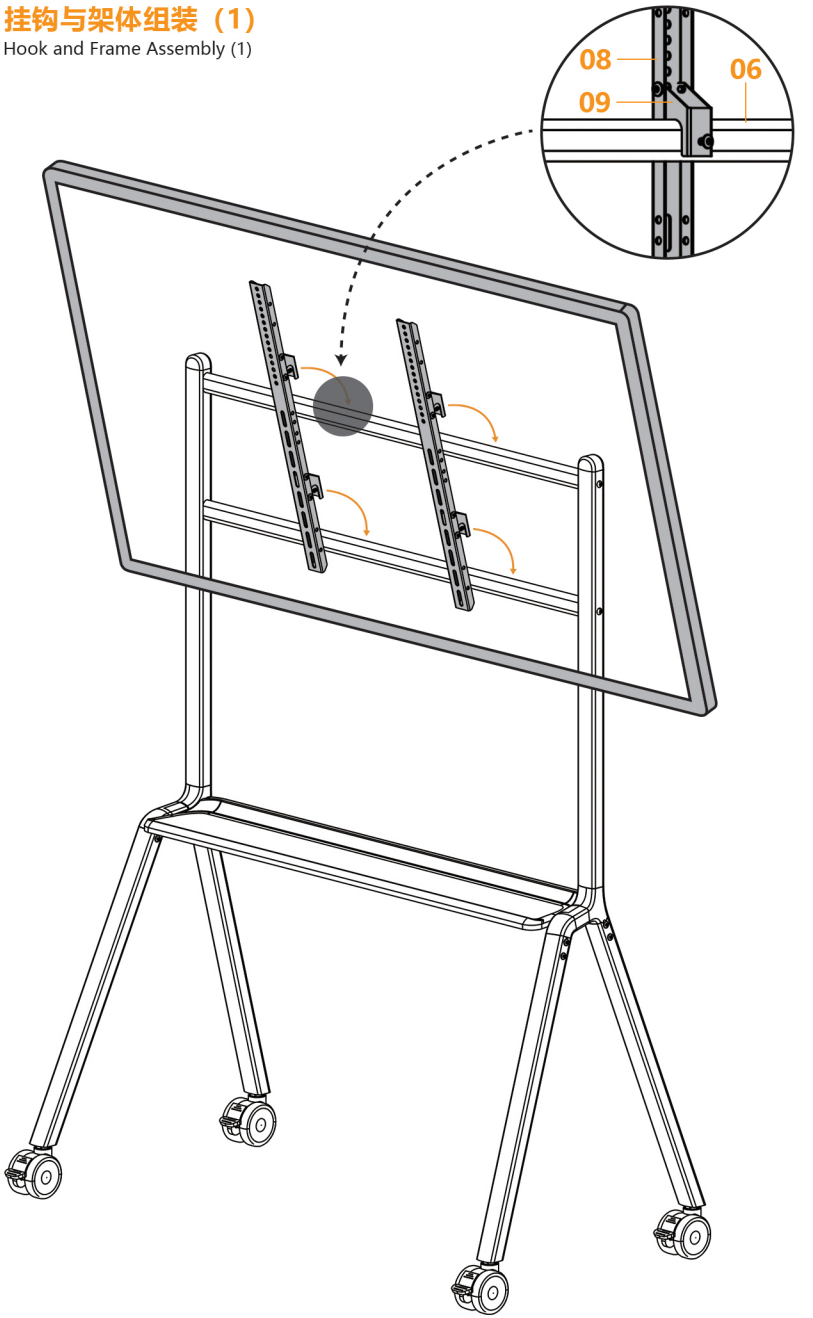


1-8 挂钩与架体组装（2）

Hook and Frame Assembly (2)

如图所示：
将挂钩挂在横梁上后，按顺时针方向把安全螺丝拧紧。

As shown in the figure:
After hanging the hook on the beam, tighten the safety screw clockwise.

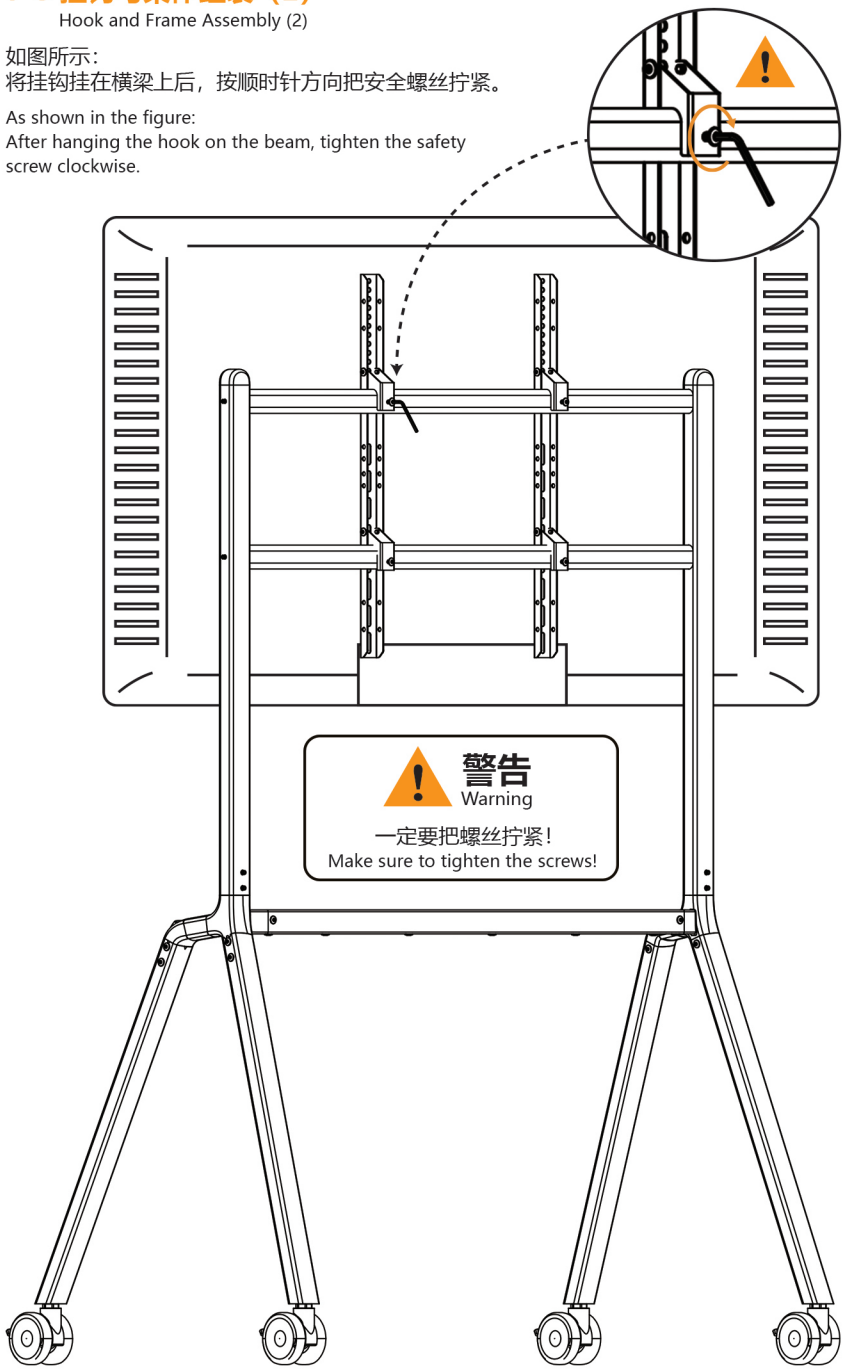

问题 如何升降电视高度？


question How to adjust the height of the TV?

1.从电视架上取下电视；
2.拆下挂条，并从说明A或B重新安装（A表示抬起电视，B表示降低电视）。
3.将电视挂在电视架上并固定。

1. Remove the TV from the TV stand;
2. Take off the mounting strip and reinstall it according to Instruction A or B (A means lifting the TV, B means lowering the TV).
3. Hang the TV on the TV stand and secure it.

A 要将电视抬高几英寸，请使用挂条上部孔位重新安装电视支架

To raise the TV by a few inches, use the upper holes on the mounting bracket to reinstall the TV mount.

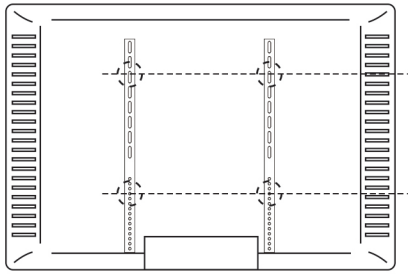

B 要将电视降低几英寸，请使用挂条下部孔位重新安装电视支架

To lower the TV by a few inches, reinstall the TV bracket using the lower holes of the mounting strip.

